



A185C

3" Party Plasma Ball

(USB/Battery)



Instruction Manual

Thank you for buying this Cheetah Leisure 3" Party Plasma Ball (USB/Battery powered). We hope it brings you much enjoyment.

Please carefully read the following instructions and warnings and retain this manual for future reference.

Firstly, carefully inspect the product and its power supply for signs of damage. If any are detected, please do not use and refer back to your supplier.

CAUTIONS AND WARNINGS

- This item is not a toy. Children must not play with the item.
- Children over 12 may use this product but only with adult supervision.
- Periodically check this product for damage. If any is detected, then stop using the product and disconnect it from its power supply.
- Do not use this product in damp or wet locations.
- Do not use this product where there are flammable liquids or gasses such as petrol etc.
- For indoor use only.
- Do not leave this product switched on while not attended.
- Disconnect the unit when not in use.
- Only use this product on a firm, flat, stable surface.
- Do not allow the lead to get trapped or become a trip hazard.
- Not for use with power outputs from computers or similar devices.
- Only use with an approved 5V USB power supply or via the battery operation.
- Take the batteries out when not in use or when they are exhausted.
- Do not allow metal objects to touch the glass vessel



- Do not attempt to remove the glass vessel from its base. **Risk of Electric shock**

INSTALLATION AND USE

USB

- ***Make sure any batteries are removed from the product before using the USB option.***
- Connect the USB power lead to a suitable approved power supply.
- Connect the other end of the lead to the DC input on the base of the unit.
- Using the switch on the base of the product select from off/on

BATTERY

- Using a cross bladed screw driver take the battery cover off the bottom of the product and insert 4 x AAA batteries (not supplied).
- Replace the cover and switch on.

INFORMATION

It is safe to touch the glass and by doing so you will change the effect of the product. In normal operation the glass will warm up and a slight tingling sensation will be felt in the fingertips. For optimum effect use the product in a slightly darkened room.

TECHNICAL SPECIFICATION

Plug in Transformer

Power input: 5V USB Power supply (not supplied) or 4 x AA batteries (Not supplied)

Product

Dome: 3"

Modes: On and Off

DISPOSAL AND RECYCLING

You must not dispose of this product with domestic household waste.

Most local authorities have specific collection system for electronic items and disposal is free of charge to the end-user.

MAINTENANCE

- Store in a dry clean space when not in use.
- Disconnect from the mains supply in when not in use
- Clean only with a slight damp cloth

Electrovision Ltd., Lancots Lane, Sutton, St. Helens, Merseyside WA9 3EX
website: www.electrovision.co.uk

