


Appendix B - Back Panel

Mojo Series Product Back Panel

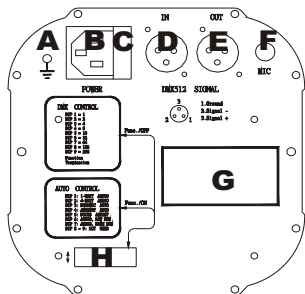

- A - Earth (Ground)
- B - IEC power connector
- C - Fuse holder
- D - DMX signal Canon connector (IN)
- E - DMX signal Canon connector (OUT)
- F - Microphone
- G - Product specification label
- H - DMX and function dip switches

Note: For simplicity, the back panel of one Mojo product is shown. Other product back panels may differ slightly.

Figure 6

Function Dip Switch Chart

| Dip | OFF Mode | ON Mode |
|-----|---------------------------|--------------------------------|
| #1 | Single unit show mode | Single unit audio show mode |
| #2 | Single unit audio mode | 4-unit audio show mode, master |
| #3 | Single unit audio mode | Self-test mode |
| #4 | Single unit audio mode | Single, slow show mode |
| #5 | Single unit audio mode | Focus assistance |
| #6 | 1- unit audio, mixed show | Audio low BPM show mode |
| #7 | 1-unit audio, mixed show | Audio high BPM show mode |
| #8 | Single unit audio mode | No program |
| #9 | Single unit audio mode | No program |

Applies only when audio mode (function dip switch "on") is activated. Otherwise, these channels are DMX address setting dip switches.

Copyright 2001 Geni Electronics Co., Ltd.
Product specifications may be subject to change.
For more information, please visit our web site:
<http://www.geni.com.tw>. Thank you!

Mojo Scan™ Product User Guide

MJC-2,3 MJC-2X,3X MJC-2Y,3Y



**Mojo Scan II - One color wheel with 15 colors.
A gobo wheel with 13 gobos.
Mojo Scan III - One gobo wheel with
3 static gobos and 3 rotary gobos.**



THANK YOU!

Thank you for buying a Geni product. For best results, please carefully read and follow the directions in this product user manual.

Congratulations!

You have a great, innovative product from Geni Electronics Co., Ltd. Geni Mojo Scan scanner bring excitement to any venue. Whether you want simple plug-&-play action or a sophisticated DMX show, this product series provides the effect you need.

You can rely on Geni Electronics Co., Ltd., for more excellent lighting products. We design and manufacture strobes, effects, and mirrored projectors. And new products are being launched regularly. For information, please visit our web site at <http://www.geni.com.tw>. We work hard to keep you, our customer, satisfied.

You can get some of the best quality, best priced products on the market from Geni. So next time, turn to Geni for more great lighting equipment. Always get the best -- with Geni.

Thank you!

Geni Electronics Co., Ltd.

Main Office/Factory Address:
Geni Electronics Co., Ltd.
No. 22, Chung Cheng 5th Street
Yung Kang Tainan Hsien, Taiwan

Tel: 886-6-253-8513
Fax: 886-6-253-8685

Showroom Address:
Taipei World Trade Center, Room 3A-04
No. 5, Section 5, Hsin Yi Road
Taipei, Taiwan

Tel: 886-2-2722-2910
Fax: 886-2-2722-2918



Get the Best - Get Geni
Geni Sets the Standard

Appendix A - DMX Dip Switch Value Guide

DMX products must have their own "address" to receive DMX signals. Addresses on Mojo series products are set by flipping appropriate DMX dip switches.

To do this, you need to know that DMX dip switches have the following values: #1=1; #2=2; #3=4; #4=8; #5=16; #6=32; #7=64; #8=128; #9=256. And you need to know that DMX address settings are the sum of the dip switch values.

For example, standard DMX addresses for four Mojo Scan II™, each of which has four channels as Follow:

| MJC-2 | Address Value | DMX Dip Switches "ON" |
|--------|---------------|-----------------------|
| Unit 1 | 1 | #1 |
| Unit 2 | 5 | #1 , #3 |
| Unit 3 | 9 | #1 , #4 |
| Unit 4 | 13 | #1 , #3, #4 |

Explanation: Since each unit has four channels, each address advances four values (See Address Value above).

Once address values are figured out, add DMX dip switch values to obtain the appropriate address (DMX Dip Switches "ON") for each unit. Flip appropriate DMX dip switches on each unit.

Product Specifications

| | |
|----------------------------|----------------------------|
| Model: MJC-2,MJC-2X | Model: MJC-2,MJC-2X |
| Voltage: 230V~50Hz (CE) | Voltage: 120V~60Hz |
| Power consumption: 300W | Power consumption: 300W |
| Fuse: T3.15A | Fuse: T3.15A |
| Dimensions: 475x220x160 mm | Dimensions: 475x220x160mm |
| Weight: 8.2 kg | Weight: 8.2 kg |
| Lamp: | Lamp: |
| MJC-2 24V/250W EHJ G6.35* | MJC-2 24V/250W EHJ G6.35* |
| MJC-2X 24V/250W ELC GX5.3* | MJC-2X 24V/250W ELC GX5.3* |

| | |
|----------------------------|----------------------------|
| Model: MJC-3,MJC-3X | Model: MJC-3,MJC-3X |
| Voltage: 230V~50Hz (CE) | Voltage: 120V~60Hz |
| Power consumption: 300W | Power consumption: 300W |
| Fuse: T3.15A | Fuse: T3.15A |
| Dimensions: 475x220x160 mm | Dimensions: 475x220x160mm |
| Weight: 8 kg | Weight: 8 kg |
| Lamp: | Lamp: |
| MJC-3 24V/250W EHJ G6.35* | MJC-3 24V/250W EHJ G6.35* |
| MJC-3X 24V/250W ELC GX5.3* | MJC-3X 24V/250W ELC GX5.3* |

| | |
|-------------------------------|-------------------------------|
| Model: MJC-2Y | Model: MJC-3Y |
| Voltage: 230V~50Hz (CE) | Voltage: 230V-50 (CE) |
| 120V~60Hz | 120V~60Hz |
| Power consumption: 250W(120V) | Power consumption: 250W(120V) |
| Power consumption: 200W(230V) | Power consumption: 200W(230V) |
| Fuse:T5A | Fuse: T5A |
| Dimensions: 475x220x160 mm | Dimensions: 475x220x160mm |
| Weight: (230V) 8.2 kg | Weight: (230V) 8.3 kg |
| (120V) 8.6 kg | (120V) 8.7 kg |
| Lamp: HTI 152W | Lamp: HTI 152W |

*: Versions for other lamps may be produced. Please check the specification label on your product.

Product specifications may be subject to change. Please visit www.geni.com.tw for details.

Mojo Scan™ Product Guide

This product user guide covers the scanners: MJC-2,3;MJC-2X,3X;MJC-2Y,3Y

| | |
|--|---------|
| Description..... | Page 1 |
| Warning..... | Page 1 |
| Getting Ready..... | Page 2 |
| Install the Lamp (MJC-2,3)..... | Page 2 |
| Lamp Installation (MJC-2,3)..... | Page 2 |
| (Figure 1)..... | Page 2 |
| Installing the Lamp (MJC-2X,3X)..... | Page 3 |
| Lamp Installation (MJC-2X,3X)..... | Page 3 |
| (Figure 2)..... | Page 3 |
| Installing the Lamp (MJC-2Y,3Y)..... | Page 3 |
| Lamp Installation (MJC-2Y,3Y)..... | Page 3 |
| (Figure 3)..... | Page 4 |
| Set Up and Operation..... | Page 4 |
| One-unit Audio | Page 4 |
| Four-unit Audio..... | Page 4 |
| Four-unit Audio Set Up (Figure 4)..... | Page 5 |
| DMX Control..... | Page 5 |
| DMX Set Up(Figure 5)..... | Page 6 |
| Product Operation Overview..... | Page 6 |
| DMX Channel Chart(Mojo Scan II)..... | Page 7 |
| DMX Channel Chart(Mojo Scan III)..... | Page 8 |
| Maintenance..... | Page 9 |
| Changing the Lamp..... | Page 9 |
| Replacing the Fuse..... | Page 9 |
| Troubleshooting..... | Page 10 |
| No Light, No Movement - All Products..... | Page 10 |
| No Response to DMX | Page 10 |
| No Response to Audio | Page 10 |
| Product Specifications..... | Page 11 |
| Appendix A - DMX Dip Switch Value Guide..... | Page 12 |
| Appendix B - Back Panel (Figure 6)..... | Page 13 |
| Function Dip Switch Chart..... | Page 13 |

Among Mojo Scan series, EHJ lamp fits MJC-2 and MJC-3; ELC lamp fits MJC-2X and MJC-3X; HTI lamp fits MJC-2Y and MJC-3Y

The 3 Mojo Scan types have all the same functions separately, differ in the lamp only. Please note: in this manual, all descriptions about MJC-2 and MJC-3 apply to MJC-2X, and MJC-3X;also apply to MJC-2Y and MJC-3Y.

Description

Mojo Scan™ - Small scanner with high output, great effect. Instant audio shows and DMX control.

Mojo Scan II™ -One color wheel with 15 colors. A gobo wheel with 13 gobos.

Mojo Scan III™ - One gobo wheel with 3 static gobos and 3 rotary gobos. The set up, control, and functions of various Mojo Scan™ may differ. Please refer to specific product headings in this manual.



Warning!

Like all electronic products, Mojo Scan™ scanner lights must be used with common safety precautions in mind.

Mojo Scan™ scanner lights contain no user-serviceable parts. Refer servicing to qualified technicians only.

Disconnect from electric mains power supply before removing covers or changing lamps. Keep case closed while operating. Do not insert objects into air vents.

Keep away from flames and flammable material. Keep away from liquids. Never operate in rain or in damp conditions.

If effect lights are dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.

Lamp and metal become hot during operation. Allow time to cool before handling. Do not touch lamp bulb glass with bare hands.

Read user manual instructions thoroughly before operating. Follow the instructions. Never remove warning or informative labels from the unit. This appliance must be earthed.

Troubleshooting

This troubleshooting guide is meant to help solve simple problems. If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps. If the effect does not operate properly, refer servicing to a technician.

No Light, No Movement - All Products

Response: Suspect three potential problem areas: the power supply, the lamp, the fuse.

1. Power supply. Check that the unit is plugged into an appropriate power supply.
2. The lamp. Replace the old lamp with a new one of appropriate Specifications. See directions above for replacing lamps.
3. The fuse. Replace the fuse. See directions above for replacing the fuse.

No Response to DMX

Response: Suspect the DMX dip switch setting, DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

1. Check the DMX dip switch setting. Make sure the DMX dip switch address setting is correct.
2. Check the DMX cable: Unplug the unit; change the DMX cable; resupply electrical power. Try your DMX control again.
3. Determine whether the controller or light effect is at fault. Does the controller operate other DMX products properly? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

No Response to Audio

1. Check the function setting of the first unit. Make sure that function dip switch #1 is on. (Function dip switch #1 on = audio control.)
2. Turn up the music volume.

Maintenance

Mojo Scan™ scanner require almost no maintenance. However, you should:

Keep the unit clean. Disconnect the mains power supply, then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Clean internal components about once a year with a light brush and vacuum cleaner. Do not use alcohol or solvents.

Keep connections clean. Disconnect electric power, then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

Changing the Lamp

If electrical power is supplied and the lamp does not light, it may be time to change the lamp. Follow directions below to do so.

1. Disconnect mains power supply. Loosen the two screws on the top of the lamp cover. Open the cover.
2. With one hand holding the lamp reflector, pull down the lamp lever (toward the base of the unit). (See figure 1.2) The lamp will be pushed out of the lamp base. Holding the lamp socket with one hand, pull the lamp out of the lamp socket with the other.
3. Pull up the lamp lever (away from the unit base, toward the lamp cover).
4. Follow directions for installing a new lamp, page 2.3.

Replacing a Fuse

Power surges or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, replace the fuse as follows:

- 1) Unplug the unit from electric power source.
- 2) Insert a flat-head screwdriver into a slot in the fuse cover (C in figure 5). Gently pry up the fuse cover.
- 3) Note two fuses: The replacement fuse is covered; The used fuse has both ends exposed. Remove the used fuse. If brown or unclear, it is burned out.
- 4) Push the replacement fuse out of its cover, then insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse cover. Products are packed with a replacement fuse. If your replacement fuse is missing, a new one can be purchased at an electric appliance store. Be sure to use a fuse of the same type and specification. See the product specification label for details.

Getting Ready

All GENI products are thoroughly tested at the factory and shipped in perfect condition. If damage has occurred during shipping or if components are missing, please contact your GENI dealer immediately.

Your package should include:

- (1) One Mojo Scan™ series lighting effect with bracket.
- (2) One IEC electric mains power cord with plug.
- (3) One product user manual.

The lamp may or may not be included, depending on your GENI dealer. In most cases, the lamp is not included.


Install the Lamp (MJC-2,MJC-3)

Mojo Scan™ use either the HLX 64655 24V/250W lamp by Osram or the EHJ lamp of identical specifications by Philips. Use only the appropriate lamp for your unit. Note that product versions that use other lamps may be offered in the future. Check your product specification label for information.

Lamp Installation (MJC-2,MJC-3)

- (1) Loosen the two screws on the top of the lamp cover. Open the case.
- (2) Read lamp instructions. Do not touch the lamp bulb glass. (See Figure 1.) Oil on hands shortens the lamp life. (If you touch the bulb glass, wipe off the Glass with a clean, lint-free towel and rubbing alcohol.)
- (3)Glove your hand before installing the lamp. Hold the lamp socket with one hand. Insert the lamp pins into the holes in the lamp socket.
- (4) Make sure that the lever is up. Slide the lamp into the lamp base.
- (5) Put on the lamp cover and fasten the screws snugly.

Remarks: To replace the lamp, using a small flat-head screw driver to push the lamp out of the lamp socket.


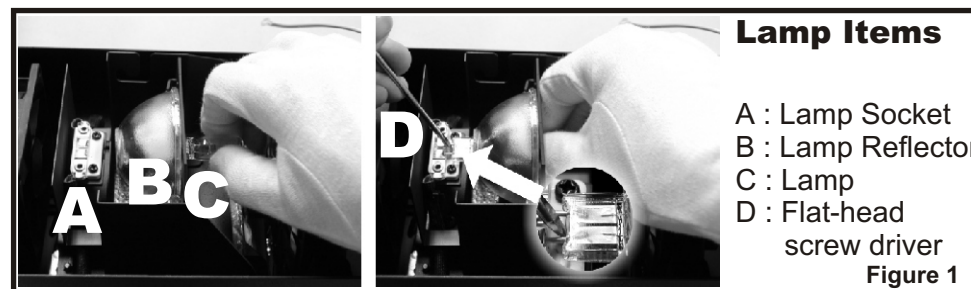


Install the Lamp (MJC-2X,MJC-3X)

Mojo Scan™ scanner use either the GX5.3 24V/250W lamp by Osram or the ELC lamp of identical specifications by Philips. Use only the appropriate lamp for your unit. Note that product versions that use other lamps may be offered in the future. Check your product specification label for information.

Lamp Installation (MJC-2X,MJC-3X)

- (1) Loosen the two screws on the top of the lamp cover. Open the case.
- (2) Read lamp instructions. Do not touch the lamp bulb glass. (See Figure 2.) Oil on hands shortens the lamp life. (If you touch the bulb glass, wipe off the glass with a clean, lint-freetowel and rubbing alcohol.)
- (3) Hold the lamp socket with one hand. Insert the lamp pins into the holes in the lamp socket.
- (4) Make sure that the lever is up. Slide the lamp in to the lamp base.
- (5) Put on the lamp cover and fasten the screws snugly. lamp out of the lamp Socket.

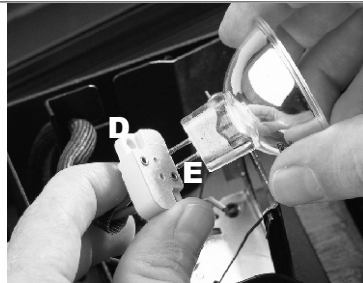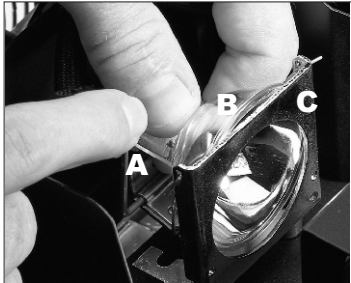

Lamp Items

- A - Lever
- B - "ELC" Lamp
- C - Lamp Base
- D - Lamp Socket
- E - Lamp Pins

Figure 2

Install the Lamp (MJC-2Y,MJC-3Y)

Mojo Scan™ 2Y,3Y scanner use the HTI 152W lamp by Osram only.

Lamp Installation (MJC-2Y,MJC-3Y)


- 1 .Make sure the unit is un-plugged in advance. Loosen the screws on the upper cover with a flat screwdriver, open the upper cover.
2. Use fingers to loosen screw A,B,C in sequence. Hold on to screw A, C and pull backward. (See Figure 3.)
3. Hold on the tube with gloved right hand. The tube will be catapulted by pressing the lever D backward with left hand.
4. Repeat procedure 1 & 2 before installing the tube. Insert the pins of tube into the bottom of socket E. (Note: The small hole is on lever D side)
5. After installing the tube, tighten up screw A & C simultaneously, next tighten up screw B. Lock up the upper cover to get jobs done.

Mojo Scan III DMX Channel Chart


CH1- Gobos Wheel

- 208-255 Strobe-1 flash per 4 seconds to 3fps
 - 160-207
 - 140-159 (Rotation)
 - 120-139
 - 100-119
 - 80-99 (Rotation)
 - 60-79
 - 40-59 (Rotation)
 - 20-39
 - 0-19
- 0 Light unit automatically shut off 5 seconds later.


CH2- Gobo Rotation

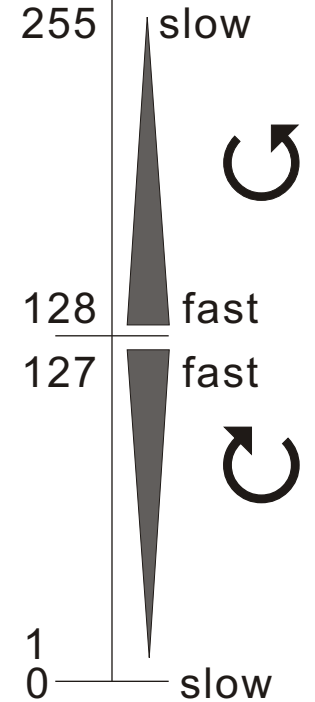

CH3-PAN

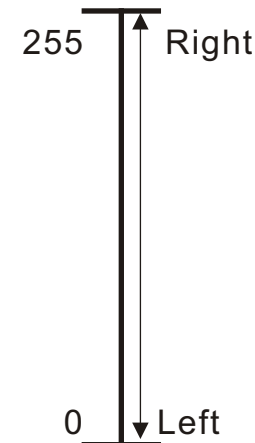


CH4-TILT

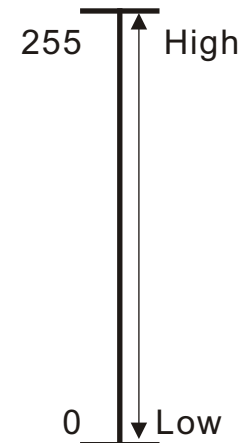

4. Set DMX dip switches as follows.

| | |
|---------|------------|
| MJC-2,3 | Dip ON |
| Unit 1 | #2 |
| Unit 2 | #1, #3 |
| Unit 3 | #1, #4 |
| Unit 4 | #1, #3, #4 |

5. Supply electric power: Plug electric mains power cords into each unit's IEC socket (see figure 6), then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply Power before the whole system is set up and connected properly.

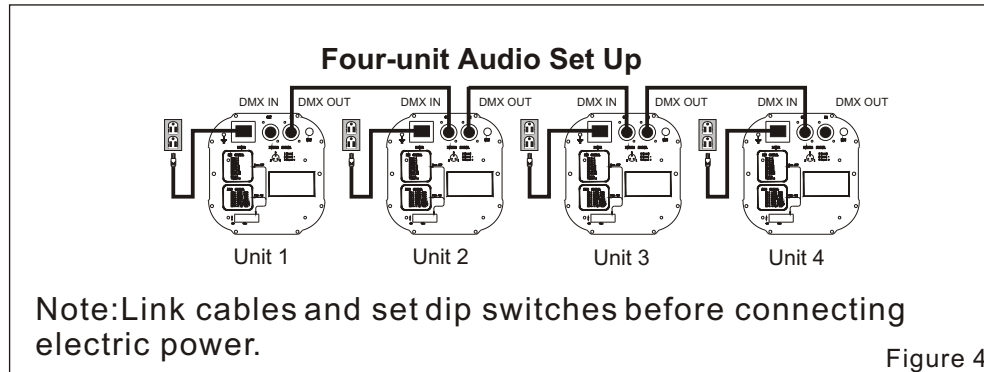

6. Turn on the music.

Note that up to 64 units can be connected and operated in audio mode. To do so, flip on DMX dip switch #1 on the 5th, 9th, 13th, etc., unit. Then repeat settings on following units, so 6th, 10th, 14th, etc., unit DMX settings = unit 2 Settings: 7th, 11th, 15th, etc., Unit DMX settings = unit 3 settings; 8th, 12th, 16th unit settings = unit 4 settings.


DMX Control

1. Fasten the effect light onto firm trussing (Use a 30-kg rated or stronger C-clamp bolted onto the Mojo Scan™ bracket). Leave at least one meter on all sides for air circulation.
2. Link the units as shown in Figure 5. Plug a DMX signal cable from the controller to the first unit's DMX "in" socket. Then plug a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link following units.
3. Set DMX dip switches as follows.

| | |
|---------|------------|
| MJC-2,3 | Dip ON |
| Unit 1 | #1 |
| Unit 2 | #1, #3 |
| Unit 3 | #1, #4 |
| Unit 4 | #1, #3, #4 |

For more units, continue to use standard DMX dip switch settings. See Appendix A for details.

4. On the last in a series of units, flip "on" the Terminate dip switch (Term dip switch). This keeps the signal clear. Make sure other function dip switches are "off".
5. Supply electric power: Plug electric mains power cords into each unit's IEC socket (see figure 5), then plug the other end of the mains power cord into proper electric power supply sockets. Do so for all units and the controller.

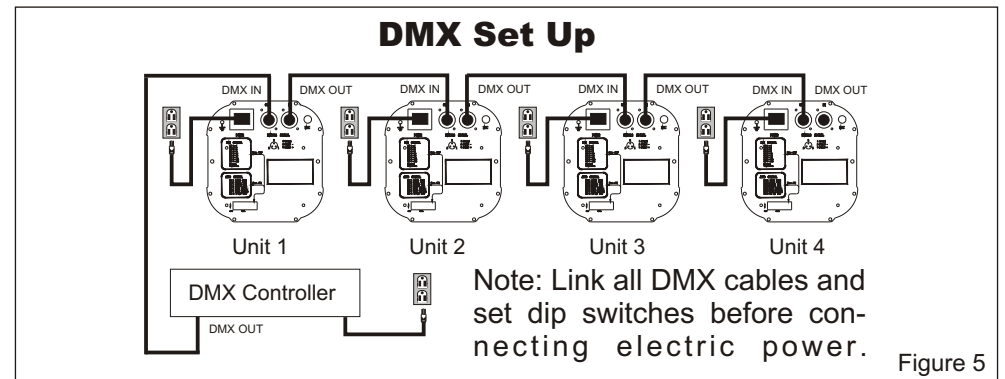

Do not supply power before the whole system is set up and connected properly.

6. Design your show according to your DMX controller functions. DMX channel functions are shown on pages 8,9.

Product Operation Overview

In audio mode (func. dip switch "on"), choose various shows by flipping regular dip switches on the first unit. For example, for a slow, four-unit audio show, flip "on" -func. dip switch on the first unit to activate audio mode, then flip regular dip switches #2 and #6 "on" to activate a slow-paced, four-unit audio show. (See the following Function Channel Chart.)

Do not activate audio dip switches on following units, but set their DMX channels according to regular DMX procedures. (See Appendix A for an introduction to DMX dip switch settings.)

One final note: Terminate all systems by flipping "on" the (Term) dip switch on the last unit. This preserves clear signal transmission in both audio and DMX modes.

Mojo Scan II™ DMX Channel Chart

CH1 -Gobos

CH2 -Colors

| | |
|-----------------|---|
| 209-255 | Strobe-1 flash per 4 seconds to 4 fps |
| 150-159 (16) | Rotation slow - fast |
| 140-149 (15) | |
| 130-139 (14) | |
| 120-129 (13) | |
| 110-119 (12) | |
| 100-109 (11) | |
| 90-99 (10) | |
| 80-89 (9) | |
| 70-79 (8) | |
| 60-69 (7) | |
| 50-59 (6) | |
| 40-49 (5) | |
| 30-39 (4) | |
| 20-29 (3) | |
| 10-19 (2) | |
| 0-9 Shutter (1) | |
| 0 | Light unit automatically shuts off 5 seconds later. |

| |
|----------------------|
| Rotation slow - fast |
| Four-color Square |
| White & Green |
| Pink & White & Blue |
| Blue & White & Green |
| Green & Yellow |
| Red & White & Orange |
| Pink Circle |
| Dark Blue Circle |
| Light Blue Circle |
| Orange Circle |
| Green Circle |
| Yellow Circle |
| Dark Green Circle |
| Red Circle |
| White Circle |

CH3-Pan



CH4-Tilt

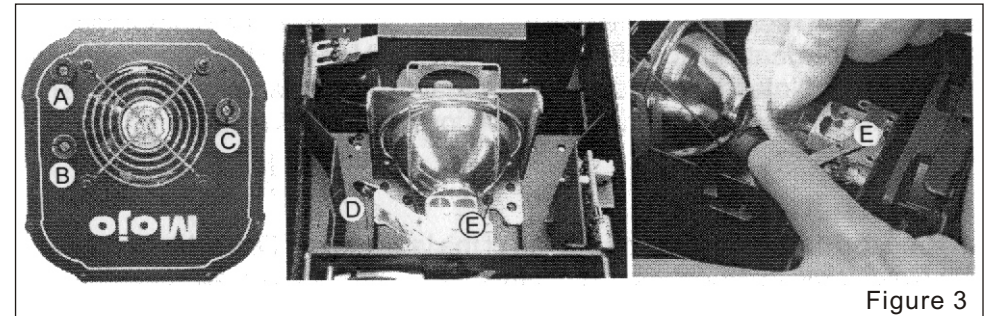


Figure 3

Set Up and Operation

The set up and operation of all Mojo Scan™ scanner is similar. The main difference is that function channels of various items vary, so that dip switch settings differ slightly. Follow directions below as they pertain to your particular product and your preferred operation mode.

Before plugging unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

One-unit Audio Effect

- (1) Fasten the effect light onto firm trussing (Use a 30-kg rated or stronger C-clamp fastened onto the Mojo Scan™ bracket). Leave at least one meter on all sides for air circulation.
- (2) Flip "on" Func. dip switch and regular dip switch #1.
- (3) Plug one end of the electric mains power cord into the IEC socket on the unit. (See figure 6, page 13.) Then plug the other end of the cord into a proper electric power supply socket.
- (4) Turn on the music. The scanner will change to the music.

Four-unit Audio

1. Fasten the effect lights onto firm trussing (Use a 30-kg rated or stronger C-clamp bolted onto the Mojo Scan™ bracket). Leave at least one meter on all sides for air circulation.
2. Link the units as shown in (figure 4), Connect a DMX signal cable from the first unit's DMX "out" socket to the second unit's "in" socket. Repeat this process to link the second, third, and fourth units.
3. Activate audio control: On the first unit, flip "on" func. dip switch .
Terminate the system: On the last unit, flip "on" Term. dip switch .