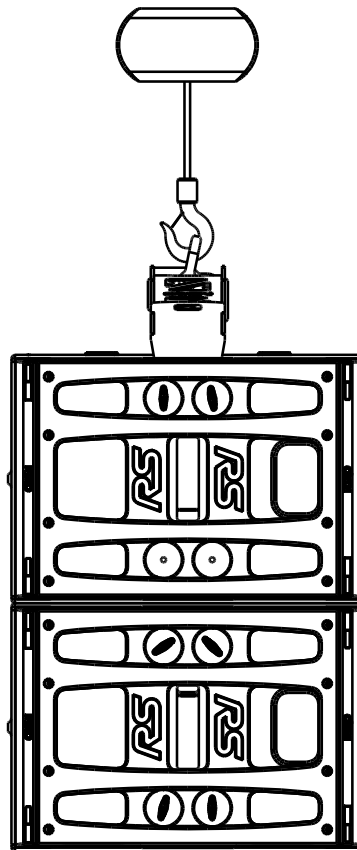
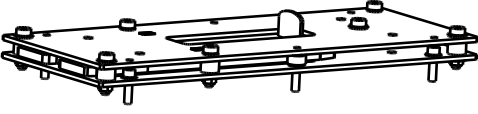
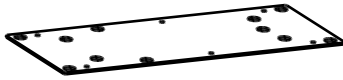

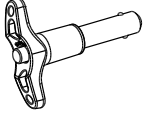


RS18 RIGGING PLATE



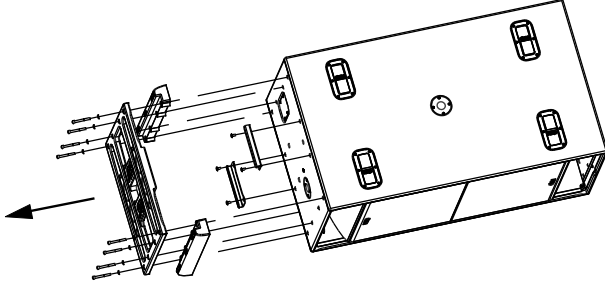
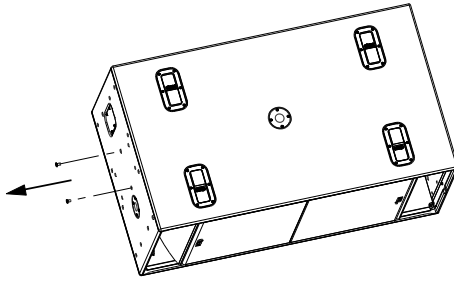
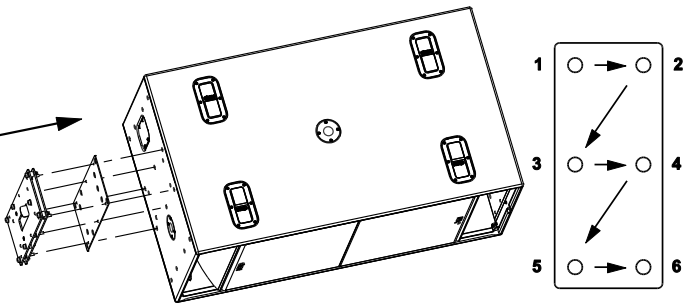
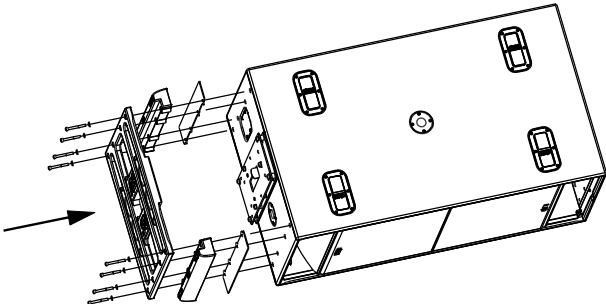
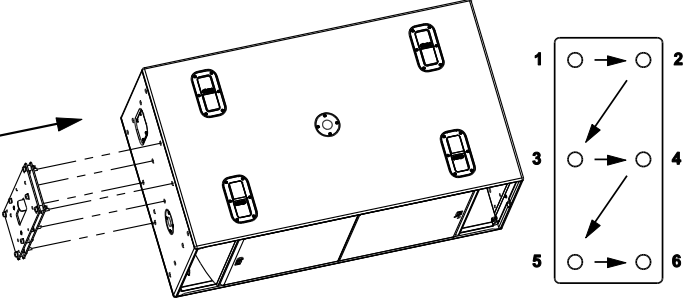
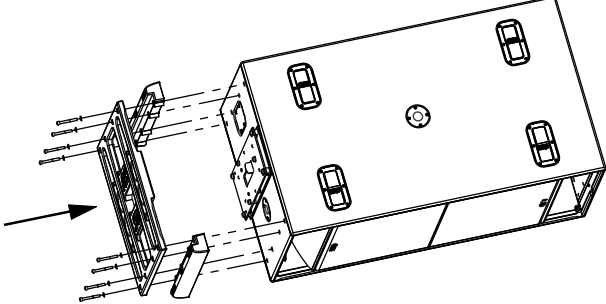
Maximum allowed RS18 Quantity to be flown is 12

Contents:

<p>X2</p> 	<p>X2</p>  <p>X4</p> 	<p>X4 (10x25)</p> 
--	---	---

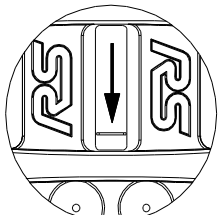
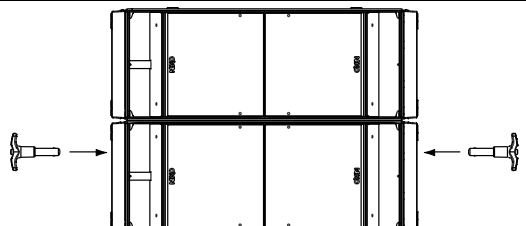
Weight: 18 kg / 40 lb

Mounting (Tools: Allen Key 6mm – Torx 40):

<p>Remove the 12 screws on each side of RS18</p> 	<p>Remove the 4 screws on each side of RS18</p> 
<p>For RS18 Painted</p>	
<p>Insert spacer between cabinet and Rigging plates Tighten the 6 screws alternately, at the rate of 4 revolutions per screw</p> 	<p>Insert spacer between cabinet and handle Tighten the 8 screws</p> 
<p>For RS18 Carpeted</p>	
<p>Tighten the 6 screws alternately, at the rate of four revolutions per screw</p> 	<p>Tighten the 8 screws</p> 

WARNING: Screws must be secured using Loctite 243™

Use:

<p>On both sides, push the top RS18 sliding connecting plate all the way downwards into the second RS18 rigging system</p>	<p>Insert the 4 quick release pins into the FLOWN position of second RS18 Ensure quick release pins are properly locked</p>
	

- NEXO cannot accept responsibility for accidents caused by any factor other than defects in this product itself.
- Please check the web site nexo-sa.com for the latest update.

NEXO

nexo-sa.com
ZA du Pre de la Dame Jeanne
60128 PLAAILLY - France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.

