



Dolly Roof

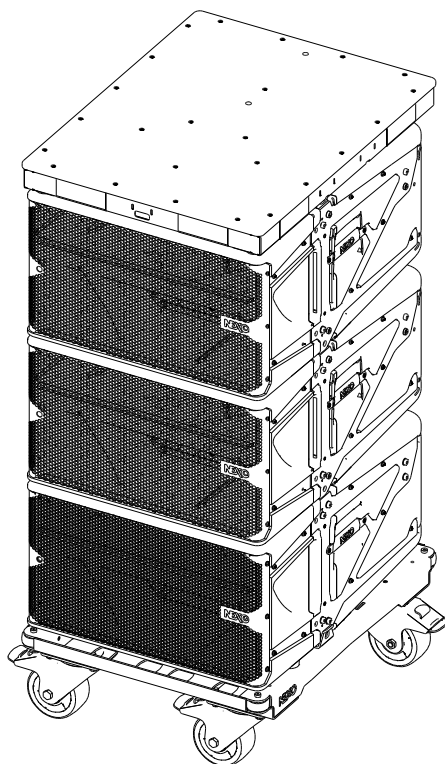


Contents:

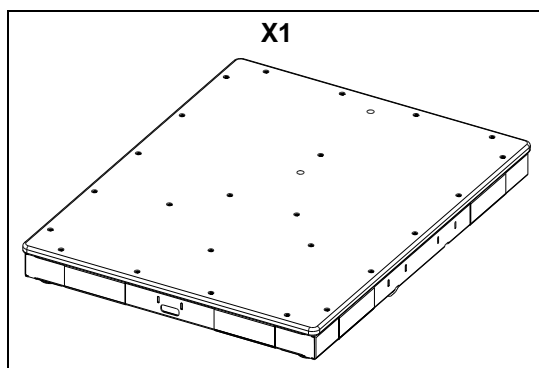


Weight: 13 kg / 29 lb

Dimensions:

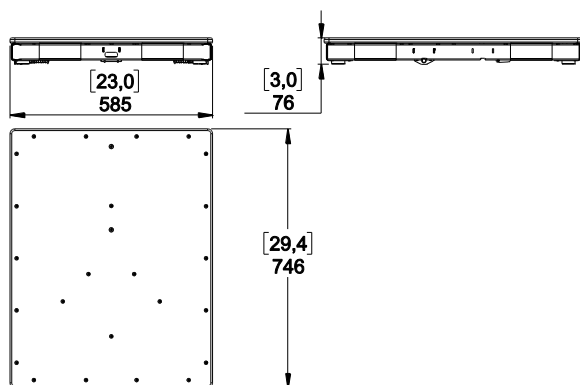

User instructions :

- Pull the latch to unlock the stand.
- Pull the handle to unlock the side latches.
- Position DROOF on the cabinet, release the handle to lock.
- Insert the quick release pin to lock the rear point.

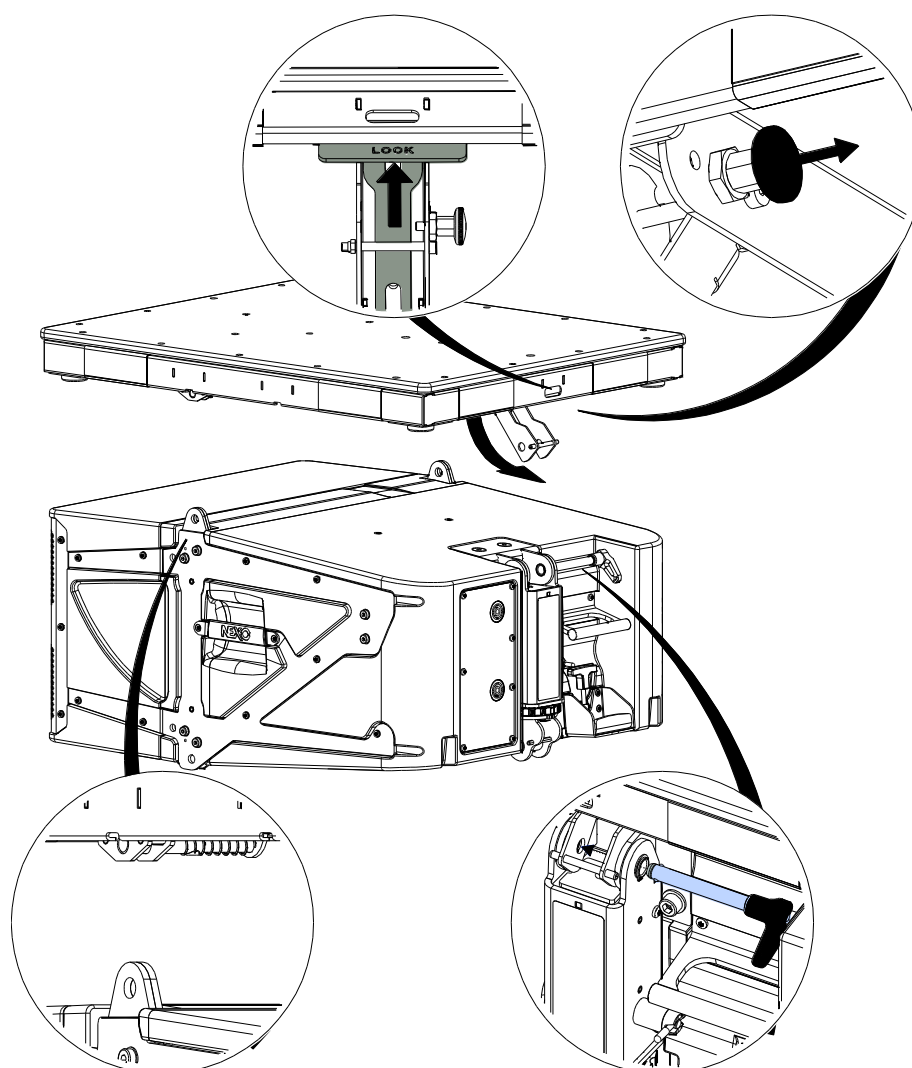

- NEXO cannot accept responsibility for accidents caused by any factor other than defects in this product itself.
- Please check the web site nexo-sa.com for the latest update.

NEXO

nexo-sa.com

ZA du Pre de la Dame Jeanne
60128 PLAAILLY - France

- Read this document before using.
- Keep this document.
- Observe all warnings and cautions.