EQUINOX

Mounting the Truss Adaptor


The Truss Adaptor will arrive with the saddle brackets facing inwards.

These must be reversed to use the adaptor correctly.

- 1. Remove the retaining screws from both sides of the truss adaptor.
- 2. Remove the sadle brackets and hardware.

3. Invert the saddle brackets and choose the mounting distance needed. Slide the safety pin through the hole and secure with R-clips.

4. Reinstall the retaining screws and hardware and tighten as necessary.

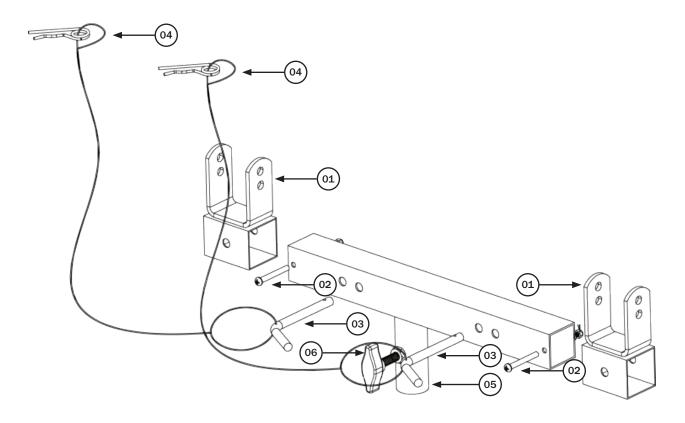

- 01 Saddle brackets 02 - Retaining screws
- 03 Safety pins 04 - R-clips

05 - 35mm mounting tube 06 - Tightening knob In the box: **1** x stand adaptor & **1** x user manual

To install onto the Winch Stand:

- 1. Lower the mounting tube onto the mast of the Winch Stand.
- 2. Hand-tighten the tension knob until snug, being careful not to damage the mast.

To install truss onto the Truss Adaptor:

- 1. Arrange the truss rungs into the saddle brackets.
- 2. Secure in place using the safety pins and R-clips.

Truss Bridge Stand Adaptor User Manual