



VIDA-24Q / VIDA-16Q

AMPLIFIERS

Networkable Amplifiers



USER MANUAL

Web GUI	WebGUI Home & Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
HW	WebGUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol
PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA			

TABLE OF CONTENTS

1. PRECAUTIONS	5
1.1 Important Notice	5
1.2 Key Safety Directions	6
1.3 Cleaning Directions	6
2. WARRANTY & ENVIRONMENT	7
3. PACKAGE CONTENTS	7
4. DESCRIPTION & FEATURES	8
4.1 Main Features	8
5. PANEL FUNCTIONS	9
5.1 Front Panel	9
5.2 Rear Panel.....	10
6. INSTALL & CONNECT	11
6.1 Location, Assembly and Ventilation	11
6.2 Mains Connection	12
6.3 Analogue Input Connections.....	13
6.4 Player and Micro SD Card.....	13
6.5 Digital Audio Inputs and Outputs.....	14
6.6 Amplified Output Connections.....	14
6.6.1 Out Mode.....	15
6.6.2 Operation Example.....	15
6.7 Auxiliary Output Connections.....	16
6.8 GPI Ports	17
6.8.1 Connecting the GPI Remote Control Ports.....	17
6.9 GPO Ports.....	18
6.10 External Mute.....	18
6.11 Ethernet Ports.....	19
7. START-UP & OPERATION.....	20
7.1 Start Up.....	20
8. TECHNICAL DATA.....	21
8.1 Technical Specifications	21
8.1.1 VIDA-24Q	21
8.1.2 VIDA-16Q	26

8.2	Mechanical Diagram	31
8.2.1	VIDA-24Q	31
8.2.2	VIDA-16Q	32
9.	WebGUI	33
9.1	Updates	34
9.2	First steps.....	34
9.2.1	Automatic connection using the Ecler VIDA user web app	34
9.2.2	Automatic connection using a computer.....	34
9.2.3	Manual connection	35
9.2.4	Connection to EclerCLOUD	36
9.3	Login.....	39
9.3.1	Keep me logged in	40
9.3.2	Forgot password.....	40
9.3.3	Public Panels	40
9.3.4	Setup.....	40
9.4	Navigation.....	41
9.4.1	App Bar	41
9.5	Settings.....	44
9.5.1	Device	45
9.5.2	Network	47
9.5.3	Knobs/GPIOs	50
9.5.4	Energy Saving	52
9.5.5	Health	54
9.5.6	Backup and Firmware	56
9.6	Status	58
9.7	Routing	60
9.8	EQ (Equalizer)	68
9.9	GPOs	70
9.10	IO Setup (Input and Output Setup)	71
9.10.1	Inputs Setup	71
9.10.2	Sources Setup.....	73
9.10.3	Amp & Aux Outs Setup	75
9.10.4	Digital Outs Setup	77
9.11	VersaPower.....	78
9.12	Processing	80
9.12.1	Inputs Processing	80
9.12.2	Outputs Processing.....	84
9.13	Groups.....	95

9.14	Events.....	100
9.14.1	Event Knob.....	103
9.14.2	Event GPI.....	104
9.14.3	Event Load Preset.....	108
9.14.4	Event Calendar	109
9.14.5	Event External Mute	116
9.14.6	Event fault	117
9.15	Player.....	118
9.15.1	Playlists	120
9.15.2	Browser.....	123
9.16	Users.....	125
9.17	Panels.....	129
9.18	Register.....	134
10.	ECLER VIDA APP	139
10.1	Login.....	140
10.2	Setup Device	141
10.3	Home	143
10.4	My Panels.....	145
10.5	Settings App	146
11.	TP-NET PROTOCOL.....	149
11.1	Introduction TP-NET Protocol	149
11.2	VIDA Parameters.....	151

1. PRECAUTIONS

1.1 Important Notice



WARNING: SHOCK HAZARD - DO NOT OPEN

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR



The flashing light with an arrowhead symbol inside an equilateral triangle on it is intended to alert the user of the presence of non-insulated “dangerous voltage” within the enclosure, which might be of sufficient magnitude to pose a risk of electric shock to users.



The exclamation mark within an equilateral triangle is intended to alert the user of the requirement for important operating and maintenance (servicing), for which instructions may be found in the literature accompanying the appliance.

WARNING (If applicable): Terminals marked with symbol  or  may be of sufficient magnitude to pose a risk of electric shock. The external wiring connected to terminals requires installation by a technician, or the use of ready-made leads or cords.

WARNING: To prevent fire or shock hazard, do not expose this equipment to rain or humidity.

WARNING: A device with Class I manufacturing ought to be connected to a mains socket outlet with a protective earthing connection.



WARNING: Ecler products have a long lifetime of more than 10 years. This product must never be discarded as unsorted urban waste, but must be taken to the nearest electrical and electronic waste treatment centre.



This equipment has been tested and found to comply with the limits of a Class A digital device, pursuant to part 15 of the FCC Rules. Such limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference in radio communications. Operation of this equipment in a residential area might cause harmful interference, in which case, the user will be required to correct the interference at his own expense.

1.2 Key Safety Directions

1. Read the following directions.
2. Keep the following directions.
3. Observe all warnings.
4. Follow all instructions.
5. Do not use this device in proximity to water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that may release heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades, with one being wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, contact a qualified electrician for a replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at the plugs, convenience receptacles, and at the point of exit from the device.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug the device during lightning storms or when unused for long periods.
13. Refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way, such as power supply cord or plug damage, liquid spillage or objects onto the device, the device has been exposed to rain or humidity, does not operate normally, or has been dropped.
14. Disconnecting from mains: When switching off the POWER switch, all the functions and light indicators of the unit will be stopped, but fully disconnecting the device from mains is done by unplugging the power cable from the mains input socket, therefore, it should always remain easily accessible
15. Equipment is connected to a socket-outlet with an earthing connection by means of a power cord.
16. The marking information is located at the top, rear or bottom of the unit.
17. The device shall not be exposed to dripping or splashing liquids, and no liquid-filled objects, such as a filled up glass, shall be placed on top of the device.
18. The product is not "household". Children shall not be present in the location where the device is used or mounted.

1.3 Cleaning Directions



Clean the unit with a soft, dry clean cloth or slightly wet with water and neutral liquid soap only, then dry it with a clean cloth. Be careful that water never gets into the unit through any hole. Never use alcohol, benzine, solvents or abrasive substances to clean this unit.

NEEC AUDIO BARCELONA, S.L. accepts no liability for any damage that may be caused to people, animal, or objects due to failure to comply with the warnings above.

2. WARRANTY & ENVIRONMENT

Thank you for choosing our Ecler VIDA-24Q /VIDA-16Q device !

We greatly value your trust.

It is **VERY IMPORTANT** to carefully read this manual and to fully understand its contents before any connecting takes place in order to make the best use of this equipment, as well as to get the best performance from it.

To ensure optimal operation of this device, **we strongly recommend that its maintenance be carried out by our authorised Technical Services.**

All ECLER products are covered by warranty, please refer to www.ecler.com or the warranty card included with this product for the period of validity and conditions.



Ecler is truly committed with the environment and planet sustainability, energy saving and CO₂ emission reduction. Recycling materials and using non-contaminant components are also top priorities in our green crusade.

Ecler has deeply evaluated and analyzed the environmental impacts of all the processes involved in the production of this product, including packaging, and has alleviated, reduced and/or compensated for them.

3. PACKAGE CONTENTS

- 1 unit of VIDA-24Q or VIDA-16Q model.
- EU power cable and multiple plugs.
- Euroblock Connectors (inputs /outputs).
- Desktop feet, rack 19" installation hardware.
- First Steps Guide.
- Warranty Card.

4. DESCRIPTION & FEATURES

VIDA-24Q is a digital amplifier with 2400W and **VIDA-16Q** is a digital amplifier with 1600W. Both models with 4 amplified outputs that can be independently configured in high (100/70V) or low (8/4/2ohm) impedance. The VersaPower technology, developed by Ecler, allows asymmetrical power distribution, and thanks to the Smart VersaPower tool it helps installers by facilitating smart and fast configuration. In addition, the Class D amplification technology as well as the configurable 4-outputs auto standby and sleep mode functions, both configurable, further improve energy efficiency.

The VIDA Series offers a wide range of possibilities thanks to its 4 analogue and 4 Dante / AES67 digital inputs, audio player - with microSD slot for local audio files – as well as signal generator, plus 2 auxiliary line outputs and 4 Dante/ AES67 digital outputs.

All these features are managed from its intuitive web application which, among other functionalities, allows signal routing - matrix -, audio signal processing - such as equalisation or limiters -, priority management, GPIO configuration through events, as well as calendar events, playlist management and SD card content, thus facilitating the start-up of the audio-visual installation, its maintenance and customisation.

 Thanks to the [Android/iOS/Web application](#) available to the end user, the audio installation can be managed by them in an easy, intuitive, and customised way.

4.1 Main Features


- 4 VersaPower amplified outputs with asymmetrical power management.
- 4 Dante/ AES67 outputs and 4 Dante/ AES67 inputs.
- 2 auxiliary outputs.
- 4 analogue inputs.
- MicroSD/SDHC card slot audio player.
- Internal matrix and signal processing.
- Web application for device configuration.
- Smart power management Smart VersaPower.
- Control and scheduled events for automation.
- Customize user panels.
- Remote control user application for iOS/Android/Web.
- Energy saving (Ultra-low power consumption mode).
- Compatible with the Remote Monitoring & Control Platform EclerCLOUD.

 **VersaPower** is the amplification technology, developed by Ecler, that allows asymmetrical power distribution among amplified outputs, independent of load.

 **Smart VersaPower** is the tool that allows automatic gain and sensitivity adjustment, to distribute in an easy and quick way, the total power among the amplified outputs.

5. PANEL FUNCTIONS

5.1 Front Panel

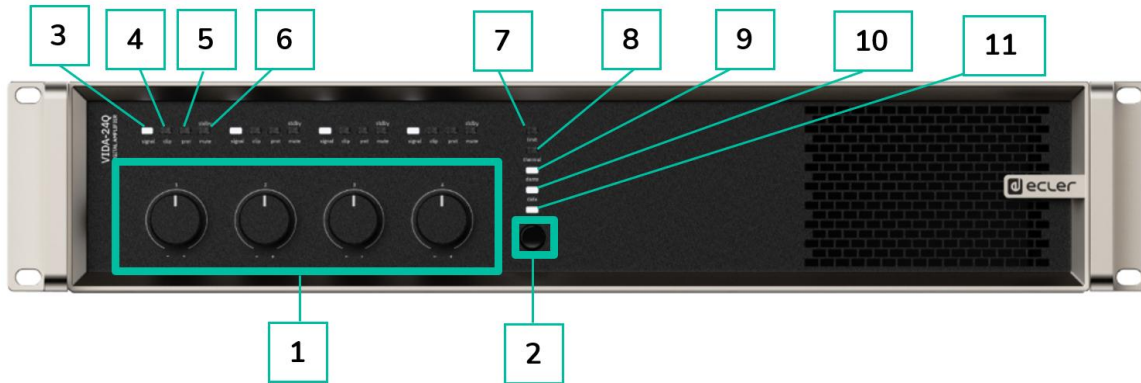

- | | |
|-------------------------------|-------------------------------|
| 1. Control knobs, KNOB1-4 | 7. Limit indicator LED |
| 2. On/Sleep Button | 8. Thermal indicator LED |
| 3. Signal indicator LED | 9. Dante/ AES67 indicator LED |
| 4. Clip indicator LED | 10. Data indicator LED |
| 5. Protection indicator LED | 11. On/Sleep indicator LED |
| 6. Standby/mute indicator LED | |

1. Power switch.
2. Mains socket base.
3. Amplified outputs, OUT1-4, 2-pin Euroblock. Pitch: 7,62 mm
4. Analogue inputs, IN1-4, 3-pin Euroblock, balanced, pitch 3,5 mm
5. MicroSD slot
6. RJ-45 ethernet network ports, NET1-2
7. GPO ports, GPO1-4
8. GPIs ports, GPI1-4
9. External mute port
10. Outputs configuration dip switches, OUT MODE
11. Auxiliary outputs, AUX1-2, 3-pin Euroblock, balanced, pitch 3,5 m

6. INSTALL & CONNECT

The equipment **must be correctly grounded** (ground resistance, $R_g = 30 \text{ Ohm}$ or less). The environment must be dry and dustless. Do not expose the unit to rain or water splashes, and do not place liquid containers or incandescent objects like candles on top of the unit.

Do not obstruct the ventilation grilles with any kind of material. If the device requires any intervention and/or connection/disconnection, it must be first powered off.

Do not handle the speaker output terminals with your device turned on, there are high voltages. The output cabling should be connected by a qualified technician. Otherwise only use pre-made flexible cables. There are no user serviceable parts inside the amplifier.



Non-compliance with the instructions or neglecting warnings may cause malfunction or even damage the unit.

- Avoid turning on the device without the speakers connected to its outputs and without having previously set the volume/gain controls to minimum level.
- Always use shielded cables to make connections between devices.
- In an amplifier, avoid placing the speaker output cables close to other signal cables (micro, line...). This may cause the system to oscillate, damaging the amplifier and speakers.

6.1 Location, Assembly and Ventilation

Vida series devices have a **19" rack format (2RU)**.

It is very important not to enclose the amplifier or expose it to extreme temperatures as it generates heat. **It is also necessary to promote the passage of fresh air through the ventilation holes of the chassis.** The ventilation system forces the air flow, front to back, through the unit.

If multiple products are installed in the same rack or in a cabinet with closed doors, it is highly recommended to install fans in their upper and lower ends for a forced airflow from the bottom up. This upward air flow will help to dissipate the heat generated inside.



It is advisable **not to place power amplifiers under other appliances**, but upon these ones, leaving at least one rack unit off between each device and installed above and below it in the rack frame.

6.2 Mains Connection

VIDA operates on alternating voltages from 90 to 264V and 47 to 63Hz. This device is equipped with an oversized power supply capable of adapting **without any type of adjustment to the mains voltage of any country in the world.**

Plug the power cord to the mains connector located on the rear panel and then press the on/off switch also on the rear panel to power the unit.



Then briefly press and hold the front ON/SLEEP button to turn on the unit. Its LED indicator illuminates when the unit is in operation, and blinks when it is in sleep mode.



⚠ Do not allow the mains cable to run parallel to the shielded cables carrying the audio signal, as this may cause humming.


6.3 Analogue Input Connections

VIDA rear panel provides analogue, balanced, line level signal inputs. The selection of hardware inputs and their routing and mixing towards either amplifier channel is performed from its embedded web application. Please refer to the web application manual for more information on www.ecler.com.



Signal input connectors are Euroblock, type 3 position screw terminal block. The wiring is:

- Live or direct signal → Pin +
- Cold or inverted signal → Pin -
- Ground → Pin ⊥

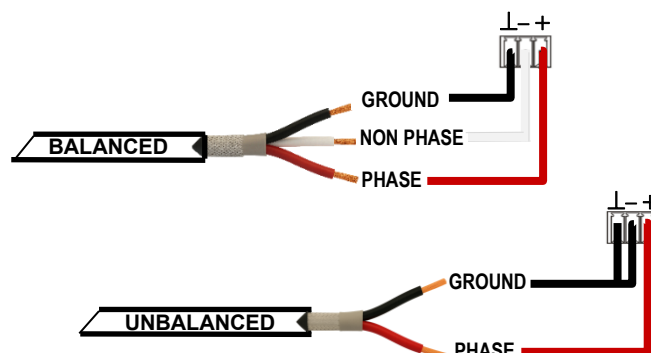

⚠ For unbalanced connection short-circuit pin ⊥ to pin - as reported on the picture.

6.4 Player and Micro SD Card

VIDA integrates a **stereo audio player** able to play audio files from local storage device (**microSD card**), for background music or voice messages. Includes playlist management and integration with device's calendar events for automation. Also available for customizable user panels. Fully configurable, through VIDA web application. Refer to the web application manual for more information.

MicroSD Card slot is located in the rear panel. Insert the microSD card into the slot, until a click sound is heard. To extract it, push the microSD card inside the slot, until a click sound is heard, then, it will be released.



6.5 Digital Audio Inputs and Outputs

VIDA allows the reception of 4 channels of digital audio Dante/ AES67 and the sending of 4 channels of digital audio Dante/ AES67 through an Ethernet network compatible with the transport of digital audio over IP through the Dante protocol.

The routing of the digital audio signals Dante/ AES67 through the Ethernet network, as well as the network configuration of the ports Dante/ AES67 (IP addresses, mask, etc.) of the VIDA, is managed by the software application Dante Controller.



For more information, please refer to the developer's documentation: www.audinate.com/products/software/dante-controller.



AES67 is enabled by default. Dante devices cannot subscribe to AES67 streams from other Dante devices.

6.6 Amplified Output Connections

The rear panel is fitted with **two position screw terminal block for each amplified output**.



Always **respect the relative polarity for outputs** (+ and – on each output connector), wiring and speakers.

6.6.1 Out Mode


Allows configuring each amplified output, individually, to operate with high or low impedances.



! Select the appropriate operating mode to avoid damaging the loudspeakers. **Never connect loads below 2 ohms when working in low impedance mode.**

! Make sure to match the impedance of the total load connected to the loudspeakers, when working in low impedance for a correct performance. If impedance values do not match, select the closer one above.

6.6.2 Operation Example

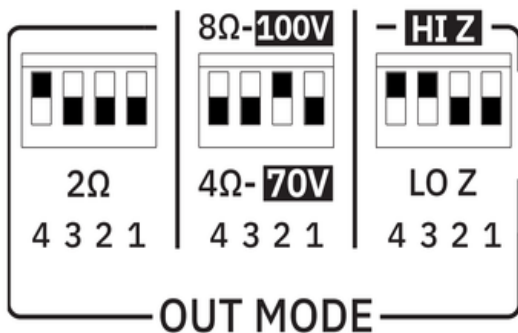

AMP OUT1: HIZ-100V

AMP OUT2: HIZ-70V

! When **HIZ** is selected, 2ohm switch has no effect.

AMP OUT3: LOZ-8ohm

AMP OUT4: LOZ-2ohm

! When **LOZ** is selected, and 2ohm switch is in 2ohm position (down), switch 4/8ohm has no effect.

! The connection cable that joins the amplifiers outputs and the loudspeakers must be of good quality, sufficient section and as short as possible. This is most important when the distances to cover are long ones i.e., up to 10 meters it is recommended to use a section not inferior to 2.5mm² and for superior distances 4mm².

6.7 Auxiliary Output Connections

VIDA rear panel provides **two analogues, balanced, line level auxiliary outputs**. Their independent routing, mixing, and processing is performed from VIDA embedded web application.




Please refer to the web application manual for more information.

For unbalanced connection short-circuit pin $\perp$ to pin $-$.

- If an auxiliary output is connected to an amplifier or audio device with a balanced input, all terminals must be connected point by point and between the two devices.
- When connecting an output channel to an amplifier or device with an unbalanced audio input, leave the $-$ terminal unconnected.

Live or direct signal	→	Pin	+
Cold or inverted signal	→	Pin	-
Ground	→	Pin	$\perp$

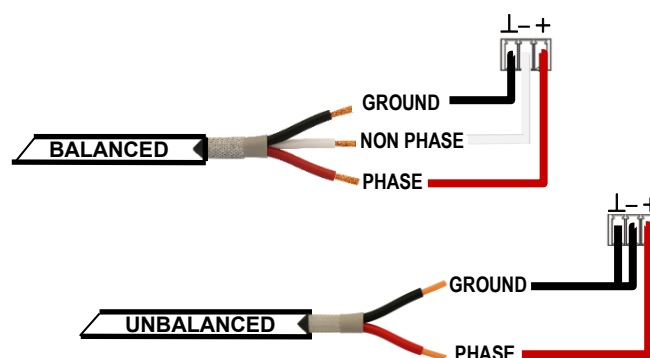

6.8 GPI Ports

VIDA rear panels provide four 0-10VDC remote control ports, labelled "GPI 1-4", to which you can connect analogue devices such as the WPa series wall panels. With the VIDA web application, a function can be assigned to each of these ports: a GPI port can control remotely volume of sources, outputs (amplified, auxiliary or digital), and local and network groups, including general volume. Also, loading presets or playlists.



Please refer to the web application manual for more information.

6.8.1 Connecting the GPI Remote Control Ports

The GPI connectors are Euroblock type. The assignment of the connection is as follows:

Positive, + 10 VDC	→	Pin +
Variable voltage, 0-10 VDC	→	Pin 1-4
Ground	→	Pin ⊥

- Up to 16 remote control ports can be connected in parallel to the same hardware control potentiometer. Ground connections of all devices those ports belong to must be joined.
- The connection cables can be up to 500m long if a section of 0.5mm² is used.
- Consult the available accessories at www.ecler.com.

6.9 GPO Ports

VIDA has on its **rear panel 4, relay outputs NO / NC (normally open / normally closed)**. Each of these outputs can have its status change associated with a user preset by means of a specific function programmed through VIDA web application, such as a calendar event or the touch of a key available on a user panel. In this way, it is possible to interact with external equipment, such as motors for projection screens or movable partition walls, lights, sirens, GPI inputs from other equipment, etc.



6.10 External Mute


VIDA has on its **rear panel a control input, or EXT. MUTE port (Normally Open = MUTE OFF / Closed = MUTE ON)**, which allows the activation /deactivation of the mute of audio outputs (zones) of the unit by means of a push button, relay or external potential free contact closure.



- The assignment of **outputs affected by the MUTE port** is **configured from VIDA web application**.
- Please refer to the VIDA web application manual for more information.

6.11 Ethernet Ports

The **RJ-45-type ETHERNET connectors on the rear panel**, named NET1 and NET2, allows the equipment to be connected to an Ethernet network, or directly to a computer or other device with an Ethernet interface, point-to-point.

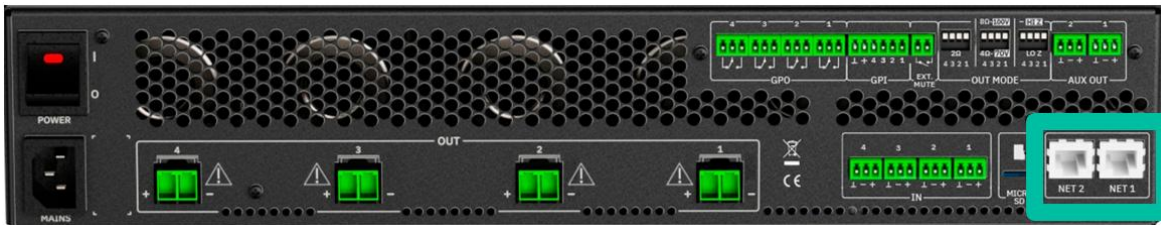

VIDA features two ports with RJ-45 interface in its rear panel:

- **Net1 (Control):** WebGUI, control panels, third party control and other control packages are sent/received over Net1.
- **Net2 (Control + Dante/ AES67):** control and Dante/ AES67 Audio perform over the same network.

 **Use Net1 and Net2 in different networks.** Configuring both, Net1 and Net2, over the same local network might cause malfunctioning in network features of the device.

This connection enables, within a local network, the following:

- **Global programming and management** of the VIDA unit using the VIDA embedded web application and a standard web browser running on a computer, tablet, etc.
- **Connection of client devices for end-user management** of areas of the installation through the VIDA application, compatible with Android and iOS, or through standard web browsers running on computers, tablets, etc.
- **Connection to Internet for clock synchronization** (calendar events), automatic, firmware updates and other tools.
- **Reception of 4 channels of digital audio Dante/AES67** and sending of 4 channels of digital audio Dante/AES67.
- **Connection of third-party devices for integration in control systems** (Crestron®, Extron®, AMX®, Vity®, Medialon®, etc., registered trademarks by their manufacturers), using the NET protocol embedded in VIDA devices. Refer to the TP-NET protocol manual for more information.

 Dante /AES67 digital audio license is included.

7. START-UP & OPERATION

7.1 Start Up

Plug the power cord to the mains connector located on the rear panel and then press the on/off switch also on the rear panel to power the unit.



Then briefly press and hold the front ON/SLEEP button or remotely from the VIDA web application or with the NET protocol. Its LED indicator illuminates when the unit is in operation, and blinks when it is in sleep mode.



! In a complete audio installation, it is important to start up the equipment in the following sequence:

1. sound sources
2. mixer
3. equalizers
4. active filters
5. processors
6. power amplifiers.

To turn them off the sequence should follow the inverse pattern.

8. TECHNICAL DATA

8.1 Technical Specifications

8.1.1 VIDA-24Q

VIDA-24Q

INPUTS		
Number of Inputs	4 analogue input channels 4 DANTE/ AES67 Network Rx channels 1 embedded player, 1 embedded signal generator	
Analogue input connection type	IN1-4: 3-pin Euroblock, balanced, pitch 3,5 mm.	
Digital input connection type	Ethernet, managed via Dante/ AES67 Controller	
Input configuration	Digital matrix 4 in x 6 out (Settings by embedded web application)	
AMPLIFIED OUTPUTS		
Number of amplified outputs	4	
Amplified output connection type	2-pin Euroblock. Pitch: 7,62 mm Ref: DEGSON 5EDGRC-7.62	
Output configuration	Lo-Z/Hi-Z, 70V/100V, 4Ω/8Ω/2Ω Output mode selection per channel Rear panel DIP SWITCH selectors	
VERSAPOWER		
SYMMETRICAL - All channels driven @1kHz @CF9dB @ 1%THD		
Max output power @ 8Ω	600W	
Max output power @ 4Ω	600W	
Max output power @ 2Ω	600W	
Max output power @ 100V	600W	
Max output power @ 70V	600W	
ASYMMETRICAL - Single channel driven @1kHz @CF9dB @ 1%THD		
Max output power @ 8Ω	1400W	
Max output power @ 4Ω	2400W	
Max output power @ 2Ω	1600W	
Max output power @ 100V	2400W	
Max output power @ 70V	2000W	
AUXILIAR OUTPUTS		
Number of auxiliar outputs	2	
Auxiliar output connection type	AUX1-2: 3-pin Euroblock, balanced (Euroblock pitch 3,5 mm. Settings by embedded web application)	
DIGITAL OUTPUTS		
Number of digital outputs	4	
Digital output connection type	Ethernet, managed via Dante/ AES67 Controller	
SIGNAL		
Voltage gain	28 to 40 dBV 30,2 to 42,2 dBu	

Input sensitivity	-6 to +6 dBV -3,78 to 8,2 dBu 0,5 to 2 Vrms (adjusted by means of Smart Versa Power utility)
Input impedance	>24k (balanced)
Max input level	+18 dBV +20,2 dBu (@ Gain 34 dBV)
Frequency response	15Hz-25kHz (-3dB, 1W any load)
THD + Noise	< 0,1 % 0,015 Typ (@ 1kHz, from 0,1W to Full Power)
SNR	95 dBA (40dB Gain, from 20Hz - 20kHz)
Crosstalk	>80dB (@ 1kHz)
CMRR	> 65 Typ (from 20Hz-20kHz)
Damping factor	>500 (@ 8Ω, from 20Hz to 1kHz)
ELECTRICAL	
Power supply	Universal, regulated SMPS with PFC
AC mains requirement	100-240 V @ 50-60Hz ((±10%)
Power factor correction	> 0,96 (Output Power > 500W)
AC mains connector	IEC C14 inlet (10Amax)
POWER & HEAT @230VAC	
1/4 POWER, @ 4Ω (all channels driven)	
Power	848 W 888 VA
Current Draw	3,88 Arms
Thermal Loss	214,1kcal/h 849,8BTU/h
1/8 POWER, @ 4Ω (all channels driven)	
Power	498 W 536 VA
Current Draw	2,33 Arms
Thermal Loss	170,3kcal/h 675,8BTU/h
IDLE (all channels driven)	
Power	72 W 122 VA
Current Draw	0,52 Arms
Thermal Loss	61,9kcal/h 245,7BTU/h
SLEEP MODE (all channels driven)	
Power	4,1 W 23,8 VA
Current Draw	0,1 Arms
Thermal Loss	3,5kcal/h 14BTU/h
POWER & HEAT @120VAC	
1/4 POWER, @ 4Ω (all channels driven)	
Power	855 W 865 VA
Current Draw	7,37 Arms
Thermal Loss	219,3kcal/h 870,3BTU/h
1/8 POWER, @ 4Ω (all channels driven)	
Power	483 W 493 VA

Current Draw	4,16 Arms
Thermal Loss	157,4kcal/h 624,6BTU/h
IDLE (all channels driven)	
Power	68 W 89 VA
Current Draw	0,75 Arms
Thermal Loss	58,5kcal/h 232,1BTU/h
SLEEP MODE (all channels driven)	
Power	3,6 W 10,2 VA
Current Draw	0,09 Arms
Thermal Loss	3,1kcal/h 12,3BTU/h
TECHNOLOGIES	
Amplification technology	Class D
Energy saving	Auto standby function programmable per channel Sleep Mode function selectable
Efficiency	72% (1/4 POWER, @ 4Ω)
Cooling	Fan (forced air, front to back airflow. Temperature controlled continuously variable speed)
Maximum fan noise	53dB (maximum acoustical noise @1m)
PROTECTIONS	
DC protection	Yes (protects loudspeaker and installation against DC and infrasonic signals at the outputs)
HF protection	Yes (protects the loudspeakers against non-audible, strong, non-musical high frequency signals)
Short-circuit protection	Yes (protects the amplifier from overcurrent, short circuit or other stressful events for the output stages with output reduction or MUTE (automatic protection reset)
Clip limiter	Yes (prevents severely clipped waveforms from reaching loudspeakers, while still maintaining full peak power output).
Long term limiter	Yes (protects the loudspeaker and amplifier against steady long term rms signals (sine wave, non-music) reducing maximum output)
Thermal protection	Yes (output power reduction when output stages operating temperature up to 90 °C (194 °F). Mute when output stages operating temperature up to 100 °C (212 °F)
REMOTE CONTROL CONNECTIONS	
ON / OFF	No
GPIs	x4 GPIs (0-10V) Function and settings by embedded web application
GPOs	5-pin Euroblock connector, rear panel. Euroblock pitch 3,5 mm x4 NC / NO contacts 4x 3pins Euroblock connector, rear panel Euroblock pitch 3,5 mm
External MUTE	Yes, contact (2 pins Euroblock connector, rear panel, Euroblock pitch 3,5 mm)

LOCAL CONTROL		
Attenuators	Programmable Front panel knobs (defaults: Amplified OUTs attenuators)	
Output mode settings	Lo-Z/Hi-Z, 70V/100V, 4Ω/8Ω/2Ω Output mode selection per channel (Rear panel DIP SWITCH selectors)	
RUN/SLEEP mode	Yes, front panel push-button (operate when pressed more than 0,5 seconds)	
Power ON/OFF	Yes, back panel switch (red LED indicator)	
CONNECTIVITY		
Ethernet	Ethernet Base-Tx 10/100/1000Mb Auto X-Over (CAT5 up to 100m. Settings by embedded web application)	
DANTE/ AES67 Protocol	Dante/ AES67 4x Tx / 4x Rx channels (2/2 flows)	
Programming and control	Embedded web application	
MONITORING		
Signal Present	SP LED (White) per channel (trigger @- 40 dBV)	
Clipping	CLIP LED (Red) per channel (Clip, Versa power limiter, Peak power, Power supply overload)	
Protect	PROT LED (Red) per channel (Current overload, Output short circuit, Under voltage, Over Voltage, DC OUT (slow blink), HF protect (fast blink)	
Standby / Mute	STBY/MUTE LED (White) per channel (ON when STBY, BLINK when MUTE)	
Limit	LIMIT LED (Red) per unit (Power (power supply) overload)	
Thermal	THERMAL LED (Red) per unit (Temperature limiter)	
Dante/ AES67	DANTE/ AES67 LED (White) per unit (OFF NO WIRE, ON when MASTER, BLINK when SLAVE)	
Data	DATA LED (White) per unit (ON when DATA)	
On	ON LED (White) per unit (ON when RUN, SLOW BLINK when SLEEP by BUTTON, FAST BLINK when SLEEP by AUTOSTBY, VERY FAST BLINK when HW Fault)	
DIGITAL ENGINE		
Processor	Quad core 64bits 1,5GHz	
AUDIO CONVERTERS		
Sampling rate	48 kHz	
Resolution	24 bit	
Dynamic range	114dB	
PROCESSING		
Digital processing	32/64 bit	
Latency	2,8 ms (Analog IN to analog OUT)	
Inputs processing	Noise gate, HPF, Freq. Shifter, compressor/limiter	

	
HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
PACKAGE CONTENTS	Navigation
DESCRIPTION & FEATURES	EQ
PANEL FUNCTIONS	Inputs / Outputs Setup
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP
	Panels
	Groups
	VersaPower
	GPOs
	Routing
	Status
	Settings
	Home & Updates
	WebGUI

Outputs processing	Delay, Parametric EQ, Graphic EQ independent for every amp out and aux out. Limiters independent for every amp out Smart VersaPower management (Settings by embedded web application)
Others	Preset management, Internal matrix, priority & backup signals management, local & network groups, events management incl. calendar (Settings by embedded web application)
REAL-TIME CLOCK	
Retention time	> 5 years
Accuracy	±1 minute / month
Battery	VARTA CR2032 3V, 230mAh
LOCAL STORAGE	
Micro SD	SDXC
Capacity	Up to 2TB
File system	FAT16, FAT 32, VFAT (read/write) NTFS (read) Multi-partition up to 1
Playable audio files	mp3, ogg, WAV, FLAC, AIFF
Files analysis	65354 playable folders 65354 playable folders within each folder 65354 playable files within each folder
Folder hierarchy	Up to 8 containing the root directory
Sorting	UNICODE, in alphabetical order Up to 100 folders / files by folder Folders/files over 100 sorted in the FAT order
PHYSICAL	
Operating temperature	-10° to 50° C 14° to 122° F (performance may be reduced above 40 °C)
Operating humidity	5 - 85% RH, non-condensing
Storage temperature	-10° to 50° C 14° to 122° F
Storage humidity	5 - 85% RH, non-condensing
Installation options	Rack 19" installation & desktop
Included accessories	EU power cord, Multiplugs, Euroblock Connectors (inputs /outputs), Desktop feet, rack 19" installation hardware
Optional accessories	-
Dimensions (WxHxD)	482.6 x 88 x 410 mm. / 19 x 3.46 x 16.14 inches
Weight	9.3 kg / 20.5 lb
Shipping dimensions (WxHxD)	650 x 125 x 600 mm. / 25.59 x 4.92 x 23.62 inches
Shipping weight	12.3 kg / 27.1 lb

Web GUI

WebGUI Home & Updates

WebGUI Connection

PRECAUTIONS

Settings

Login

WARRANTY & ENVIRONMENT

Status

Navigation

PACKAGE CONTENTS

Routing

EQ

DESCRIPTION & FEATURES

GPOs

Inputs / Outputs Setup

PANEL FUNCTIONS

VersaPower

Processing

INSTALL & CONNECT

Groups

Events

START-UP & OPERATION

Player

Users

TECHNICAL DATA

Panels

Register

APP

TP-NET Protocol

8.1.2 VIDA-16Q

VIDA-16Q

INPUTS	
Number of Inputs	4 analogue input channels 4 DANTE/ AES67 Network Rx channels 1 embedded player, 1 embedded signal generator
Analogue input connection type	IN1-4: 3-pin Euroblock, balanced, pitch 3,5 mm.
Digital input connection type	Ethernet, managed via Dante/ AES67 Controller
Input configuration	Digital matrix 4 in x 6 out (Settings by embedded web application)
AMPLIFIED OUTPUTS	
Number of amplified outputs	4
Amplified output connection type	2-pin Euroblock. Pitch: 7,62 mm Ref: DEGSON 5EDGRC-7.62
Output configuration	Lo-Z/Hi-Z, 70V/100V, 4Ω/8Ω/2Ω Output mode selection per channel Rear panel DIP SWITCH selectors
VERSAPOWER	
SYMMETRICAL - All channels driven @1kHz @CF9dB @ 1%THD	
Max output power @ 8Ω	400W
Max output power @ 4Ω	400W
Max output power @ 2Ω	400W
Max output power @ 100V	400W
Max output power @ 70V	400W
ASYMMETRICAL - Single channel driven @1kHz @CF9dB @ 1%THD	
Max output power @ 8Ω	1400W
Max output power @ 4Ω	1600W
Max output power @ 2Ω	1600W
Max output power @ 100V	1600W
Max output power @ 70V	1600W
AUXILIAR OUTPUTS	
Number of auxiliar outputs	2
Auxiliar output connection type	AUX1-2: 3-pin Euroblock, balanced (Euroblock pitch 3,5 mm. Settings by embedded web application)
DIGITAL OUTPUTS	
Number of digital outputs	4
Digital output connection type	Ethernet, managed via Dante/ AES67 Controller
SIGNAL	
Voltage gain	28 to 40 dBV 30,2 to 42,2 dBu
Input sensitivity	-6 to +6 dBV -3,78 to 8,2 dBu 0,5 to 2 Vrms (adjusted by means of Smart Versa Power utility)

Input impedance	>24k (balanced)
Max input level	+18 dBV +20,2 dBu (@ Gain 34 dBV)
Frequency response	15Hz-25kHz (-3dB, 1W any load)
THD + Noise	< 0,1 % 0,015 Typ (@ 1kHz, from 0,1W to Full Power)
SNR	95 dBA (40dB Gain, from 20Hz - 20kHz)
Crosstalk	>80dB (@ 1kHz)
CMRR	> 65 Typ (from 20Hz-20kHz)
Damping factor	>500 (@ 8Ω, from 20Hz to 1kHz)
ELECTRICAL	
Power supply	Universal, regulated SMPS with PFC
AC mains requirement	100-240 V @ 50-60Hz ((±10%)
Power factor correction	> 0,96 (Output Power > 500W)
AC mains connector	IEC C14 inlet (10Amax)
POWER & HEAT @230VAC	
1/4 POWER, @ 4Ω (all channels driven)	
Power	607 W 640 VA
Current Draw	3,8 Arms
Thermal Loss	178,0kcal/h 706,5BTU/h
1/8 POWER, @ 4Ω (all channels driven)	
Power	362 W 414 VA
Current Draw	1,8 Arms
Thermal Loss	139,3kcal/h 552,9BTU/h
IDLE (all channels driven)	
Power	72 W 122 VA
Current Draw	0,52 Arms
Thermal Loss	61,9kcal/h 245,7BTU/h
SLEEP MODE (all channels driven)	
Power	4,1 W 23,8 VA
Current Draw	0,1 Arms
Thermal Loss	3,5kcal/h 14BTU/h
POWER & HEAT @120VAC	
1/4 POWER, @ 4Ω (all channels driven)	
Power	604 W 611 VA
Current Draw	5,17 Arms
Thermal Loss	175,4kcal/h 696,3BTU/h
1/8 POWER, @ 4Ω (all channels driven)	
Power	354 W 362 VA
Current Draw	3,04 Arms
Thermal Loss	132,4kcal/h 525,6BTU/h
IDLE (all channels driven)	
Power	68 W 89 VA

Current Draw	0,75 Arms
Thermal Loss	58,5kcal/h 232,1BTU/h
SLEEP MODE (all channels driven)	
Power	3,6 W 10,2 VA
Current Draw	0,09 Arms
Thermal Loss	3,1kcal/h 12,3BTU/h
TECHNOLOGIES	
Amplification technology	Class D
Energy saving	Auto standby function programmable per channel Sleep Mode function selectable
Efficiency	68% (1/4 POWER, @ 4Ω)
Cooling	Fan (forced air, front to back airflow. Temperature controlled continuously variable speed)
Maximum fan noise	53dB (maximum acoustical noise @1m)
PROTECTIONS	
DC protection	Yes (protects loudspeaker and installation against DC and infrasonic signals at the outputs)
HF protection	Yes (protects the loudspeakers against non-audible, strong, non-musical high frequency signals)
Short-circuit protection	Yes (protects the amplifier from overcurrent, short circuit or other stressful events for the output stages with output reduction or MUTE (automatic protection reset)
Clip limiter	Yes (prevents severely clipped waveforms from reaching loudspeakers, while still maintaining full peak power output).
Long term limiter	Yes (protects the loudspeaker and amplifier against steady long term rms signals (sine wave, non-music) reducing maximum output)
Thermal protection	Yes (output power reduction when output stages operating temperature up to 90 °C (194 °F). Mute when output stages operating temperature up to 100 °C (212 °F)
REMOTE CONTROL CONNECTIONS	
ON / OFF	No
GPIs	x4 GPIs (0-10V) Function and settings by embedded web application 5-pin Euroblock connector, rear panel. Euroblock pitch 3,5 mm
GPOs	x4 NC / NO contacts 4x 3pins Euroblock connector, rear panel Euroblock pitch 3,5 mm
External MUTE	Yes, contact (2 pins Euroblock connector, rear panel, Euroblock pitch 3,5 mm)
LOCAL CONTROL	
Attenuators	Programmable Front panel knobs (defaults: Amplified OUTs attenuators)

Output mode settings	Lo-Z/Hi-Z, 70V/100V, 4Ω/8Ω/2Ω Output mode selection per channel (Rear panel DIP SWITCH selectors)
RUN/SLEEP mode	Yes, front panel push-button (operate when pressed more than 0,5 seconds)
Power ON/OFF	Yes, back panel switch (red LED indicator)
CONNECTIVITY	
Ethernet	Ethernet Base-Tx 10/100/1000Mb Auto X-Over (CAT5 up to 100m. Settings by embedded web application)
DANTE/ AES67 Protocol Programming and control	Dante/ AES67 4x Tx / 4x Rx channels (2/2 flows) Embedded web application
MONITORING	
Signal Present	SP LED (White) per channel (trigger @- 40 dBV)
Clipping	CLIP LED (Red) per channel (Clip, Versa power limiter, Peak power, Power supply overload)
Protect	PROT LED (Red) per channel (Current overload, Output short circuit, Under voltage, Over Voltage, DC OUT (slow blink), HF protect (fast blink)
Standby / Mute	STBY/MUTE LED (White) per channel (ON when STBY, BLINK when MUTE)
Limit	LIMIT LED (Red) per unit (Power (power supply) overload)
Thermal	THERMAL LED (Red) per unit (Temperature limiter)
Dante/ AES67	DANTE/ AES67 LED (White) per unit (OFF NO WIRE, ON when MASTER, BLINK when SLAVE)
Data	DATA LED (White) per unit (ON when DATA)
On	ON LED (White) per unit (ON when RUN, SLOW BLINK when SLEEP by BUTTON, FAST BLINK when SLEEP by AUTOSTBY, VERY FAST BLINK when HW Fault)
DIGITAL ENGINE	
Processor	Quad core 64bits 1,5GHz
AUDIO CONVERTERS	
Sampling rate	48 kHz
Resolution	24 bit
Dynamic range	114dB
PROCESSING	
Digital processing	32/64 bit
Latency	2,8 ms (Analog IN to analog OUT)
Inputs processing	Noise gate, HPF, Freq. Shifter, compressor/limiter

	Web GUI	WebGUI Home & Updates												Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
	WebGUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup			Processing	Events	Users	Register	TP-NET Protocol										
WH	PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES			PANEL FUNCTIONS		INSTALL & CONNECT		START-UP & OPERATION	TECHNICAL DATA										


Outputs processing	Delay, Parametric EQ, Graphic EQ independent for every amp out and aux out. Limiters independent for every amp out Smart VersaPower management (Settings by embedded web application)
Others	Preset management, Internal matrix, priority & backup signals management, local & network groups, events management incl. calendar (Settings by embedded web application)
REAL-TIME CLOCK	
Retention time	> 5 years
Accuracy	±1 minute / month
Battery	VARTA CR2032 3V, 230mAh
LOCAL STORAGE	
Micro SD	SDXC
Capacity	Up to 2TB
File system	FAT16, FAT 32, VFAT (read/write) NTFS (read) Multi-partition up to 1
Playable audio files	mp3, ogg, WAV, FLAC, AIFF
Files analysis	65354 playable folders 65354 playable folders within each folder 65354 playable files within each folder
Folder hierarchy	Up to 8 containing the root directory
Sorting	UNICODE, in alphabetical order Up to 100 folders / files by folder Folders/files over 100 sorted in the FAT order
PHYSICAL	
Operating temperature	-10° to 50° C 14° to 122° F (performance may be reduced above 40 °C)
Operating humidity	5 - 85% RH, non-condensing
Storage temperature	-10° to 50° C 14° to 122° F
Storage humidity	5 - 85% RH, non-condensing
Installation options	Rack 19" installation & desktop
Included accessories	EU power cord, Multiplugs, Euroblock Connectors (inputs /outputs), Desktop feet, rack 19" installation hardware
Optional accessories	-
Dimensions (WxHxD)	482.6 x 88 x 410 mm. / 19 x 3.46 x 16.14 inches
Weight	9.3 kg / 20.5 lb
Shipping dimensions (WxHxD)	650 x 125 x 600 mm. / 25.59 x 4.92 x 23.62 inches
Shipping weight	12.3 kg / 27.1 lb

	Web GUI	WebGUI Home & Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
	WebGUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol	
HW	PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA			

8.2 Mechanical Diagram

8.2.1 VIDA-24Q

All measurements are in mm.

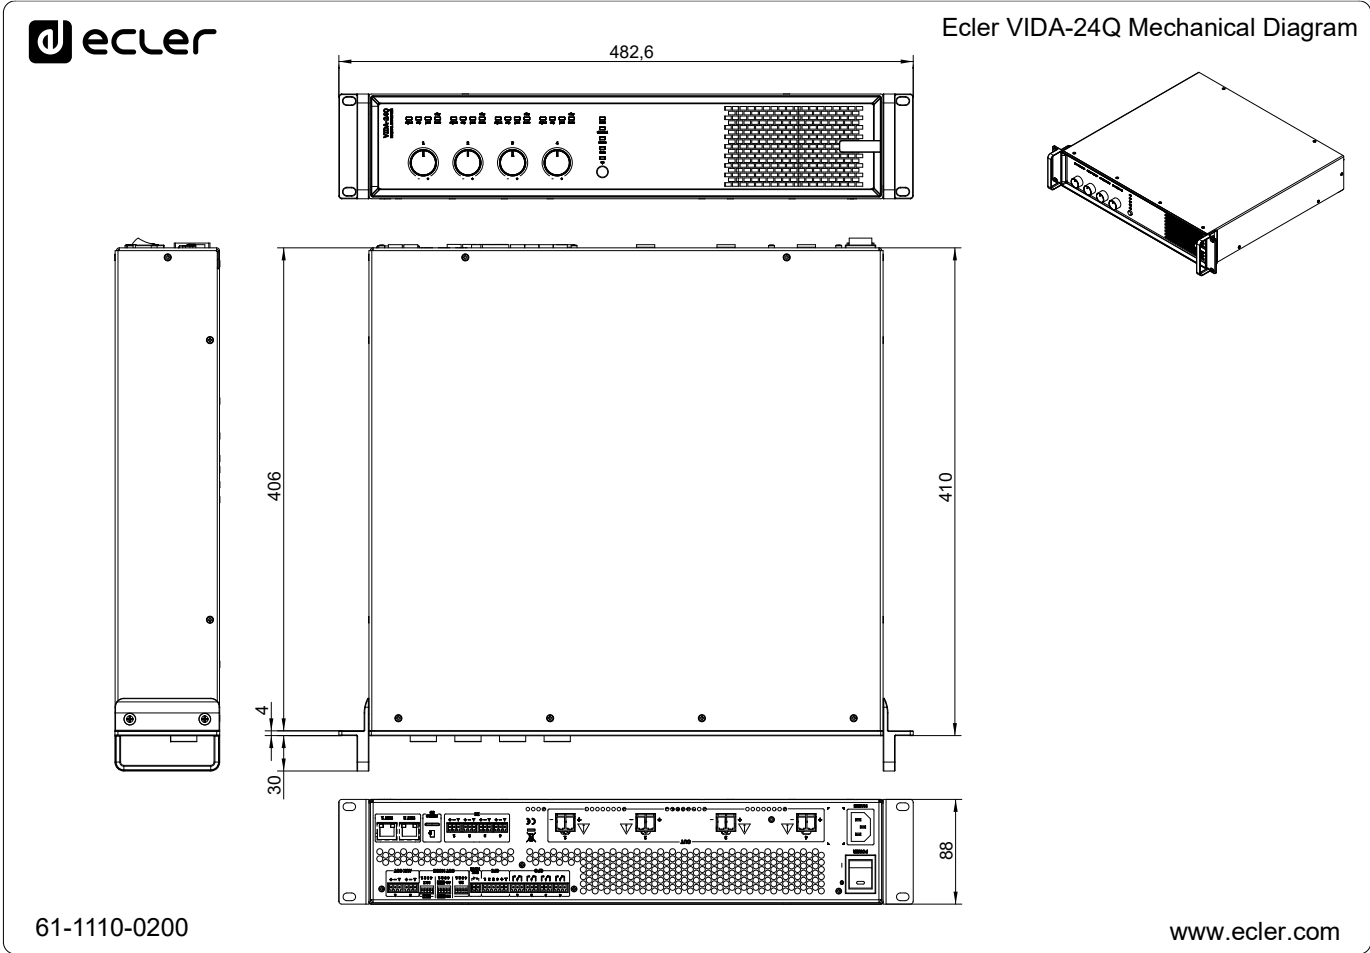



All the measurements are in mm

8.2.2 VIDA-16Q

All measurements are in mm.



Ecler VIDA-16Q Mechanical Diagram

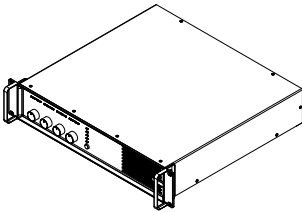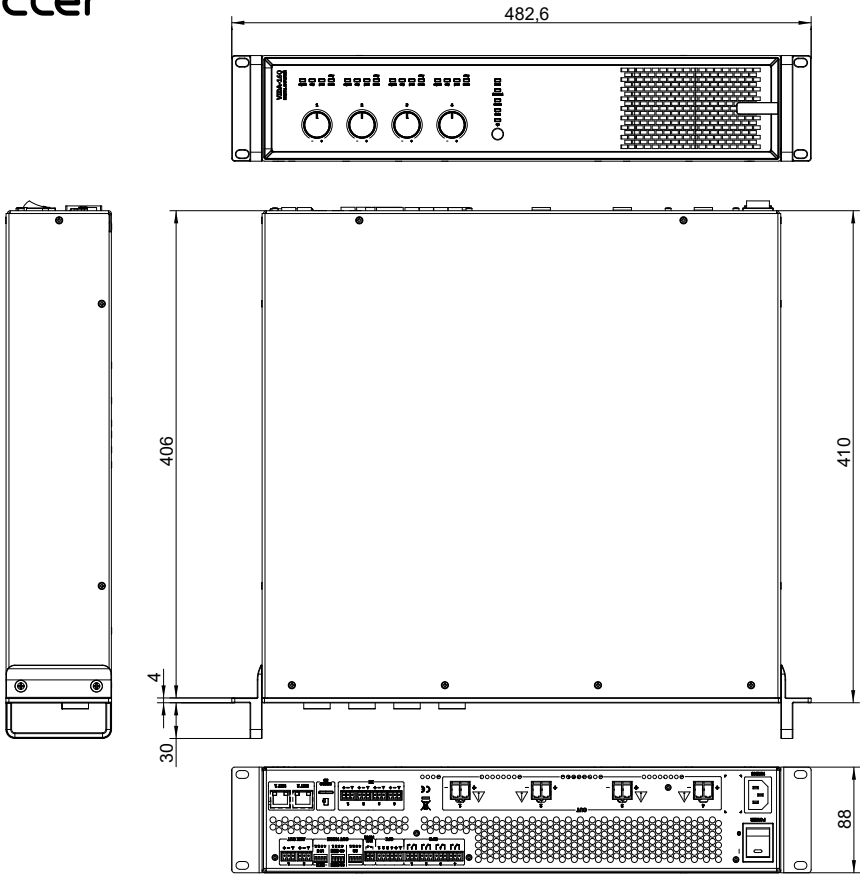

61-1108-0200

www.ecler.com

All the measurements are in mm

9. WebGUI

VIDA series digital amplifiers are configured and controlled through their embedded web application. The user interface can be operated via any web browser on any device: Windows, MacOS, Tablet or Smartphone¹.



ECLER VIDA is the user application that allows control of one or more VIDA series amplifiers on the same local network through customised user control panels set up by the system administrator. The app gives allows users to control volume, select sources, equalise, select playlists, control the internal audio player, select presets, and more. Exclusive panel for each user, fast and straightforward to create. There is also a tool for the administrator to start up the equipment for the first time.

Compatible with Ecler VIDA series amplifiers. An Ecler VIDA series amplifier is required to create user panels and publish them on the local network.

Available for iOS and Android. Download the **app free** from:



We recommend updating your browser to the latest version to ensure that the app functions correctly.



Demo version available. Visit www.vida.ecler.com and access the VIDA application online – **physical connection to a VIDA device is not required** – and explore the capabilities of these devices. Note that **some functionalities**, such as firmware update, will not be available and **require a physical connection to a VIDA device**.



¹Web application not optimised for Smartphone. We recommend using on PC or Tablet.

HW	Web GUI
WebGUI	Home & Updates
Connection	Settings
PRECAUTIONS	Status
WARRANTY & ENVIRONMENT	Routing
PACKAGE CONTENTS	GPOs
DESCRIPTION & FEATURES	VersaPower
PANEL FUNCTIONS	Groups
INSTALL & CONNECT	Player
START-UP & OPERATION	Panels
TECHNICAL DATA	APP

9.1 Updates

For a complete list of updates, please refer to the Release Notes files available in the Firmware/Software folders, located in the Software section for the corresponding model on our website www.ecler.com.

9.2 First steps

To access the VIDA web application from an external device (computer, tablet, etc.) using a browser, first make sure that both devices are physically connected to the same local area network (LAN), and configured within the same network range.

DHCP is the default network configuration mode. If you have a router/switch with a DHCP server (see the specifications for your device), network configuration is automatic so there is no need for you to do any re-configuration.

There are 3 ways to connect to the embedded VIDA web application:

9.2.1 Automatic connection using the Ecler VIDA user web app

1. Download the Ecler VIDA app from the app store for your device.
2. Connect the VIDA device to the router/switch using a CAT5 or higher cable (NET1 Ethernet port on the VIDA device)
3. Connect your Smartphone to the same local network as the VIDA device over WiFi.
4. Open the app and click on "Setup Device". Follow the instructions.
5. A list of all VIDA devices on the network will be shown. When you click on a listed device, you can see further information and its web connection and IP address.
6. Copy one or more links and paste them into your browser, on the same or another device.

9.2.2 Automatic connection using a computer

1. Connect the VIDA device to the router/switch using a CAT5 or higher cable (NET1 Ethernet port on the VIDA device)
2. Connect your browser-equipped device (computer, tablet, etc.) to the same local network (router/switch). You can do this over a wired or WiFi connection, depending on your network device and computer/Tablet.
3. Check the label on the back panel or the additional label in the packaging and enter the web address shown here (<http://vida-xxQ-xxxx.local>) into your browser. The last 4 digits of the web address are the same as the MAC address of the device.



4. Enter that address in your browser.



Another way is to find out the IP address for the device via the internet or your router/switch's settings if you can access them using the Ecler VIDA user app.

9.2.3 Manual connection

If you do not have a DHCP server, don't know whether you have one, or just want to make a point-to-point connection with a computer:

1. Connect the VIDA device to the computer using a CAT5 cable or higher (NET1 Ethernet port on the VIDA device).
2. If the VIDA device cannot find a DHCP server, it will be able to connect to an automatic private IP addressing (APIPA) and subnet mask from NET1; the device will select its own IP address in the address range 169.254.1.0 to 169.254.254.255 and will also be reachable via the mDNS service.
3. Otherwise, the device will also remain accessible via the auxiliary IP. Enter the IP address 192.168.0.100 in your browser.

9.2.4 Connection to EclerCLOUD

EclerCLOUD is the cloud platform where you can remotely connect to VIDA via the Deep Dive function, or monitor what is happening to the device in real time from anywhere in the world.

9.2.4.1 To connect to EclerCLOUD, you need to:


- Connect the device to the mains.
- Connected it to the network via a router or network switch.
- Have the equipment switched on.

In addition, you must be registered in EclerCLOUD and have an organisation and access to add new devices. To learn more about these steps, please access the EclerCLOUD user manual on our website at www.ecler.com.


9.2.4.2 How to add a device to EclerCLOUD

1. Method 1: add a device from EclerCLOUD

To add a device to EclerCLOUD, **log in to your User account and click on "Devices"** in the main menu. Then click on the **"Add device"** button in the top right corner.




You will be presented with a screen to configure the new device. **The only essential parameter to add a new device is its identification (ID), which is given and is unique for each device.**

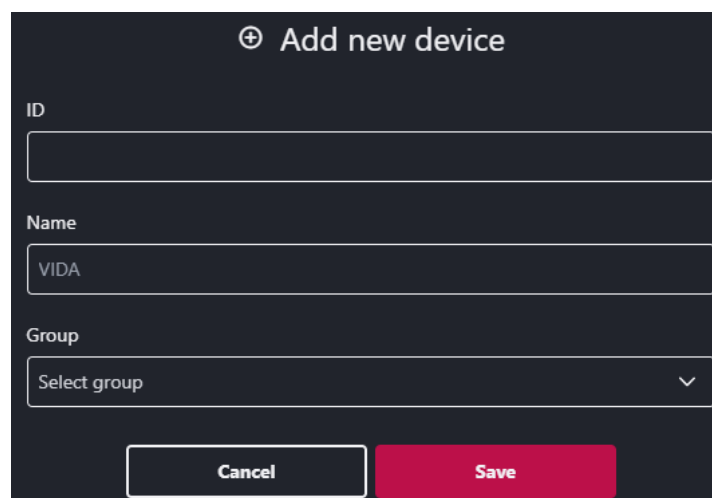

The device ID can be found on the device page (such as the example shown in the figure below of a VIDA device, labelled "Device ID"). **Make sure that the**

connection is enabled (Enable Connection set to ON). The ID is a 16-digit alphanumeric code, unique to each device.

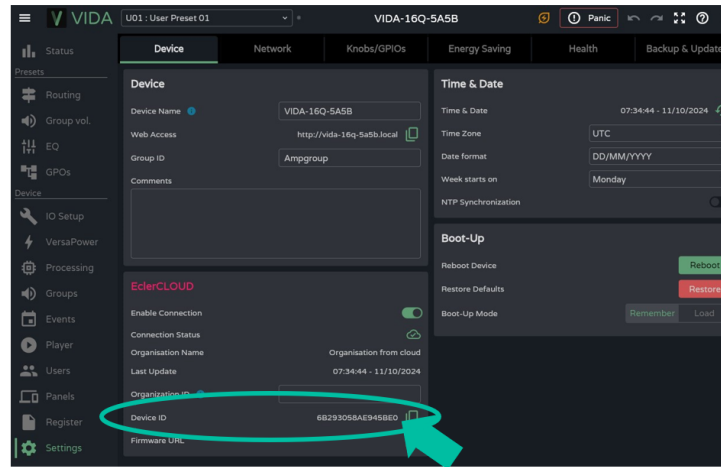


Registering a device

Once the device is connected to the internet and you have located its ID, you can proceed to register it in EclerCLOUD by entering the ID on the page shown in the figure below. Assign a name to the device for easy identification and then save the changes.


 EclerCLOUD can support many devices at the same time, we advise you to name and organise your devices in groups so that you can easily find them later.

If you have performed all the above steps correctly, you should have the **device connected to EclerCLOUD without pairing**.

To pair it, access the device menu and enable the connection. You can verify that the devices have been paired if on the device page the "Connection Status" is shown as online and in the cloud status it is shown as **APPROVED**.

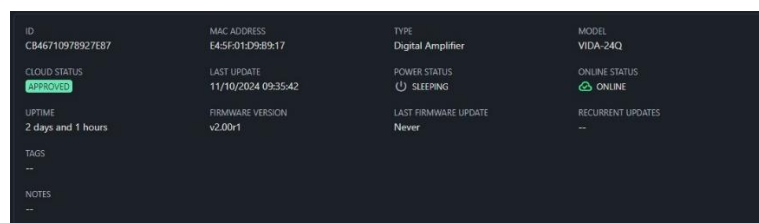

Cloud status in EclerCLOUD.

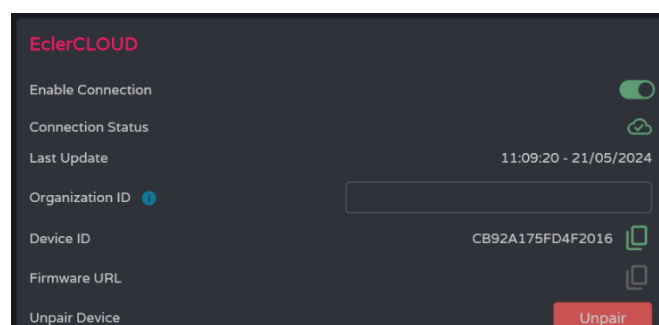


Connection status on a VIDA series device.

2. Method 2: add to EclerCLOUD from the device itself


Access the Cloud tab on your device, under the settings tab. Within the tab you will see the Organization ID box.

Log in to EclerCLOUD from Administrator mode and access "Organization". Within the page you will see the "Organization ID". Copy the text from the box and insert it into the empty box on the device page.

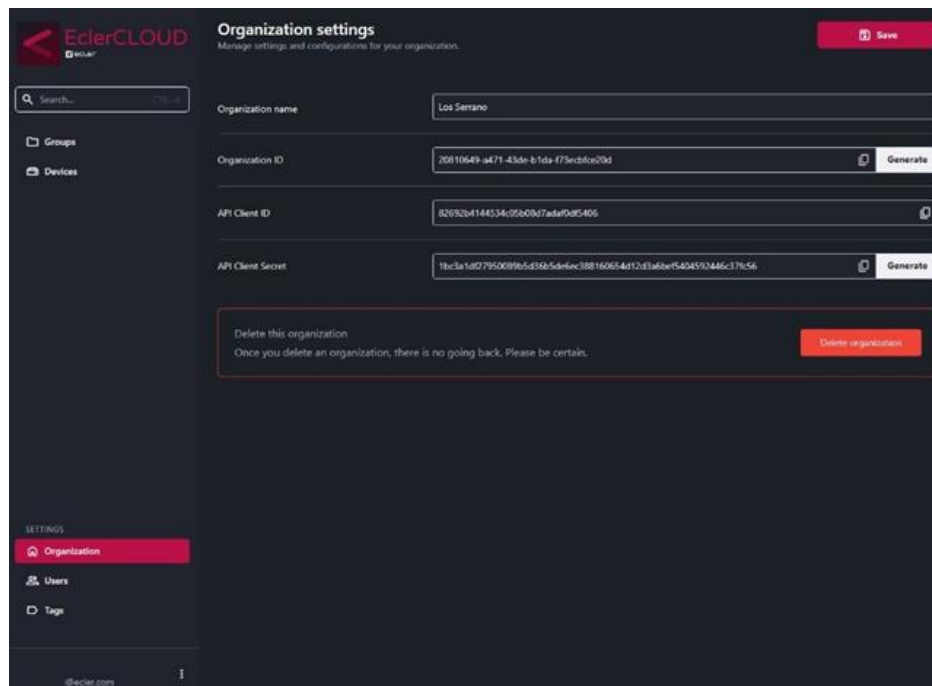

Enable the connection and:

- The device will be linked to your Organization and can then be moved to the desired destination. The "Organization ID" can be found if you have Administrator access in EclerCLOUD, on the left side tab under "Organization".
- The device must be approved. To do this, go to the EclerCLOUD device "Unapproved" screen and approve the connection so that it is ready for operation.
- Once the device has been approved, you will be able to edit and monitor it.

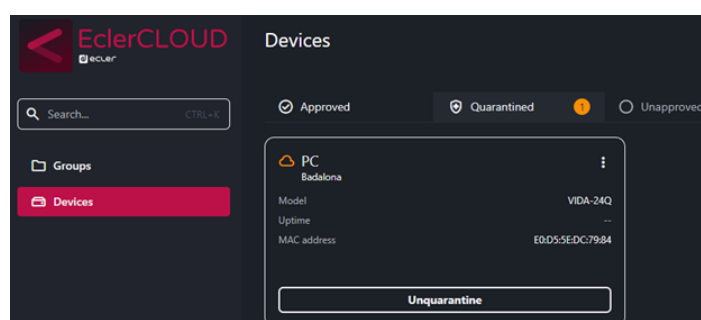


9.3 Login



There are **2 profiles that can access the app**

1. **Administrator:** An administrator has access to all functions of the VIDA device and can configure any amplifier parameter, event, peripherals, etc. An administrator creates users and control panels for the Ecler VIDA user app.
2. **User:** users (non-administrator users or end-users of the system) have limited access. The only functions available to normal users are controls (e.g. controlling the volume of an output) but no configuration functions.

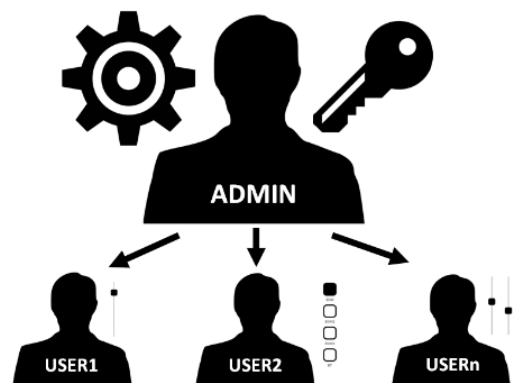

Administrator and user access **are password-protected**. The **default** administrator access credentials are:

- **Username:** admin
- **Password:** admin



An administrator can change their access password in the VIDA web app and manage users and passwords.



Username and passwords are case-sensitive.

9.3.1 Keep me logged in

When this function is active, a new login will not be required each time the VIDA web app is opened. The LOGIN page will not be displayed and the last page visited will be displayed. To deactivate, log out of the web app.

9.3.2 Forgot password

Allows users to **change their password** and the administrator to **restore login credentials** (name and password) if forgotten.

To reset the administrator credentials, enter them in the Reset Passwords dialogue box:

- User name: admin
- Password: reset



Administrator access credentials will be restored to the default values: admin/admin.

9.3.3 Public Panels

Access to **control panels, public profile** (no login credentials required). These control panels must be created by an administrator. See Panels chapter for more details on public control panels.

9.3.4 Setup

Quick start-up and/or discovery of VIDA devices on the same local network.



To set up an installation with several VIDA devices, access the web app of any of those devices and use Setup to find the network information for the others and access them easily.


9.4 Navigation

The **app screen** has 3 parts.



1. **App bar:** contains important information, quick action buttons and the app configuration menu.
2. **Main menu:** contains the different configuration pages.
3. **Page:** Displays all configuration options within the chosen menu option. A menu entry may contain different tabs with different pages.

9.4.1 App Bar

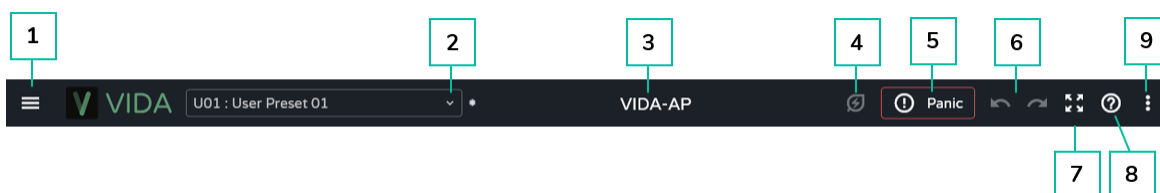


1



Expand or collapse main menu

2

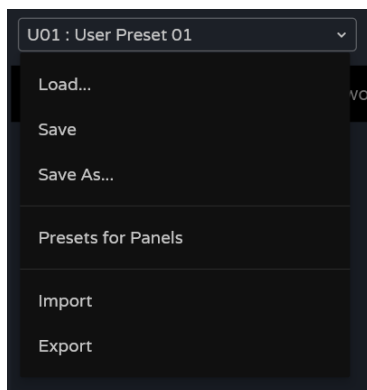


Management of user presets:

- **Load:** opens a window in which you have to select the preset you want to load.
- **Save:** saves the settings in the current preset.
- **Save as:** opens a window to save the settings in the preset selected. It can be given a name.
- **Presets for panels:** the presets selected in the window will be available to users. They can be uploaded from a control panel.
- **Import:** allows you to import a preset from your computer.
- Export allows you to export/download a preset to your computer.

! Presets are settings for Routing, GEQ and GPO status. **Only changes** to these settings **will be uploaded or saved**, the **settings for individual Device cannot be changed**.


3

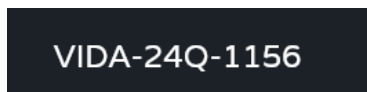

Device name: name of the device. By default, the last 4 digits of the MAC (NET1) are shown.

! You should not give the same name to more than one device on the same local network. Duplicate names could cause conflicts on the network and cause malfunction in the network functions of a device.

4



Power saving mode activated (Sleep Mode). When power saving is activated, pressing the button opens a window that allows exit from power saving mode.



Power saving mode deactivated (Running Mode). The device is in operation.

5



Panic button activated: mutes all outputs.



Panic button deactivated.


6



Undo and redo buttons.



9

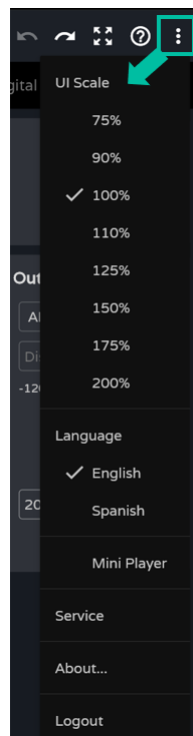


- **UI Scale:** set the display size for the GUI.

- 43

9.5 Settings


This is where to configure the **general settings for the device**.

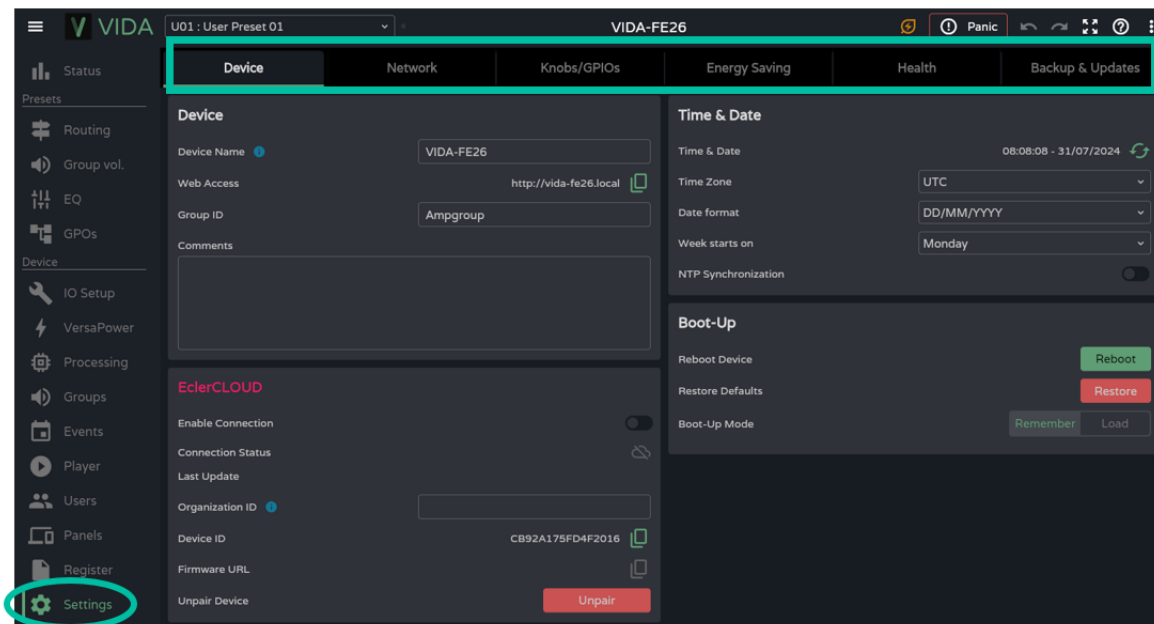

- Device
- Network.
- Knobs/GPIOs
- Energy Saving
- Health
- Backup and Firmware.

9.5.1 Device

General settings.

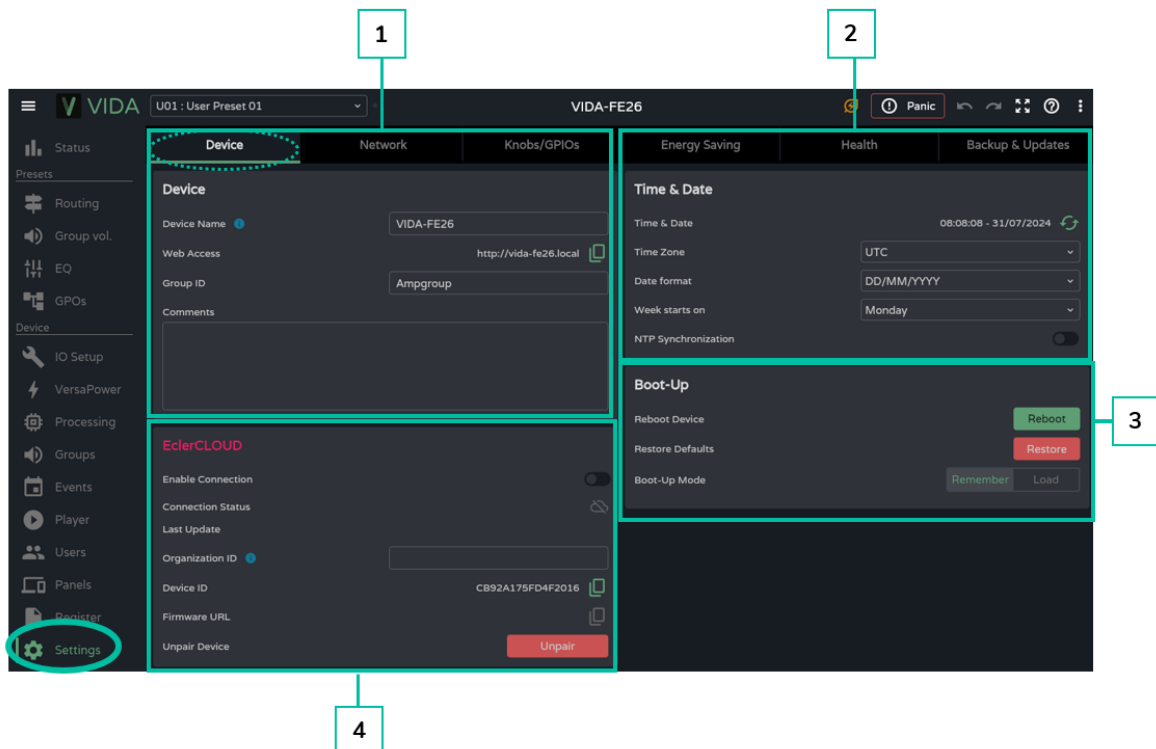

1. Device

- **Device name:** The name is used to identify the device on the network (NET1 and NET2), and identifies it as a Dante/ AES67 device, as well as mDNS (to resolve hostnames to IP addresses). The info button shows the requirements for a Dante/ AES67 name.
- **Web Access:** access to the configuration web page using the device name. Copy and paste the address into your browser to open a new instance of the web app.
- **Group ID:** Identifying name of the group of VIDA amplifiers on the same local network. Amplifiers with the same group name can use the same Net Groups. There can be the same number of Net Groups (up to four Net Groups) on a network as there are Group IDs on the network.
- **Comments:** space for comments and notes about the amplifier, installation, configuration, etc.

2. Time & Date

- **Time & Date:** time and date on the device.
- **Time Zone:** selection of time zone.
- **Date Format:** date format.
- **Week starts on:** first day of the week.
- **NTP Synchronization:** enables or disables time synchronization with NTP server. Internet connection required. Enable this functionality for automatic time synchronization on the device.
- **NTP server:** address of the NTP server.

3. Boot-Up

- **Reboot device:** **reboot the device.** The device will keep its current configuration on reboot.
- **Restore defaults:** **reverts to factory settings.**



The current network configuration and device name will be lost. May cause disconnection of the device from the local network.

- **Boot-up mode:** **selects the mode** in which the **device starts** after shutdown:
- **Remember:** **starts up** with the **configuration at shutdown.**
- **Load:** allows you to **select the preset for device start-up.**


4. EclerCLOUD

This is Ecler's cloud platform that allows you to link devices to the cloud to monitor and connect to devices remotely.

- **Enable connection:** this allows you to enable/disable the connection to EclerCLOUD.
- **Connection status:** this shows the status of the connection to EclerCLOUD (it can be in the following states: disconnected, connected and quarantined).
- **Last update:** this indicates the last update of the CLOUD.
- **Organisation ID:** this is a value that can be extracted from the CLOUD organisation and is used to link the device.
- **Device ID:** this is a 16-digit hexadecimal value that identifies the device and is used to link it to EclerCLOUD.
- **Firmware URL:** copy the link of the firmware URL destination.
- **Unpair device:** this is used to unpair the device from the EclerCLOUD platform.

9.5.2 Network

Device **network settings and search function.**

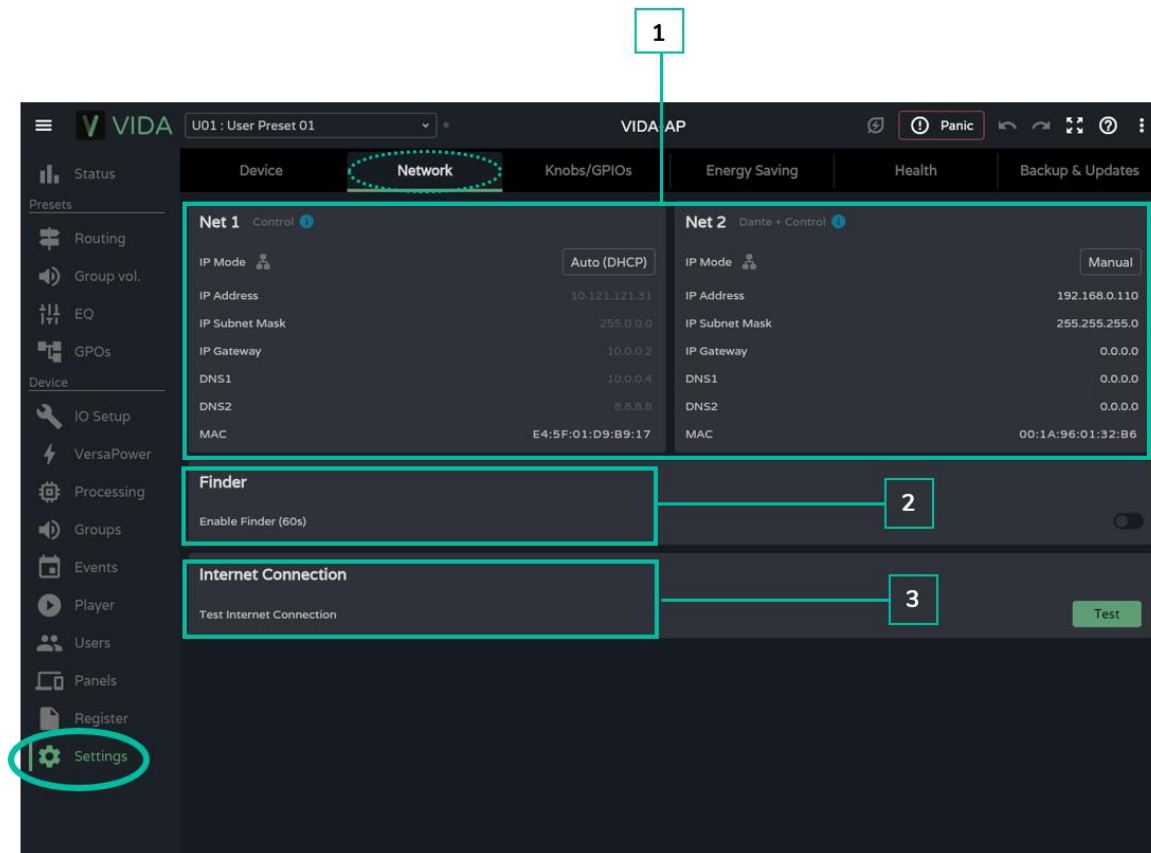

1. VIDA devices have **2 RJ-45 Ethernet connectors on the rear panel**. Each is for an **independent network interface**.

- **NET 1:** network interface for monitoring. Communication with web app, user control application and third party integration protocol. The option if Dante/ AES67 digital audio send and/or receive is not used.
- **NET 2:** Network interface for control and Dante/ AES67 digital audio send and receive. Dante/ AES67 digital audio, communication with web app, user control app and third party integration protocol. The option if you use Dante/ AES67 digital audio send and/or receive.



The **NET 1 and NET 2, networks can be configured independently**. They can be connected and operate simultaneously, for example, to isolate Dante/ AES67 digital audio traffic from other traffic on the network.




If the **NET 1 and NET 2 networks are used simultaneously, they should be configured so that they are on different networks**. If the NET 1 and NET 2 networks are connected on the same local network, network conflicts may arise that impact network functionality.



Network cable not connected.




Network cable connected.




Button that **opens settings for network parameters**. Shows IP addressing:

- **Auto (DHCP):** automatic addressing. DHCP server required. Default value.
- **Manual:** manual addressing.

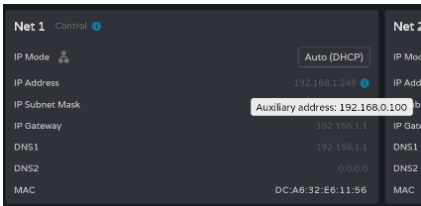

Network parameter factors:

- If **NET 1** is configured as **Auto (DHCP)**, and there is **no DHCP server**, it will initially be able to connect to an automatic private IP addressing (APIPA) and subnet mask from NET1; the device will select its own IP address in the address range 169.254.1.0 to 169.254.254.255 and will also be reachable via the mDNS service. If not, it will automatically be configured with an auxiliary IP, accessible through the address: 192.168.0.100. Use that address if you are connecting point-to-point with a computer. Remember that in this case you will have to manually configure the IP address of your computer so that it is in the same range (e.g. 192.168.0.99, mask 255.255.255.0).

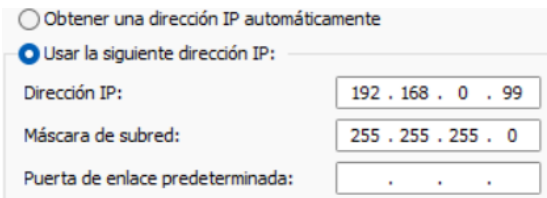

- If the **NET 1** and **NET 2**, networks are connected, access to the Internet will be through the Gateway of NET 1 and NET 2 will have a display value of 0.0.0.0.
- The DNSs of NET2 are the same as the NET 1 DNSs when both networks are connected.


2. **Finder:** Function to distinguish the device from other devices in the same location.



💡 When the **Finder** function is enabled, the front panel LEDs will flash for 60 seconds. It is then automatically deactivated.




3. **Internet Connection:** Internet connection check.



9.5.3 Knobs/GPIOs

Configuration of front panel potentiometers, GPIs and GPOs.

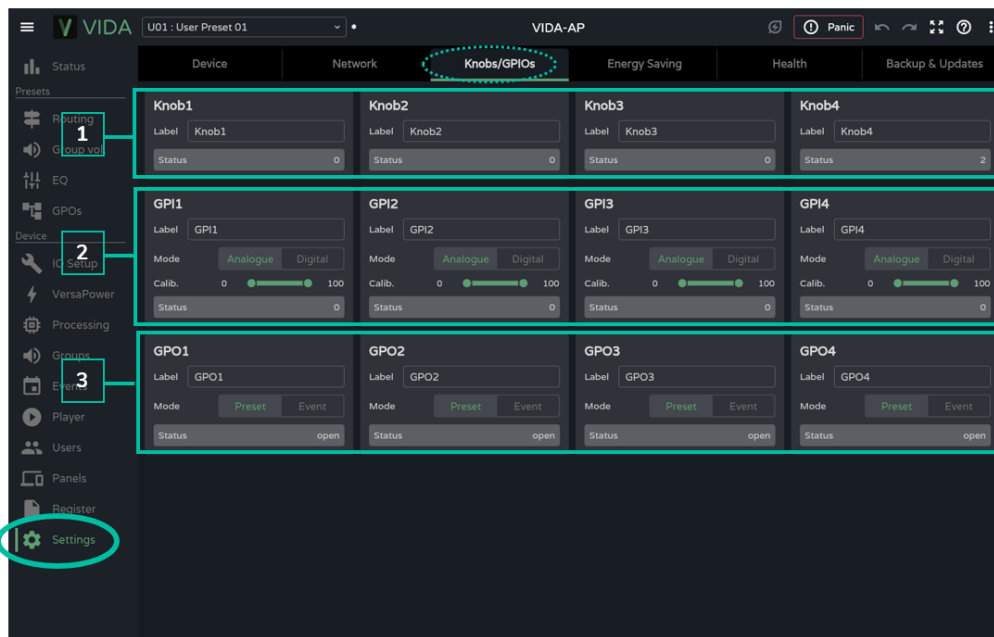

1. Knobs

Allows individual configuration of the rotary controls on the front panel:

- **Label:** label, for easy identification. The label has to be different for each of the four potentiometers.
- **Status:** indicates the status of a potentiometer or GPI. Values are in the range 0 (minimum)-100 (maximum). GPOs show the values open or closed.

2. GPIs

Allows individual configuration of the rear panel GPI ports:

- **Label:** label, for easy identification. It must be unique for each GPI.
- **Mode:** Analogue or digital mode:
 - **Analogue:** Analogue for volume control. Rotary controls 0-10VDC.
 - **Digital:** for actions like signal muting, loading presets or playlists, activating GPO and Play/Pause. Buttons, push buttons, contact closures.
- **Calib. (GPI calibration):**
 - Place the potentiometer at the end where it gives a minimum reading. Read the Status value and set the minimum value of the "Calib" control to the same value.
 - Place the potentiometer at the end where it gives a maximum reading. Read the Status value and set the maximum value of the "Calib" control to the same value.

3. GPOs

Allows individual configuration of the rear panel GPO ports:


- **Label:** label, for easy identification. It must be unique for each GPO.
- **Mode:** Preset or event mode.
 - **Preset:** the active or inactive status of the GPOs is stored in the Presets, so that recovering one of them recovers the combination of active/inactive GPOs at the time of saving. GPOs configured as preset GPOs are not available for modification via events.
 - **Event:** The active or inactive status of GPOs is determined by events. GPOs configured as event GPOs are not available for modification via presets.

9.5.4 Energy Saving



The VIDA series performs a **fully programmable energy saving function** that **reduces energy consumption by up to 95%**, which can help save money.

See below for the different types of amplifier power saving mode settings.

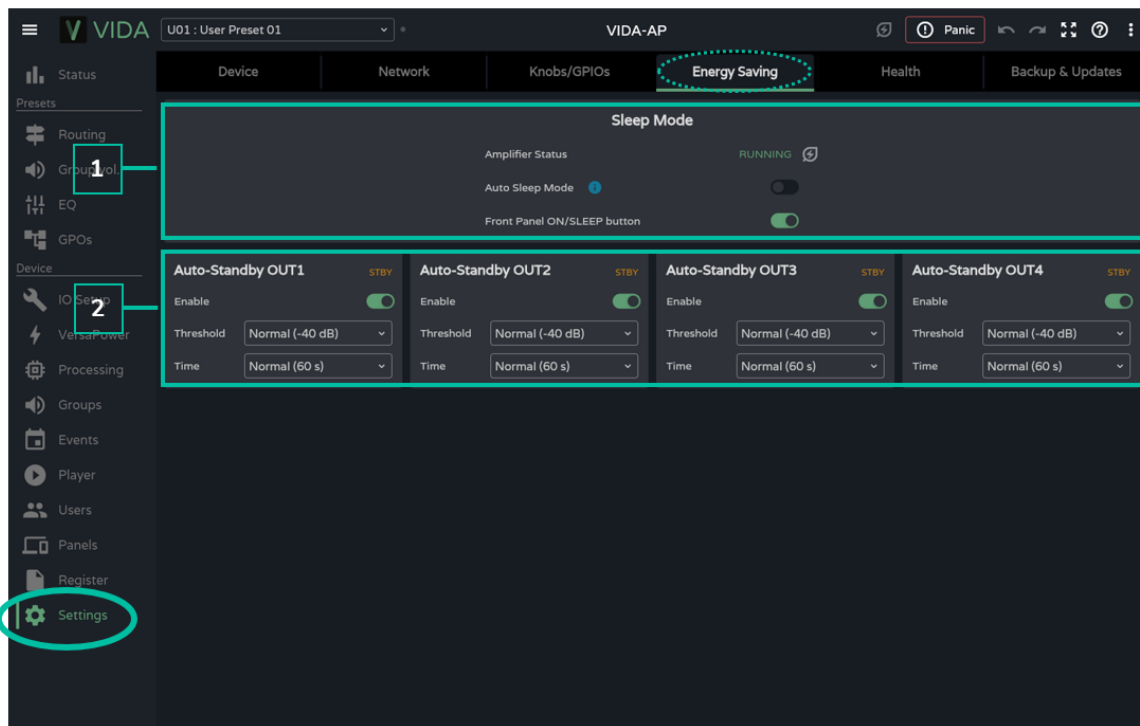

1. Sleep Mode

VIDA amplifiers have an energy saving mode where power draw is very low.

- **Amplifier status:** shows the current status of the amplifier:
 - **Running:** normal operation.
 - **Sleeping:** sleep or power-saving mode. The amplifier can enter power-saving mode in 2 ways:
 - **Manual:** by pressing the ON button on the front panel, or via internet configuration with the "power" button  on the STATUS page.
 - **Automatic:** by activating Auto Sleep Mode.

- **Auto Sleep Mode:** When activated, the amplifier will enter power-saving mode (Sleeping) when all 4 amplified outputs are in Standby and will automatically return to normal operation (Running) when:
 - An amplified output is not in Standby mode.
 - The button on the front panel is pressed. If enabled.
 - The "Power" button on the STATUS page is pressed.
 - An event or user control causes one of the amplified outputs to exit standby.



The **digital inputs and outputs are disabled when the device is in power-saving mode.**



If any of the analogue inputs carries an audio signal, even if not assigned to a Source, the device will remain operational and **will not enter power saving mode.**

- **Front Panel On/Sleep Button:** Enables or disables the ON/SLEEP button on the front panel to prevent unwanted operation.



To switch the device off completely, use the "Power" button on the rear panel.

2. Auto Standby

Configuration of auto standby for amplified outputs independently.

- **Enable:** enables/disables the auto standby function for the output.
- **Threshold:** standby activation threshold setting.
- **Time:** waiting time.




For an output to enter standby, the audio signal at the output must remain below the specified threshold for the specified time.



If any of the outputs have auto standby disabled, the Auto Sleep function will not work properly. Auto standby must be enabled on all 4 amplified outputs.

9.5.5 Health

Amplifier health monitor.

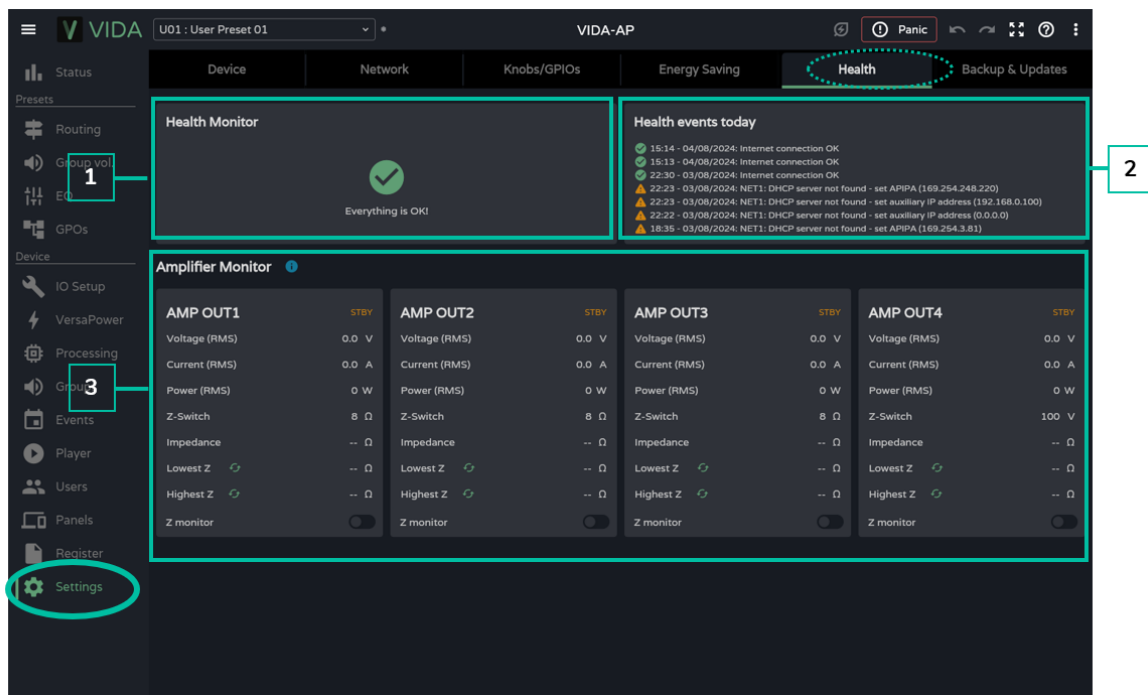

1. **Health Monitor:** Summary of the amplifier's health status:

- **OK:** everything is OK. There are no errors or if there were, they have been resolved.
- **Warning:** attention is required, an error has occurred.

2. **List of daily incidents:** shows errors, recovered errors, warnings and system failures that have occurred since 00:00.

The **health monitor reports system errors (failures)**, which could lead to a major **failure of the device**, i.e. warnings for over voltages, temperatures, etc.

The event list, in **addition to system errors**, shows a list of errors and warnings related to the **configuration of the device**, that are not a major failure of the device, but may lead to a malfunction.

- The **health monitor may indicate that all is well**, and at the same time display errors and warnings in the event listing. This means that the **health of the system is not compromised**, but that there may be causing a **malfunction**. For example, an Internet connection fault is causing the firmware not to update automatically.
- The health monitor **may indicate that the device requires attention and at the same time not display any errors or warnings**. This means that a **failure that compromises the health of the system occurred before 00:00**. Please view the log for more information.


3. **Amplifier monitor:** The monitor displays the most important amplifier output parameters and has an in-built impedance monitor.

- **Voltage (RMS):** RMS voltage, in volts.
- **Current (RMS):** RMS current, in amperes.
- **Power (RMS):** RMS power, in Watts.
- **Z-Switch:** position of the rear panel impedance selector.
- **Impedance:** value of the impedance at the output, in ohms.
- **Z-monitor:** enables impedance monitoring at the output. If enabled, an error notification will be sent when the impedance exceeds the set thresholds or a short-circuit or open-circuit situation occurs. This functionality is also available via TP-NET, to communicate the status of the amplifier line to third parties (see chapter TP-NET Protocol for details):
 - **Z-min:** lower impedance threshold.
 - **Z-max:** upper impedance threshold.



The impedance monitor is an informative tool. The protections against over-current situations in the amplifier are always enabled (PROTECT), regardless of whether the impedance monitor is enabled or not.


An indicator in the **upper right corner of each amplifier shows its output status:**

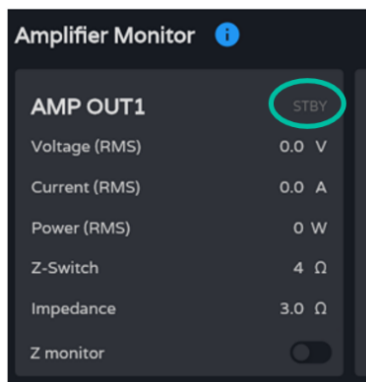

- **STBY:** output on Standby.
- **0W:** output set to 0 W in Smart VersaPower.
- **EXTM:** output affected by GPI External Mute.
- **NETM:** the output belongs to a network group that is muted.
- **LOCM:** the output belongs to a local group that is muted.
- **GENM:** the output belongs to the general volume group that is muted.
- **MUTE:** the output is muted in the audio matrix.

9.5.6 Backup and Firmware

Upload and download of **configuration files and backups** and update of amplifier **firmware**.

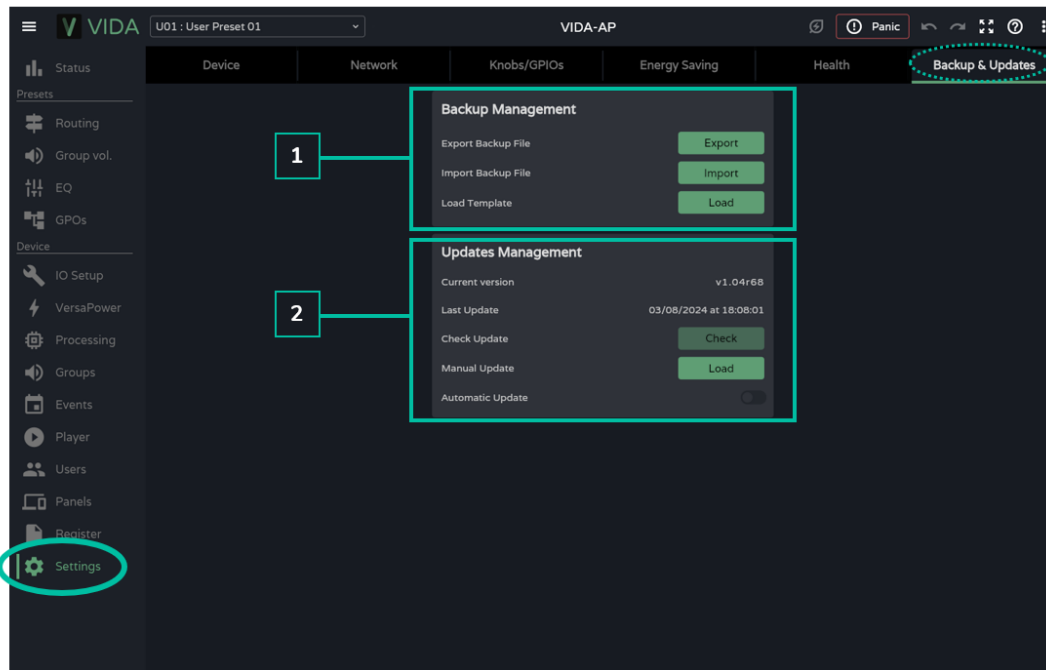

1. Backup Management

A backup is a **security copy or configuration file of the device**. A replica of the status and configuration of the amplifier.

- **Export backup file:** saves a backup copy of the amplifier on the device that is running the app (e.g. computer).
- **Import backup file:** upload a backup file to the amplifier from the device that is running the app (e.g. computer).
- **Load Template:** loads a template. A default configuration and status for quick start-up.

Templates do not change network parameters or device settings (Settings/Device).

When a configuration file is uploaded(backup), all device parameters, including network parameters, are overwritten. Care must be taken when uploading a configuration file because access to the web app may be lost.

The configuration files are unique to each model. So, a configuration file of a particular model of the VIDA series cannot be loaded into another model of the series.

2. Firmware Management

Reports the **current firmware version of the amplifier** and management of firmware updates.


- **Current Firm. Version:** current version of the device.
- **Last update:** date of the last update.
- **Check update:** check online for recent updates.
- **Manual update:** manual update
- **Automatic update:** if enabled, the device will be updated automatically:
 - **Boot-up:** check if there is an update at each start-up. If an update is available, it will be installed.
 - **Scheduled:** scheduling the checking of updates. It will check whether there is an update at the specified interval if the device is in operation. If an update is available, it will be installed.

 **The automatic firmware check and update require an Internet connection.**

 **It is recommended to schedule firmware updates outside the normal working hours for the device.**

9.6 Status

Overview of **amplifier status, display and control of basic parameters.**

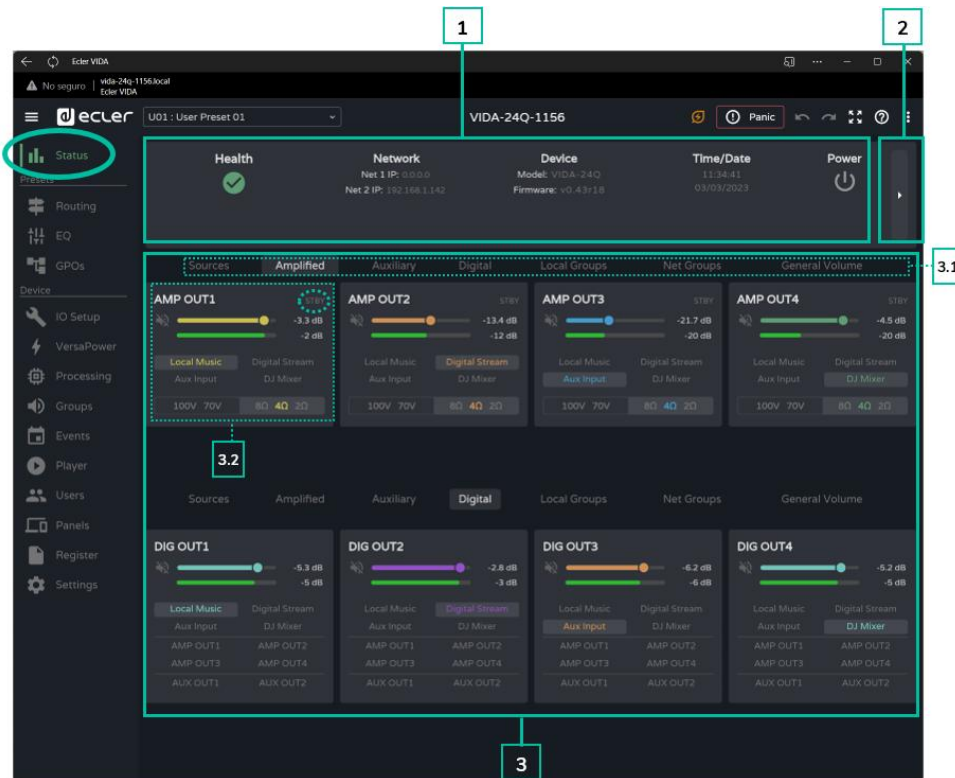


1. General

- **Health:** summary of the health status of the device.
- **Network:** summary of the network configuration.
- **Device:** model and firmware version of the device.
- **Time/Data:** time and date of the device.
- **Power:** ON/Sleep button.

2. Monitor Hardware

The **button on the right** shows the **hardware monitor view** and display a replica of the **front panel** and the status of the hardware connected to the device.

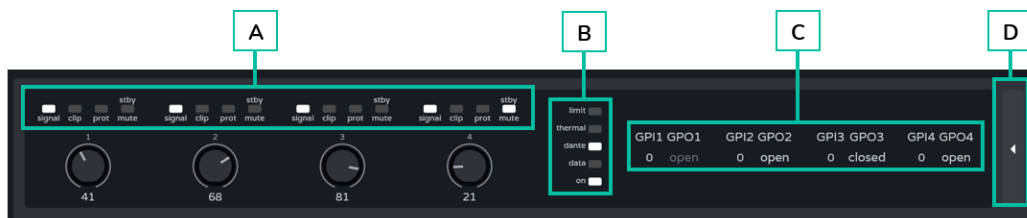

- Indicators for presence of signal** (signal), saturation (clip), protection (prot), standby (stby) and mute for each amplified output and the value set on the front panel rotary control.
- Indicators for limiter** (limit), thermal protection (thermal), Dante/ AES67 activity, network activity (data) and amplifier operation (on).

- C. **GPIs:** indicates the reading values for the GPI and GPOs: shows the status of the GPO, open or closed. If greyed out, it means that the GPO is event-driven and if lit, it means that it can be changed via presets.
- D. The **button on the right** returns to the overview.


 **For more information on the front panel** of the amplifier, see chapter Panel Functions.

3. Signal monitor

- 3.1 The top selector allows you to change which signals are displayed.
- 3.2 Display and control of a signal. The picture is different depending on the group selected but all have the same layout.
- **Label:** to distinguish it from other signs. Clicking on Label takes you to the configuration page.
 - **Volume and VU meter** for the signal.
 - **Source selected:** clicking in a source takes you to the signal routing page.
 - **Impedance selector monitor:** shows the impedance selected on the commutator on the rear panel.

 **For safety reasons, the selected impedance cannot be changed via the web app:** because an unwanted change to impedance could harm the equipment.

An indicator in the upper right corner of each amplifier shows its output status:

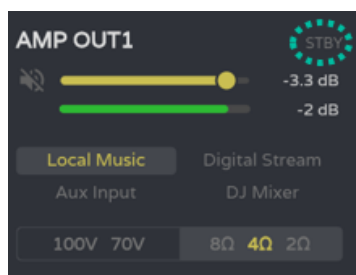

- **STBY:** output on Standby.
- **0W:** output set to 0 W in Smart VersaPower.
- **EXTM:** output affected by GPI External Mute
- **NETM:** the output belongs to a network group that is muted.
- **LOCM:** the output belongs to a local group that is muted.
- **GENM:** the output belongs to the general volume group that is muted.
- **MUTE:** The output is muted in the audio matrix.

9.7 Routing

Signal routing for the amplifier.

The routing of the amplified and auxiliary outputs **is independent, and can be configured as follows**:

- **Mixer**: allows the mixing of several sources in the same output. Outputs configured as a mixer will appear in the Mixer/Matrix window.
- **Zoner**: allows the routing of sources. It is not possible to mix sources on the same output; however, a source selector is built into each output. Outputs configured as zoners will appear in the Zoner window.

Configurable matrix:

- 4x6: 4 input sources, 6 outputs (4 are amplified outputs - OUT - and 2 are auxiliary outputs - AUX-).
- 4x4: 4 input sources, 4 amplified outputs (amplified outputs configured as mixer, auxiliary outputs configured as zoner).
- 4x2: 4 input sources, 2 auxiliary outputs (amplified outputs configured as zoners, auxiliary outputs configured as mixers).




The **digital outputs always operate in zoner mode** as an audio signal router.

In VIDA, **there are several types of input signals**:

- 4x Analogue inputs: balanced line inputs.
- 4x Digital inputs: Dante/ AES67 digital audio inputs.
- 1x Audio player.
- 1x Signal generator.



A Source is the combination of two input signals, a primary and a secondary signal. There can be no secondary. In VIDA, **4 independently configurable sources are available**. Sources are the input signals to the audio matrix (mixer mode) or the sources available on the router (zoner mode).

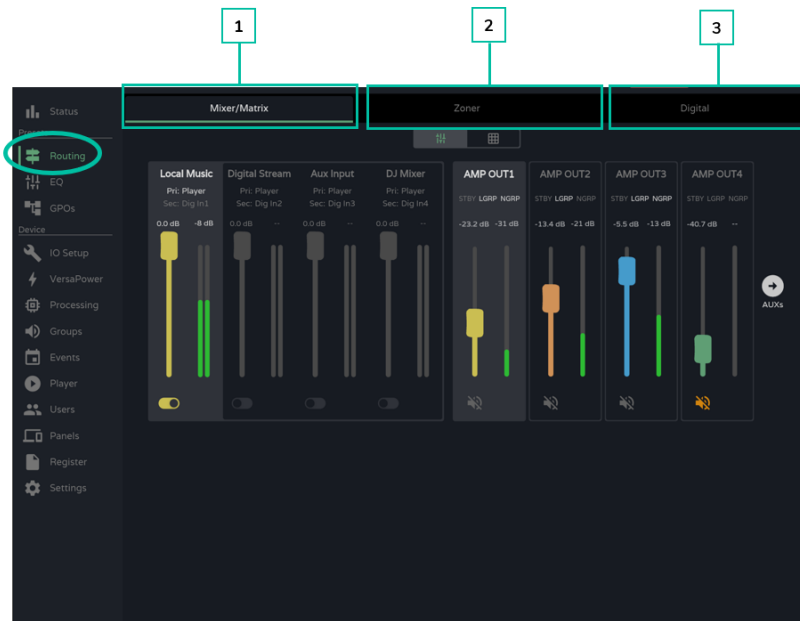


1. Mixer/Matrix

Matrix view selector:



Single **view** / Full view.

Mixer View

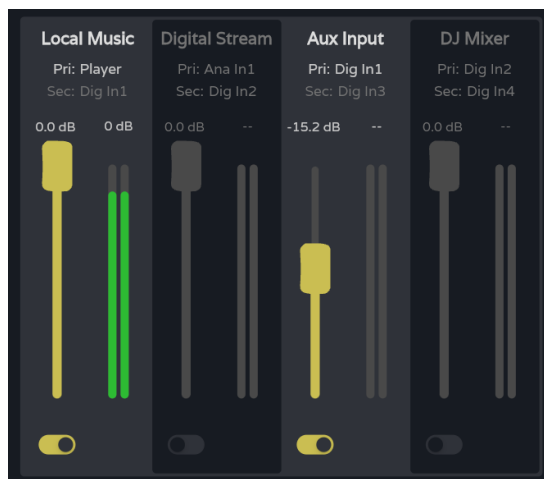

Crosspoint section for the selected output. It takes on the colour assigned to the corresponding output. From top to bottom:

- Source **Label**.
- **Pri:** input_n / **Sec:** input_m, primary and secondary source signals. The signal currently on the source is illuminated.
- Crossover point **volume control** and VU meter.
- **Enable/disable the crossover point** at the output. Sources with the crossover point enabled are mixed at the corresponding output.



Control + click on a fader to reset to default value (0dB).

The **VUs** change colour depending on the signal level:

- **Green:** below 0dB.
- **Orange:** 0-18dB (headroom).
- **Red:** clip, above 18dB, signal saturation.

Output selection section. From top to bottom:

- **Output Label.**
- **Status LEDs:**
 - **STBY / MUTE:** shows the standby status of the output (if amplified) and whether it is affected by any group or external MUTE.
 - **LGRP:** local group indicator. If lit, it means that the output belongs to at least one local group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
 - **NGRP:** Network Group Indicator. If lit, the output belongs to at least one network group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
 - **Volume control for the output** and VU meter.
 - **MUTE button**, to mute the output.

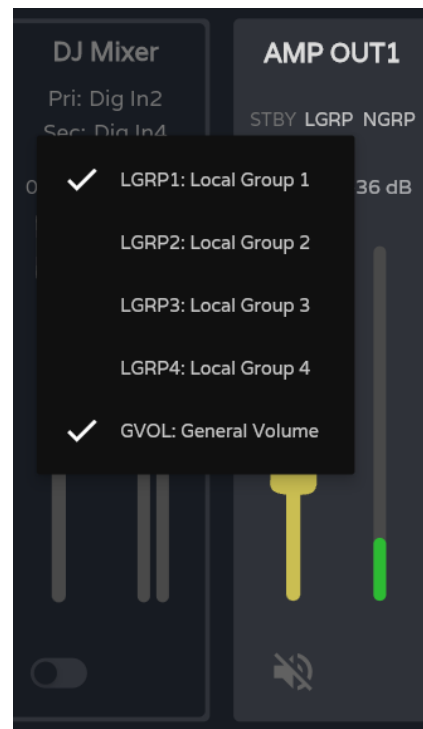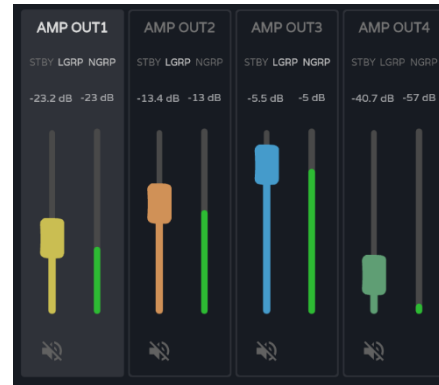


STBY indicator:

- **STBY:** output on Standby.
- **0W:** output set to 0 W in Smart VersaPower.
- **EXTM:** output affected by GPI External Mute.
- **NETM:** the output belongs to a network group that is muted.
- **LOCM:** the output belongs to a local group that is muted.
- **GENM:** the output belongs to the general volume group that is muted.
- **MUTE:** The output is muted in the audio matrix.




If **both outputs are in Mixer mode**, the AUXs button appears and shows the mixer window for the auxiliary outputs.





The OUTs button on the auxiliary output mixer **returns to the mixer for the amplified outputs**.

Matrix View

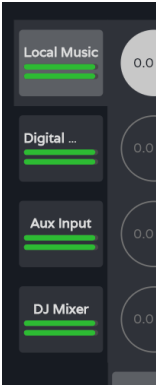


Audio sources. When an audio source is selected, its information and control are displayed on screen.

- **Source Label** (Source).
- **Pri: input_n / Sec: input_m**, primary and secondary source signals. The signal currently on the source is illuminated.
- **Volume control for the source** with volume meter.
- **MUTE button**, to mute the source.

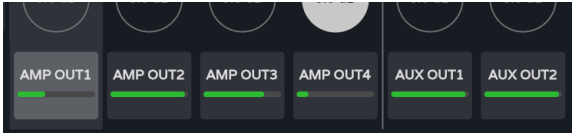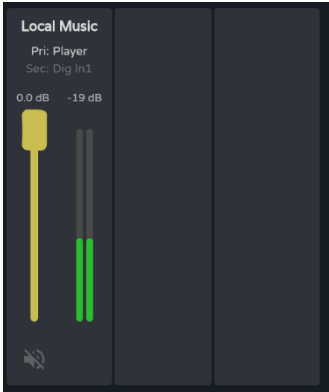


Audio outputs. When an audio output is selected, its information and control are displayed on the screen.

	Home	Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
HW	Web GUI	Web GUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol
PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA				

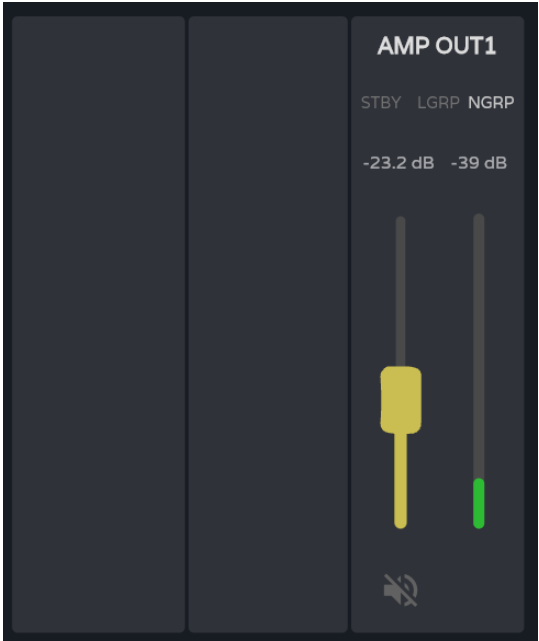


- **Output section.** From top to bottom:
 - **Output Label.**
 - **Status LEDs:**
 - **STBY / MUTE:** shows the standby status of the output (if amplified) and whether it is affected by any group or external MUTE.
 - **LGRP:** local group indicator. If lit, it means that the output belongs to at least one local group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
 - **NGRP:** Network Group Indicator. If lit, the output belongs to at least one network group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
 - **Volume control for the output** and VU meter.
 - **MUTE button**, to mute the output.

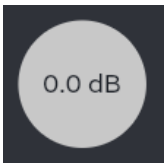


Crossover points. When a crossover point is selected, its information and control are displayed on the screen, as well as the information and control for the source and output for that crossover point

Home	
HW	Web GUI
WebGUI	WebGUI
Connection	Home & Updates
PRECAUTIONS	Settings
WARRANTY & ENVIRONMENT	Status
PACKAGE CONTENTS	Routing
DESCRIPTION & FEATURES	GPOs
PANEL FUNCTIONS	VersaPower
INSTALL & CONNECT	Groups
START-UP & OPERATION	Player
TECHNICAL DATA	Panels
	APP

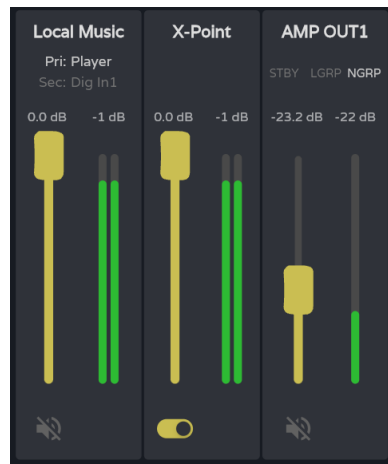


- Crossover point volume control and VU meter.
- Enable/disable the crossover point.

💡 Double click on a crossover point to enable/disable it.

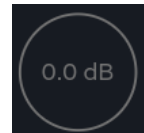

Crossover point **disabled**

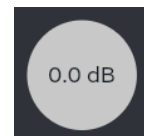


Crossover point **enabled**

2. Zoner


Outputs configured as Zoner.

💡 A group of outputs (OUTs or AUXs) configured as a Zoner are not available in the Mixer/Matrix tab.


Audio outputs, top to bottom:

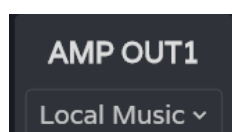


- Output Label.

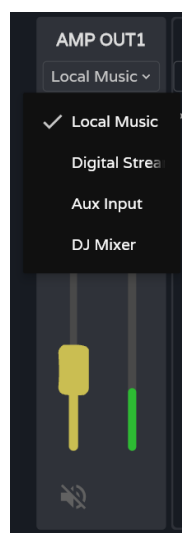

- Source selector: for selection of source for the output.
- The Auxiliary outputs as well as the 4 sources allow audio signal to be redirected to amplified outputs.

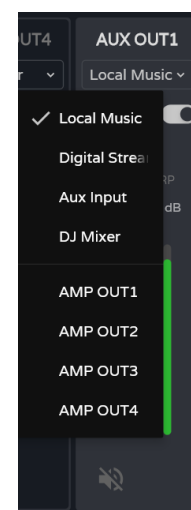

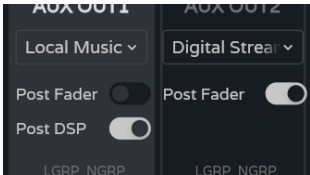

- **Post/pre fader control.**
 - If the post fader is **enabled**, the signal is sent **to the output** after processing and after the fader for the selected input signal.
 - If the post fader control is **disabled**, the signal is sent **to the output after processing or afterwards** (selectable by the post DSP control) and prior to the fader for the selected input signal.



- **Status LEDs:**
 - **STBY / MUTE:** shows the standby status of the output (if amplified) and whether it is affected by any group or external MUTE. Exclusive for amplified outputs.
 - **LGRP:** local group indicator. If lit, it means that the output belongs to at least one local group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
 - **NGRP:** Network Group Indicator. If lit, the output belongs to at least one network group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.




- **Volume control** for the output and VU meter.
- **MUTE button**, to mute the output.

Home	
HW	Web GUI
WebGUI Connection	WebGUI Home & Updates
PRECAUTIONS	Settings
WARRANTY & ENVIRONMENT	Status
PACKAGE CONTENTS	Routing
DESCRIPTION & FEATURES	GPOs
PANEL FUNCTIONS	VersaPower
INSTALL & CONNECT	Groups
START-UP & OPERATION	Player
TECHNICAL DATA	Panels
	APP

3. Services

Routing of Dante/ AES67 digital audio outputs.

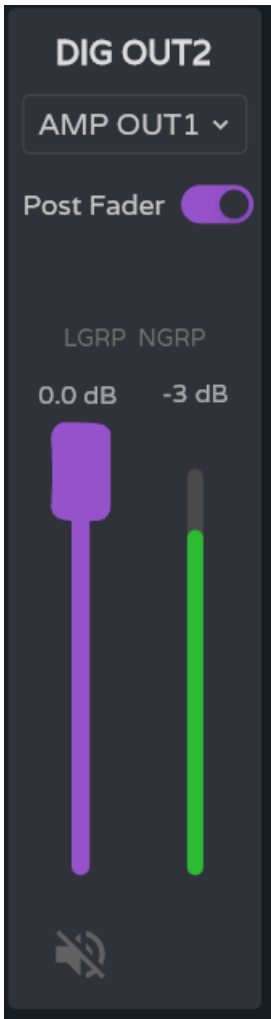

Digital audio outputs, top to bottom:

- **Output Label.**
- **Post/pre fader control.**
 - If the **post fader is enabled**, the signal is sent to the **output after processing** and after the fader for the selected input signal.
 - If the **post fader control is disabled**, the signal is sent to the **output after processing or after** (selectable by the post DSP control) and prior to the fader for the selected input signal.
- **Status LEDs:**
 - **LGRP:** local group indicator. If lit, it means that the output belongs to at least one local group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
 - **NGRP:** Network Group Indicator. If lit, the output belongs to at least one network group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
- **Volume control for the output** and VU meter.
- **MUTE button**, to mute the output.

Home	
HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
PACKAGE CONTENTS	Navigation
DESCRIPTION & FEATURES	EQ
PANEL FUNCTIONS	Inputs / Outputs Setup
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol

9.8 EQ (Equalizer)

Graphical user equaliser.



Independent 8-band graphic equaliser (GEQ) for each amplified and auxiliary output.




- The GEQ settings for each output can be saved and recalled via presets.
- It can be added as an equalisation control in the user panels, per output.




Enables or disables (bypasses) GEQ for the selected output.



- Changes made to the GEQ are applied in realtime.
- If GEQ is disabled on an output, it cannot be edited.


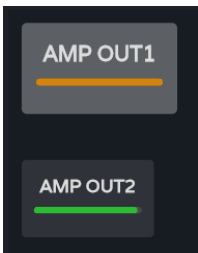


Output selection: the selected output is larger and brighter than the others.

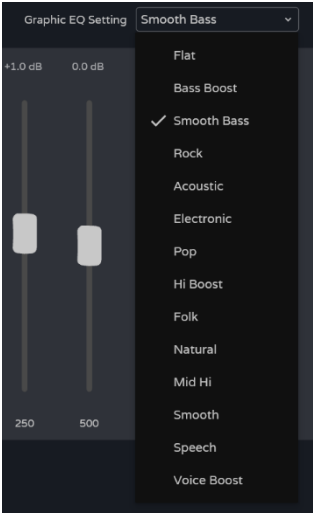

GEQ preset selection.

💡 If any of these settings of these settings is changed it is displayed in the GEQ as "custom", to indicate a custom setting.

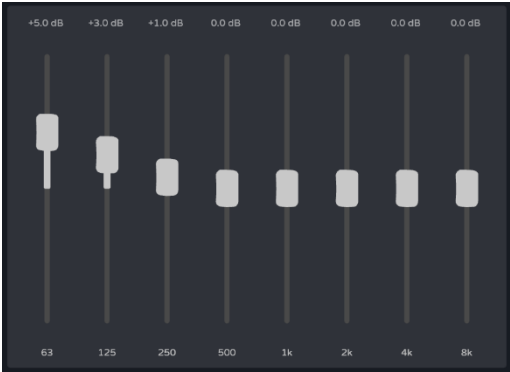

Adjusting gain for the GEQ bands.

- Adjust between positive 12dB and negative 12dB.




- Pre-GEQ level indicator.
- GEQ level adjustment: positive 12dB to negative 12dB.
- Post-GEQ level and post-level adjustment indicator(GEQ-Vol).



9.9 GPOs

Status of contact closures, GPOs.

 The status of the GPOs (open/closed) on this page can be saved and retrieved via presets.

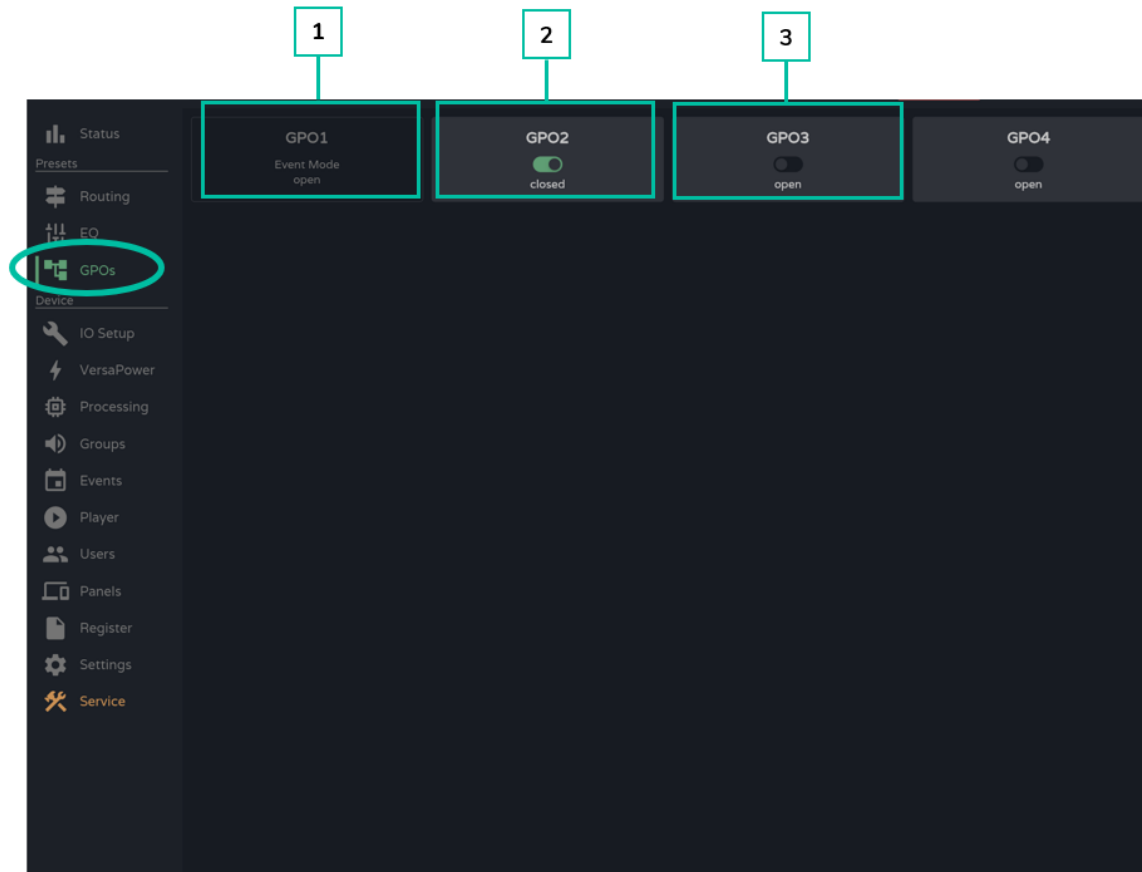

1. GPO configured as an event GPO.



- The **status of the GPO is event-driven**.
- Its **status cannot be changed from this page** so that a particular state cannot be retrieved via presets.


2. GPO closed.
3. OpenGPO .

9.10 IO Setup (Input and Output Setup)

Configuration of inputs and outputs for an amplifier.

9.10.1 Inputs Setup

Adjustment of the audio inputs available on an amplifier.

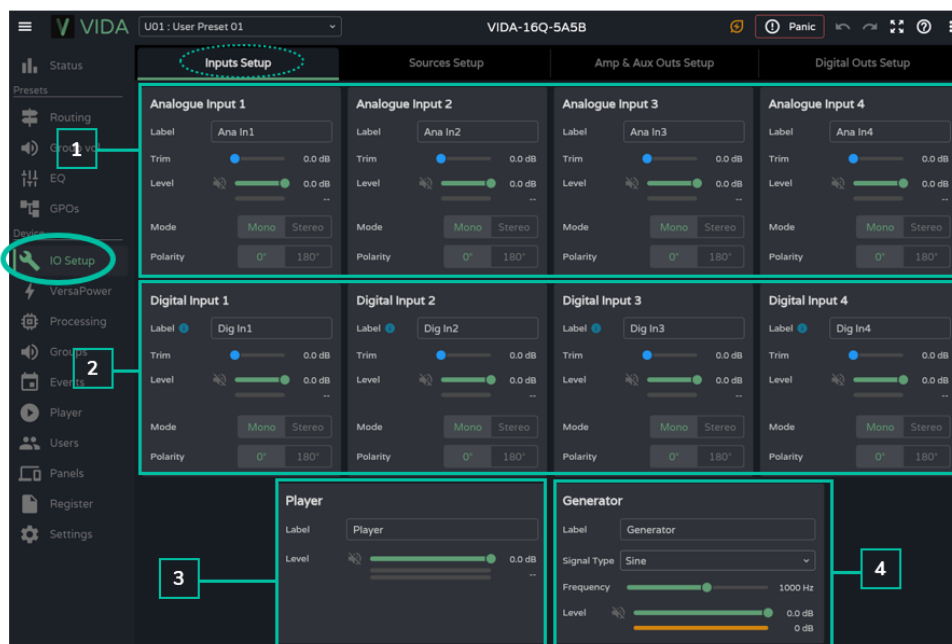

1. Analogue inputs

Adjustment of the 4 balanced analogue line inputs.

- **Label:** label for an input.
- **Trim:** digital gain adjustment, 0-12dB.
- **Level:** adjustment of signal level, mute and VU.
- **Mode:** selection of mono or stereo mode.
- **Polarity:** selection of the polarity of the signal.



Stereo signals:

- Only adjacent signals can be configured as a stereo pair.
- The odd signal configuration will be applied to the stereo pair.
- When undoing stereo, the odd signal keeps the stereo pair configuration, and the even signal has the configuration it had in mono.
- A stereo pair is displayed as a single input/output.
- The amplifier performs the routing of a stereo signal automatically. Like this: if a stereo signal is sent to a mono output, the stereo sum will be sent; and if a mono signal is sent to a stereo output, the same signal will be sent to both outputs.

2. Digital inputs

Adjustment of the 4 Dante/ AES67 digital audio inputs. The Dante/ AES67 Controller app is required for the configuration and routing of Dante/ AES67 audio signals.

- **Label:** label for an input. The information icon  shows how to create labels compatible with the Dante/ AES67 Controller app.
- **Trim:** digital gain adjustment, 0-12dB.
- **Level:** adjustment of signal level, mute and VU.
- **Mode:** selection of mono or stereo mode.
- **Polarity:** selection of the polarity of the signal.

3. Player

Internal audio player settings.

- **Label:** label for an input.
- **Level:** adjustment of signal level, mute and VU.

 The **player's signal** is **stereo**.

4. Generator

Signal generator settings, for testing and adjustment during commissioning of the AV system.

- **Label:** label for an input.
- **Signal Type:** selection of test signal type.
- **Frequency:** selection of the frequency of the test signal. Available when a Sine type signal is selected.
- **Level:** adjustment of signal level, mute and VU.


 The **generator signal** is mono.

9.10.2 Sources Setup

Adjustment of the amplifier's audio sources.




A Source is the combination of a primary input signal and a secondary (optional) input signal.

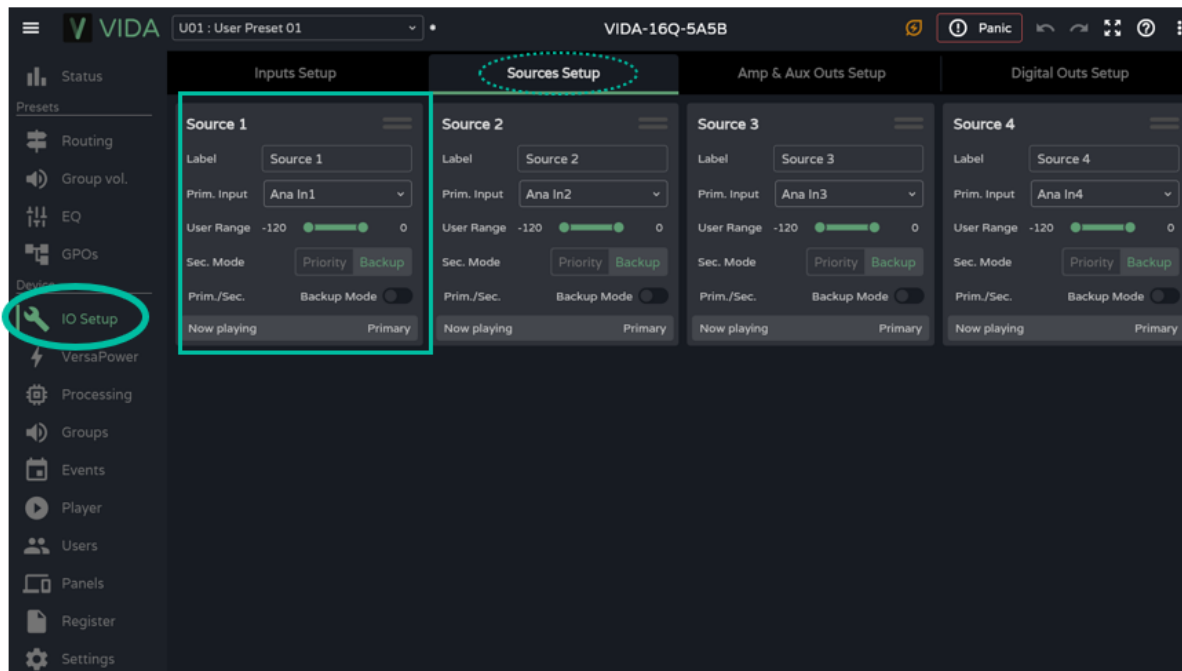


- **Label:** label of the source.
- **Prim. Input:** selection of the primary input signal.
- **User Range** Volume limits set by the user via user panels.
- **Sec. Mode:** operating mode of the secondary signal
 - **Priority:** the secondary signal has priority. The secondary signal will be swapped with the primary signal when a signal is detected on the secondary signal.
 - **Backup:** the primary signal has priority. The secondary signal will be swapped with the primary signal when no primary signal is detected.
- **Prim./Sec:** If this function is enabled, the priorities defined in this section are set.
- **Now playing:** indicates the signal present at the source (primary or secondary).

- The secondary signal will be exchanged with the primary signal, when the secondary signal exceeds the set threshold (Sec. Threshold). When the secondary signal is again below the threshold, for the time set (Hold), the primary signal will again be present at the source.

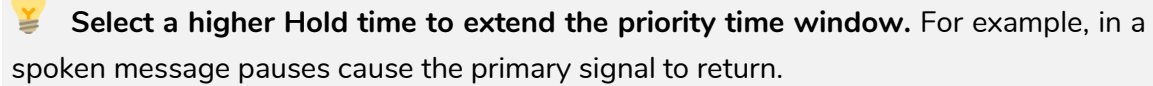


- 💡 **Select a higher Hold time to extend the time window before input of the backup signal to the source.** For example, in a music programme with high dynamic range some passages cause the secondary signal to be introduced.

2. Amplified Output: settings for the 4 amplified outputs .

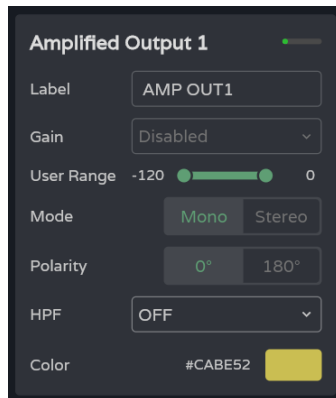

- **Label:** output label.
- **Gain:** Amplifier **gain** at the output.
 - **Disabled:** option disabled if the Smart VersaPower function is enabled.
 - **Gain options.**

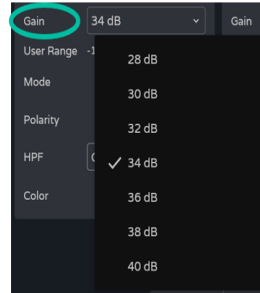

If the Smart VersaPower tool is not used, use the limiters available in the processing section to not damage the equipment.

- **User Range.** Volume limits set by the user via user panels.
- **Mode:** selection of mono or stereo mode.
- **Polarity:** selection of the polarity of the signal.
- **HPF:** selection of the high-pass-filter frequency. Always enabled when the output is configured as 100/70 V line output.
- **Colour:** allows assignment of a colour to an output.

Related events

Outputs can be controlled by events, either physical controls (rotary controls, GPIs...), virtual controls (panels) or automations (calendar events).

If any **outputs** are associated with an event, the following automatic settings are made when switching mono or stereo mode:

- **Mono to stereo output:** Events related to the odd output are maintained, with the stereo pair configured as the event output. Events related to the even output are maintained, with no output assigned.
- **Stereo to mono output:** Events related to the stereo pair are maintained, with the odd output configured as the event output. Does not apply to even output.



We recommend reviewing event configuration when there is a configuration change on the outputs (mono to stereo, or stereo to mono) and the outputs have associated events.


3. Auxiliary Outputs: settings for the two balanced auxiliary line outputs .

- **Label:** label for the output.
- **User Range** Volume limits set by the user via user panels.
- **Mode:** selection of mono or stereo mode.
- **Polarity:** selection of the polarity of the signal.
- **Colour:** allows assignment of a colour to an output.

9.10.4 Digital Outs Setup

Adjustment of the 4 Dante/ AES67 digital audio outputs.

The Dante Controller app is required for the configuration and routing of Dante audio signals.

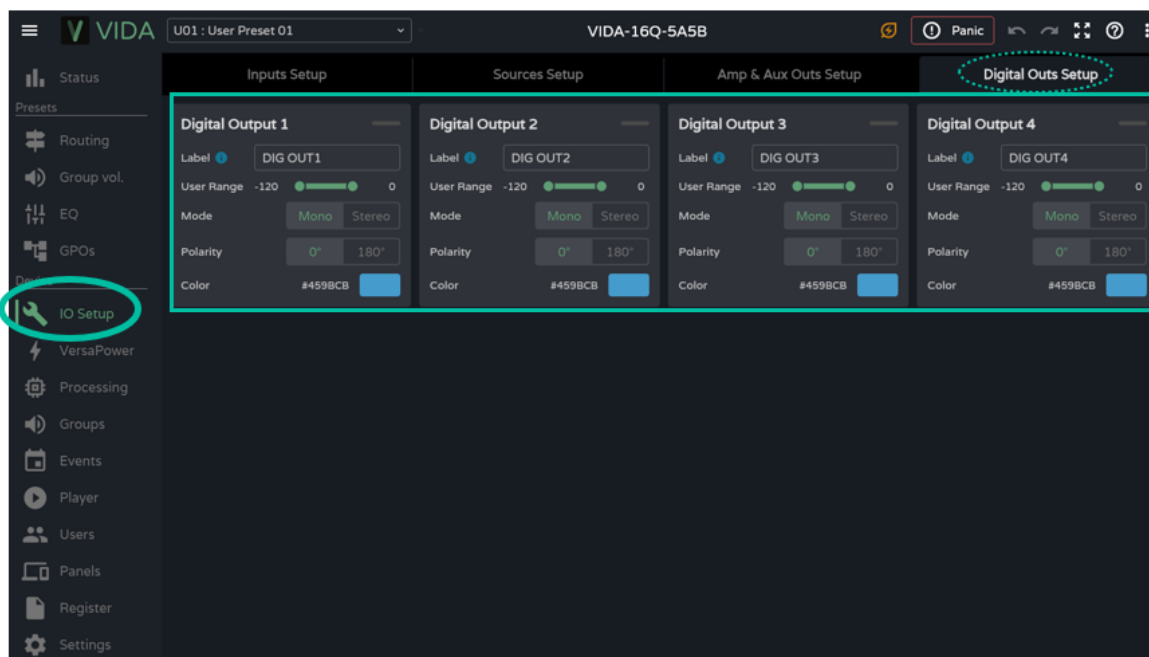

- **Label:** output label. The information icon shows how to create labels compatible with the Dante/ AES67 Controller application.
- **User Range:** Volume limits set by the user via user panels.
- **Mode:** selection of mono or stereo mode.
- **Polarity:** selection of the polarity of the signal.
- **Colour:** allows assignment of a colour to an output.

9.11 VersaPower

VersaPower is the amplifier technology developed by Ecler which allows asymmetrical power distribution between the amplified outputs, independent of the load.


The **Smart VersaPower** tool allows you to limit the maximum power delivered at each amplified output and adjust gain automatically. The maximum power of the amplifier can be distributed asymmetrically between the outputs.

Specify the sensitivity of an audio input and set the desired maximum RMS power for each amplified output.

The sum of the maximum RMS power for the four amplified outputs (Total power used) may not exceed the maximum total power of the amplifier.

Enabling Smart VersaPower disables the gain adjustment in the IO Setup section for the outputs.

Smart VersaPower is enabled by default, configured as a symmetrical amplifier, 4x600W, for inputs with 0dB sensitivity.

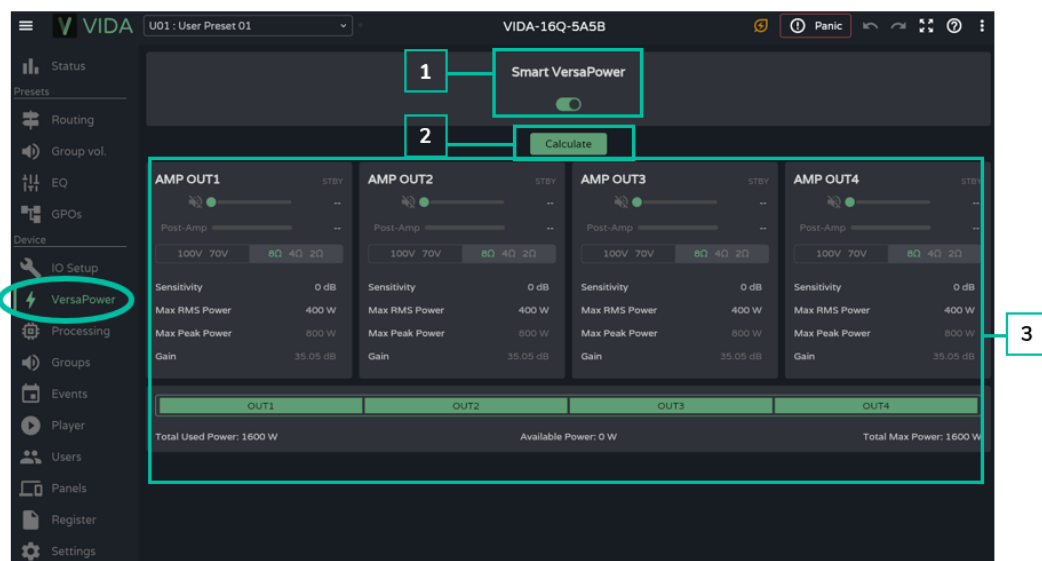

1. Smart VersaPower configuration


Enables/disables the Smart VersaPower tool.

When enabled, it can be reconfigured. By default, it is enabled. If disabled, note that the gain setting for the outputs will return to the value before Smart VersaPower was enabled. That is, 34dB for each output if unmodified (default values).

2. Calculate: Button for resetting the Smart VersaPower settings.

Button available if Smart VersaPower is enabled.

The button opens a window to reconfigure the parameters.

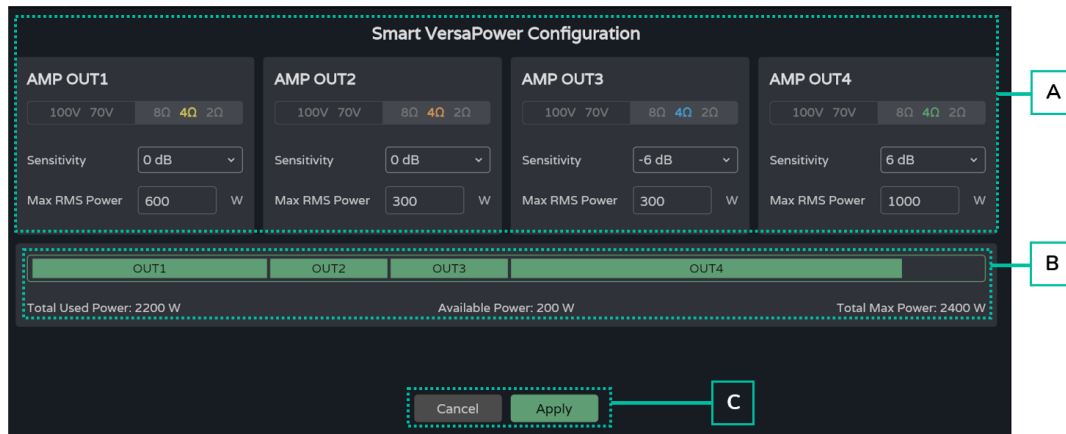

A. Configuration of parameters for an output:

- **Impedance selector indicator** on the rear panel, to display the status of the impedance selector.
- **Sensitivity:** selection of the sensitivity of the input signal to the amplifier.
- **Max RMS Power:** setting of the maximum power delivered by an amplified output. The value must be between 0 W and the maximum power of the amplifier. The sum of the power of the 4 outputs may not exceed the maximum power of the amplifier.

B. Indicates the power used across the 4 channels.

C. Cancel: cancels the configuration. Smart VersaPower will remain disabled and no changes will be applied.

Apply: applies the changes made to the Smart VersaPower configuration. If there is an error, e.g. exceeding the maximum power, it will not let you continue.

3. VersaPower Smart Monitor

Displays the current status of the Smart VersaPower configuration.


- **VU for the amplified output:** Clicking on a value shows different measurements of the signal before and after the amplifier.
- **Settings:**
 - **Sensitivity:** selected sensitivity.
 - **Max RMS Power:** maximum power that can be delivered by an output.
 - **Max Peak Power:** maximum peak power at an output. Not editable.
 - **Gain:** gain applied to the output to obtain the indicated power value.

9.12 Processing

9.12.1 Inputs Processing

Processing of amplifier input signals.

The processing of the inputs, analogue, digital and audio player, is **independent for each of them**.

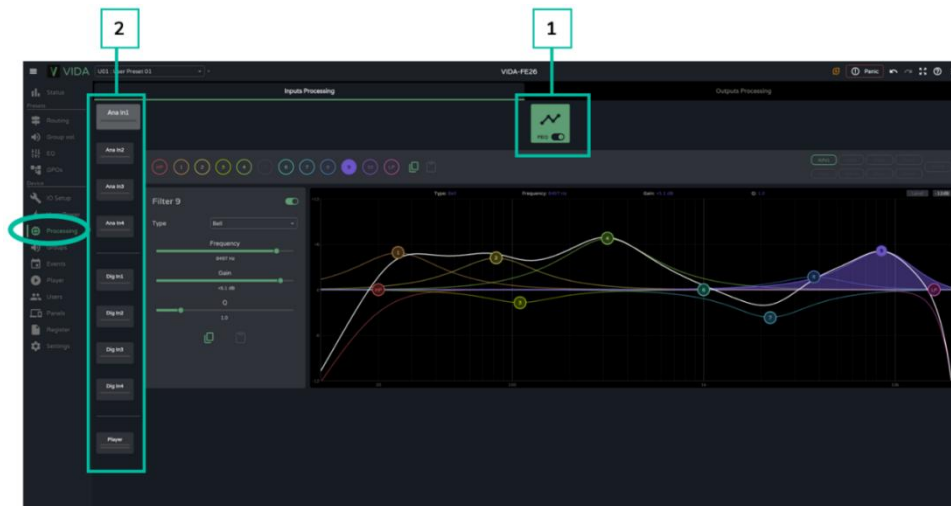


1. Parametric Equaliser (PEQ): 2 crossover filters and 10 fully configurable filters.



Module **selected and enabled**.



Changes made in processing are applied in real time.




Module **selected and disabled**.



If a module is disabled on an output, it cannot be edited.



Module **enabled, not selected**.




Module **not selected and disabled**.



Selector to **enable/disable** (bypass) the **processing module**.

2. Inputs

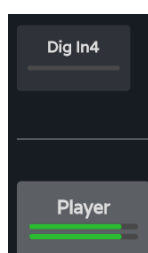


Input selection: the selected input stands out from the rest, larger and brighter.

9.12.1.1 PEQ Inputs

Parametric Equaliser (PEQ) with 12 filters (2 crossover and 10 configurable) **independent for each of the analogue, digital and audio player inputs.** .



1. Filter selector and equaliser curve



Filter selector. Allows selection of PEQ filters for display and parameter setting.



Filter **selected** and **enabled**.



Filter **selected** and **disabled**.




Filter **not selected** and **enabled**.




Filter **not selected** and **disabled**.




Copy and paste equalisation curve: allows you to replicate the 10 filter settings on different outputs




Allows the **display of the equalisation curves** for the different inputs.

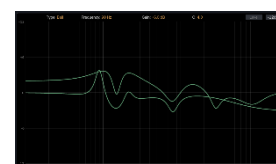

2. Parameters for a filter




Filter name and button to enable/disable the filter.

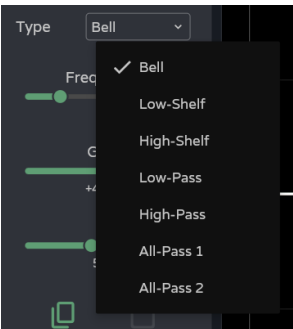


Selection of **filter type**:


- Bell
- Low-Shelf
- High-Shelf
- Low-Pass
- High-Pass
- All-Pass




Filter **central frequency** selector.



Filter **gain** selector.






Filter **Q-factor** selector.




Allows **copying** and **pasting** of filter parameters

Parameters for a filter: Crossovers

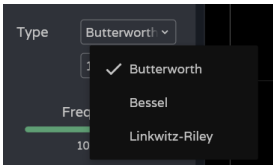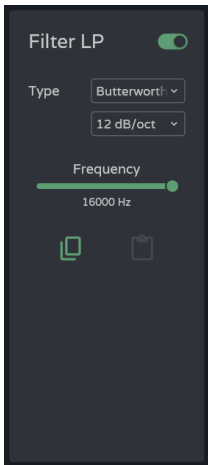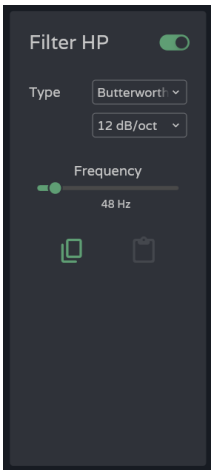


Filter **type** selector.

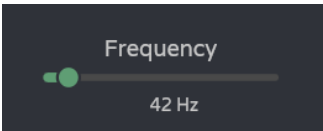

Cut-off **frequency** selector.

3. Graphic editing and visualiser



Information on the **current parameters** for the selected filter.




Level button: **displays the EQ curve** with the level set for an output.



Scale adjustment: modifies the gain axis (dB) for the graphical representation of the EQ curve.

- -12dB: between +12dB and -12dB
- -30dB: between +18dB and -30dB
- -60dB: between +18dB and -60dB

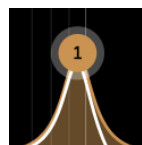

Filter selected:

- **Up/Down:** modifies the **gain**.
- **Left/right:** changes the **frequency**.




Scrolling (mouse wheel): modifies the Q-factor.

9.12.2 Outputs Processing

Processing of amplifier output signals.

The processing of the amplified and auxiliary outputs is **independent for each one**. It consists of the following modules:

- **Delay:** delay settings.
- **Parametric Equaliser:** 2 crossover filters and 10 fully configurable filters.
- **Limit:** limiter

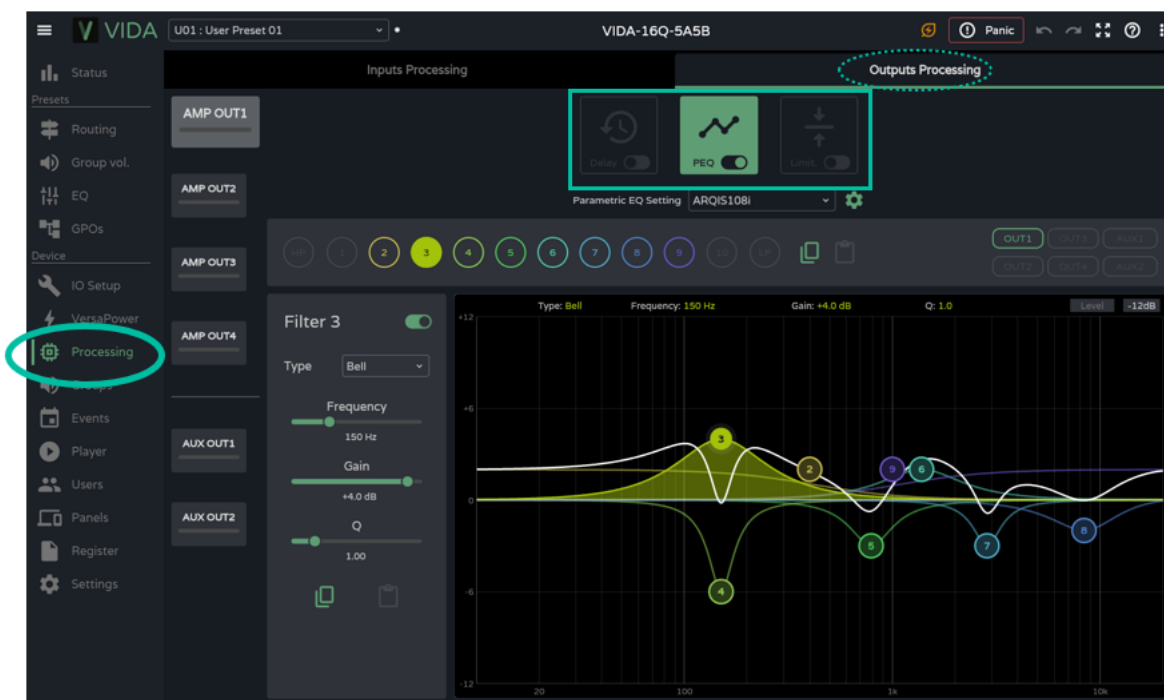

Processing Modules.




Management of processing modules. It allows the selection of modules for display and configuration of parameters and enables and disables the module quickly without having to open the settings page.



Module selected and enabled.



Changes made in processing are applied in real-time.

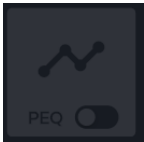

Module **selected** and disabled.

 If a **module** is **disabled** on an output, it cannot be **edited**.




Module **enabled**, not selected.



Module **not selected** and disabled.




Selector to **enable/disable** (bypass) the processing module.

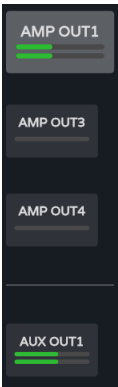


Output selection: the selected output is larger and brighter than the others.

9.12.2.1 Delay

Output signal delay.

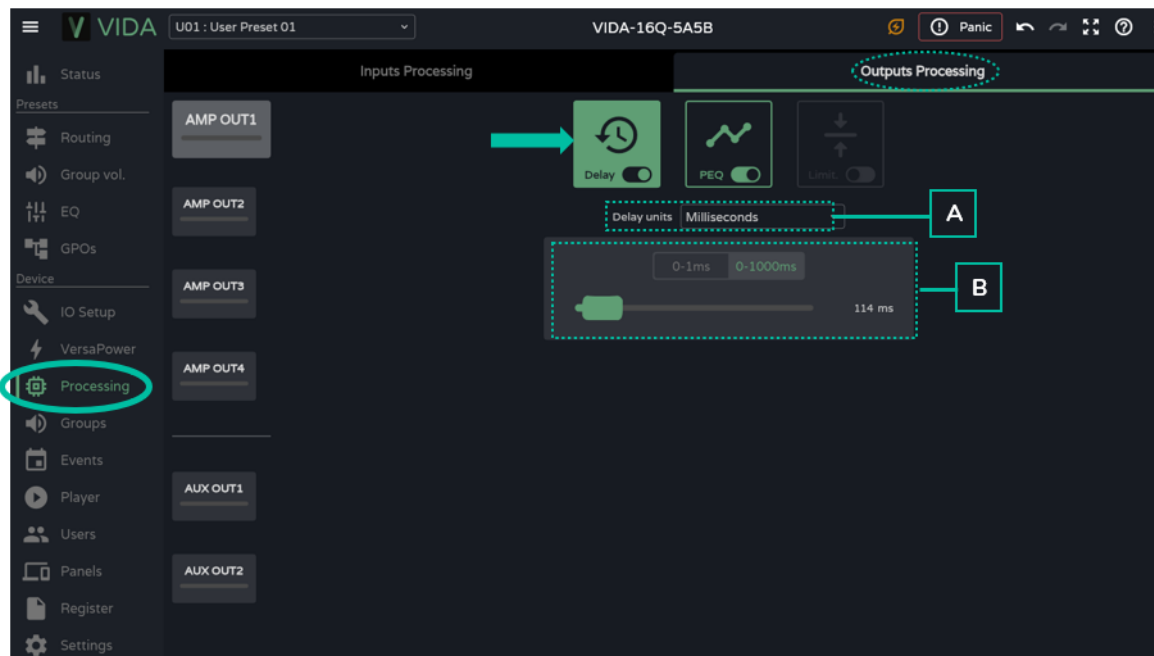


A

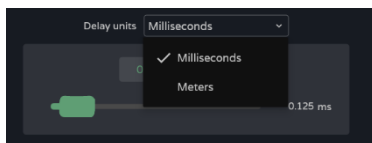

Selection of units:

- Milliseconds: setting 0-1000 ms.
- Metres: adjustment 0-343 m.

B

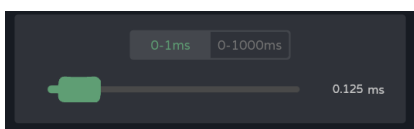


Delay setting, by fader or by entering a numerical value:

- **Fine** adjustment: 0-1 ms, allows delay adjustment with an accuracy of 0.021 ms.
- **Coarse** adjustment: 0-1000 ms, allows a delay adjustment with an accuracy of 1 ms.

9.12.2.2 PEQ Outputs (Parametric Equalizer Outputs)


It allows the **selection of parametric equalisation presets, of 12 filters** (2 crossover and 10 configurable) independent for each amplified and auxiliary output.

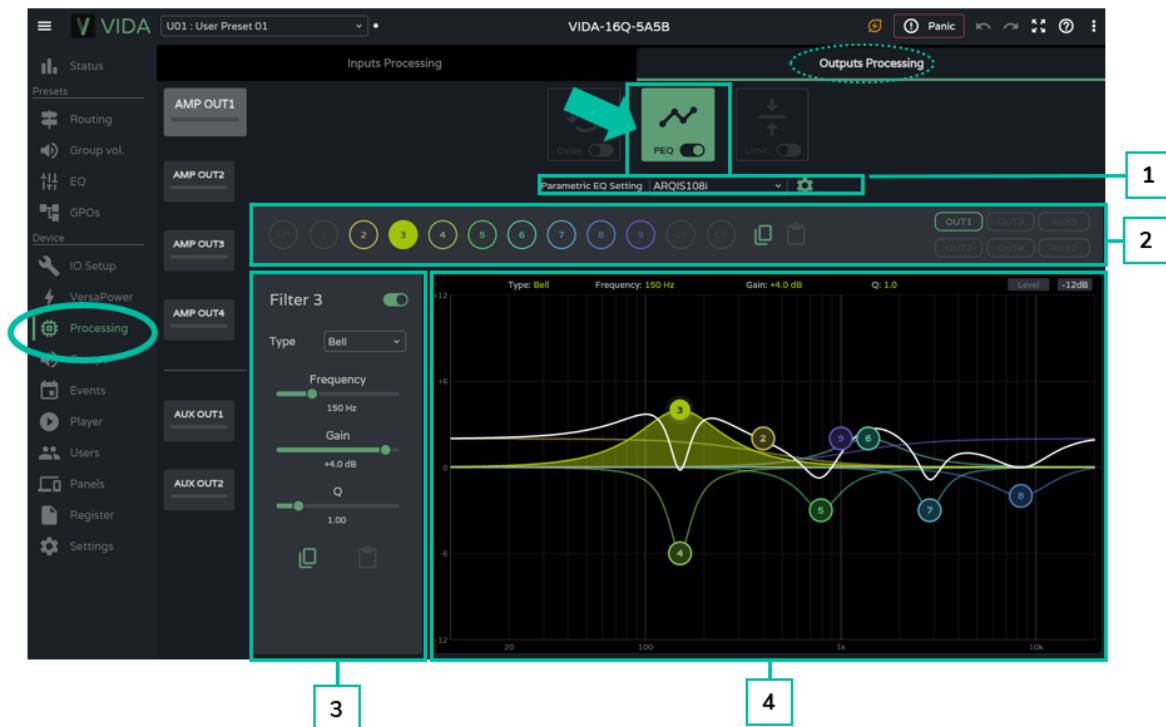

The PEQ configuration of each output is saved in the device settings. It is not saved in the user presets unlike the user GEQ.

The user GEQ is placed after the PEQ but before the Limiter in the processing chain.

1. Parametric EQ Setting: parametric equalisation preset selection.

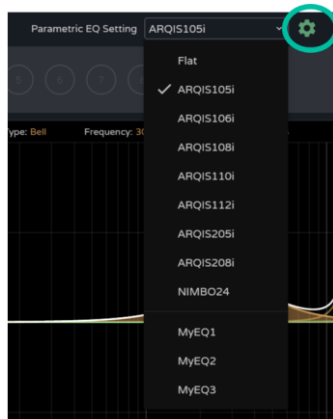


- The "Flat" setting resets all filters to their default values.
- Changes to settings are shown in the PEQ as "custom".


The **settings** icon provides access to the management of user equalisation curves.

Management of user equalisation curves

Allows you to manage user equalisation curves: save, delete, rename, import and export.

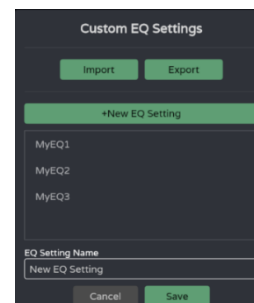

- **Save custom equalisation curves:**
 - Make the desired EQ settings for an output.
 - Click on the settings icon to open the "Custom EQ Settings" dialogue box.
 - Click on the "+ New EQ Setting" button.
 - Rename it with a unique name.
 - Click on the "Save" button

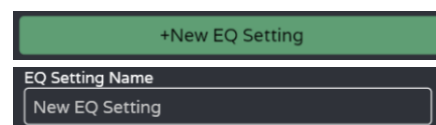

- You can save as many EQ curves as you wish.
- The saved EQ curves will be available in the EQ load list.
- To delete an EQ curve, click on it and then click on the "delete" icon. It will no longer be available from the list of EQs.



The factory equalisation curves cannot be changed.

• Exporting and importing custom EQ curves

	A	B	C	D	E	F
EQ name	Enabled	Type	Frequency	Gain	Q	
1 MyEQ1	0		15 1000.00	0.00	1.00	
2 MyEQ1	1		1 95.00	4.00	5.00	
3 MyEQ1	1		1 155.00	-3.00	3.00	
4 MyEQ1	1		1 555.00	-4.00	5.00	
5 MyEQ1	1		1 2030.00	-2.00	2.00	
6 MyEQ1	1		1 2770.00	6.00	4.00	
7 MyEQ1	1		1 2770.00	-2.00	1.00	
8 MyEQ1	1		1 4050.00	-3.00	3.00	
9 MyEQ1	0		14 1000.00	0.00	1.00	
10 MyEQ1	0		14 16000.00	0.00	1.00	
11 MyEQ2	0		15 1000.00	0.00	1.00	
12 MyEQ2	1		1 360.00	3.00	1.00	
13 MyEQ2	1		1 1970.00	-2.00	5.60	
14 MyEQ2	1		1 3440.00	2.00	1.00	
15 MyEQ2	1		1 5000.00	-1.00	3.00	
16 MyEQ2	0		1 1000.00	0.00	1.00	
17 MyEQ2	0		1 1000.00	0.00	1.00	
18 MyEQ2	0		1 1000.00	0.00	1.00	
19 MyEQ2	0		14 1000.00	0.00	1.00	
20 MyEQ2	0		14 16000.00	0.00	1.00	
21 MyEQ2	0		15 1000.00	0.00	1.00	
22 MyEQ3	1		1 300.00	3.00	1.00	
23 MyEQ3	1		1 1110.00	4.00	5.60	
24 MyEQ3	1		1 3630.00	2.00	14.00	
25 MyEQ3	1		1 6030.00	2.00	1.00	
26 MyEQ3	0		1 1000.00	0.00	1.00	
27 MyEQ3	0		1 1000.00	0.00	1.00	
28 MyEQ3	0		1 1000.00	0.00	1.00	
29 MyEQ3	0		14 1000.00	0.00	1.00	
30 MyEQ3	0		14 16000.00	0.00	1.00	
31 MyEQ3	0					

○ **Export:** click on the "Export" button to download a CSV containing all custom EQ curves.

○ **Import:** click on the "Export" and select a valid EQ CSV file. Either exported from another VIDA device or manually modified.



The CSV can be opened with Notepad or Excel to edit the content.




The imported EQ curves replace the existing ones.

Information for manual editing of EQ CSV files

Filter Type	
0	Bypass
1	Bell
2	Low-Shelf 6dB/oct
3	Low-Shelf 12dB/oct
4	High-Shelf 6dB/oct
5	High-Shelf 12dB/oct
6	Low-Pass 6dB/oct
7	Low-Pass 12dB/oct
8	High-Pass 6dB/oct
9	High-Pass 12dB/oct
10	All-Pass 1
11	All-Pass 2
12	Low-pass Butterworth 6dB/oct
13	High-pass Butterworth 6dB/oct
14	Low-pass Butterworth 12dB/oct
15	High-pass Butterworth 12dB/oct
16	Low-pass Butterworth 18dB/oct
17	High-pass Butterworth 18dB/oct
18	Low-pass Butterworth 24dB/oct
19	High-pass Butterworth 24dB/oct
20	Low-pass Bessel 12dB/oct
21	High-pass Bessel 12dB/oct
22	Low-pass Bessel 18dB/oct

23	High-pass Bessel 18dB/oct
24	Low-pass Bessel 24dB/oct
25	High-pass Bessel 24dB/oct
26	Low-pass LinkwitzRiley 12dB/oct
27	High-pass LinkwitzRiley 12dB/oct
28	Low-pass LinkwitzRiley 24dB/oct
29	High-pass LinkwitzRiley 24dB/oct


2. Filter selector and equaliser curve



Filter selector. Allows selection of PEQ filters for display and parameter setting.



Filter **selected and enabled**.




Filter **selected and disabled**.




Filter **enabled but not selected**.




Filter **not selected and disabled**.

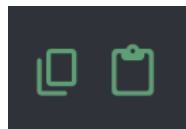


Copy and paste EQ curve: allows you to replicate the 10 filter settings on different outputs.

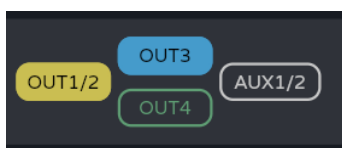


Allows the **display of the equalisation curves** for the different outputs.

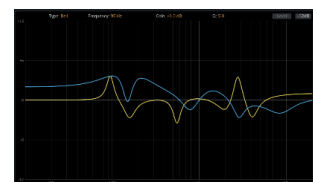

3. Parameters for a filter




Filter name and button to enable/disable the filter.

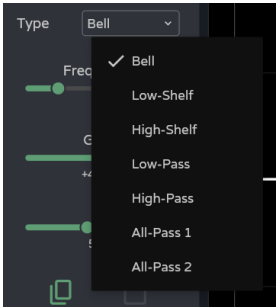


Selection of filter type:


- Bell
- High-Shelf
- Low-Shelf
- High-Pass
- Low-Pass
- All-Pass




Filter central frequency selector.



Filter gain selector.




Filter Q-factor selector.




Allows copying and pasting of filter parameters

Parameters for a filter: Crossovers

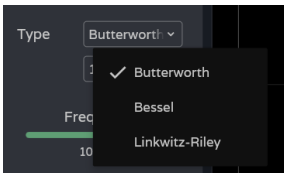

Filter type selector

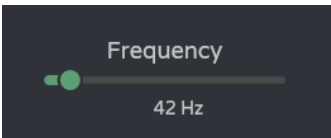

Cut-off frequency selector

4. Graphic editing and visualiser:


Editing filter parameters represented graphically.



Information on the current parameters for the selected filter.




Level button: **displays the EQ curve** with the level set for an output.



Scale adjustment: modifies the gain axis (dB) for the graphical representation of the EQ curve.

- -12dB: between +12dB and -12dB
- -30dB: between +18dB and -30dB
- -60dB: between +18dB and -60dB

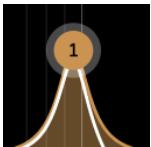


Filter selected:

- Up/down: modifies gain.
- Left/right: Changes the frequency.
- Scrolling (mouse wheel): modifies the Q-factor.

9.12.2.3 Limiters

RMS and peak output signal limiters.

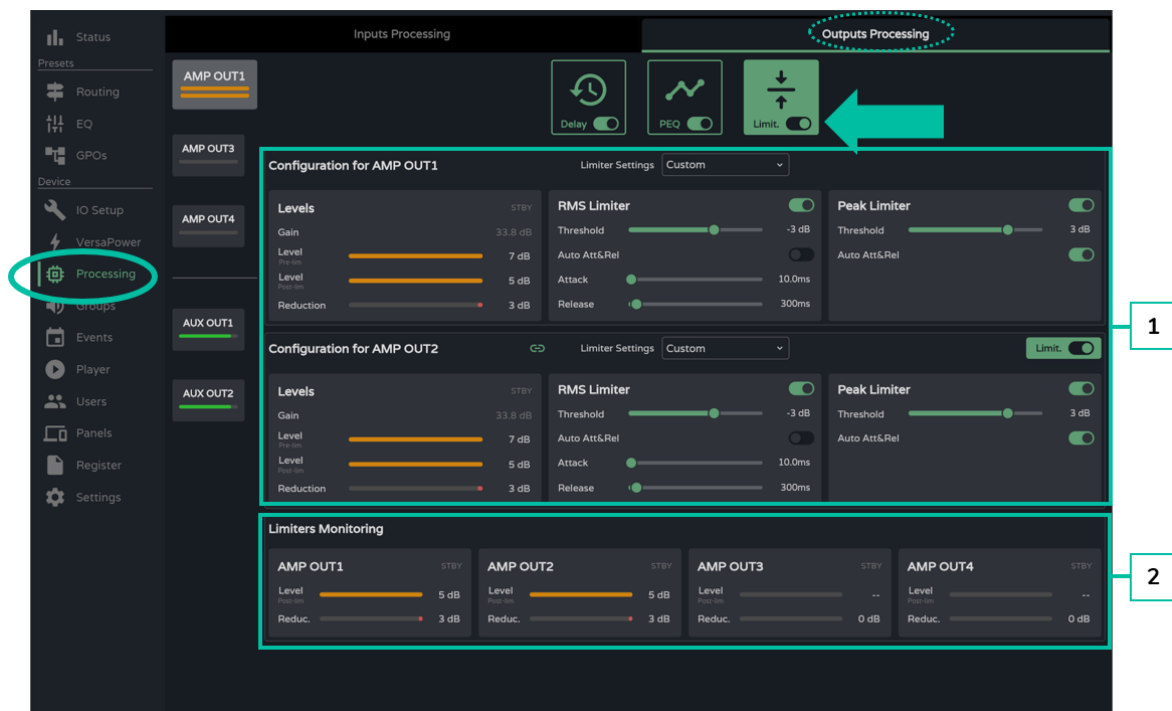


1. Configuration of limiters

If an output is set to stereo, the limiters for the paired outputs are displayed on the same page.

By default, when configuring two stereo outputs, the limiters of those outputs are **linked**; any modification of the parameters of the limiter for one output also applies to the other output. The link can be undone, to independently configure the stereo output limiters, without affecting routing.




Stereo output limiter **link** button.

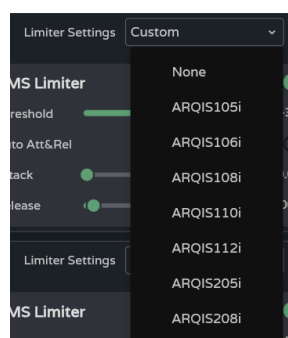


Limiter Settings: automatic limiter setting selection.

- The "None" setting sets all limiters to their default values.
- Any changed setting is shown in the combo box as "custom".

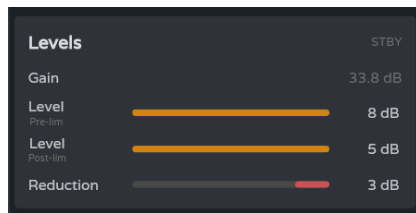


Monitoring of levels of an output:

- **Gain:** gain for the output.
- **Level pre-lim:** Output level prelimiter, before reduction.
- **Level post-lim:** output level post-limiter after reduction.
- **Reduction:** reduction of output signal

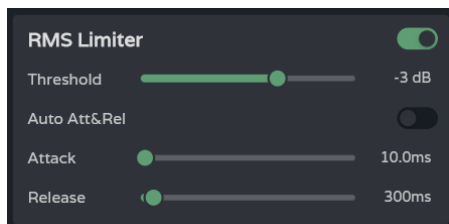

Output signal limiter settings (RMS):

- **Threshold:** threshold for the RMS signal at which the limiter starts to act.
- **Auto Att&Rel:** automatic attack and release settings. If this option is disabled, manual adjustment is possible.

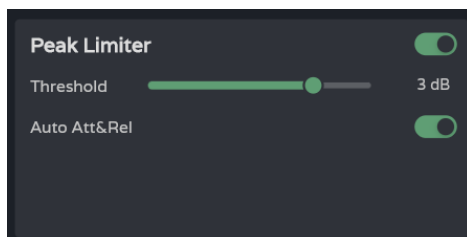

Output signal limiter (Peak) settings:

- **Threshold:** threshold of the peak signal, at which the limiter starts to act.
- **Auto Att&Rel:** automatic attack and release settings. If this option is disabled, manual adjustment is possible.



The RMS and peak limiter settings are independent; they can be enabled independently.

2. Monitoring limiters



Monitoring of the levels of the four outputs and their reduction.



Web GUI

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT

Web GUI START-UP & OPERATION

Web GUI APP

Web GUI Panels

Web GUI Player

Web GUI Groups

Web GUI VersaPower

Web GUI GPOs

Web GUI Routing

Web GUI Status

Web GUI Settings

Web GUI Updates

Web GUI Home & Updates

Web GUI Connection

Web GUI Login

Web GUI Navigation

Web GUI EQ

Web GUI Inputs / Outputs Setup

Web GUI Processing

Web GUI Events

Web GUI Users

Web GUI Register

Web GUI TP-NET Protocol

Web GUI TECHNICAL DATA

Web GUI PRECAUTIONS

Web GUI WARRANTY & ENVIRONMENT

Web GUI PACKAGE CONTENTS

Web GUI DESCRIPTION & FEATURES

Web GUI PANEL FUNCTIONS

Web GUI INSTALL & CONNECT


Web GUI START-UP & OPERATION

9.13 Groups

Configuration of the local groups and network groups for the device.



- An output can belong to several different groups: local, general and network.
- If an output belongs to different groups, its volume will be affected by the different volume controls of the groups.

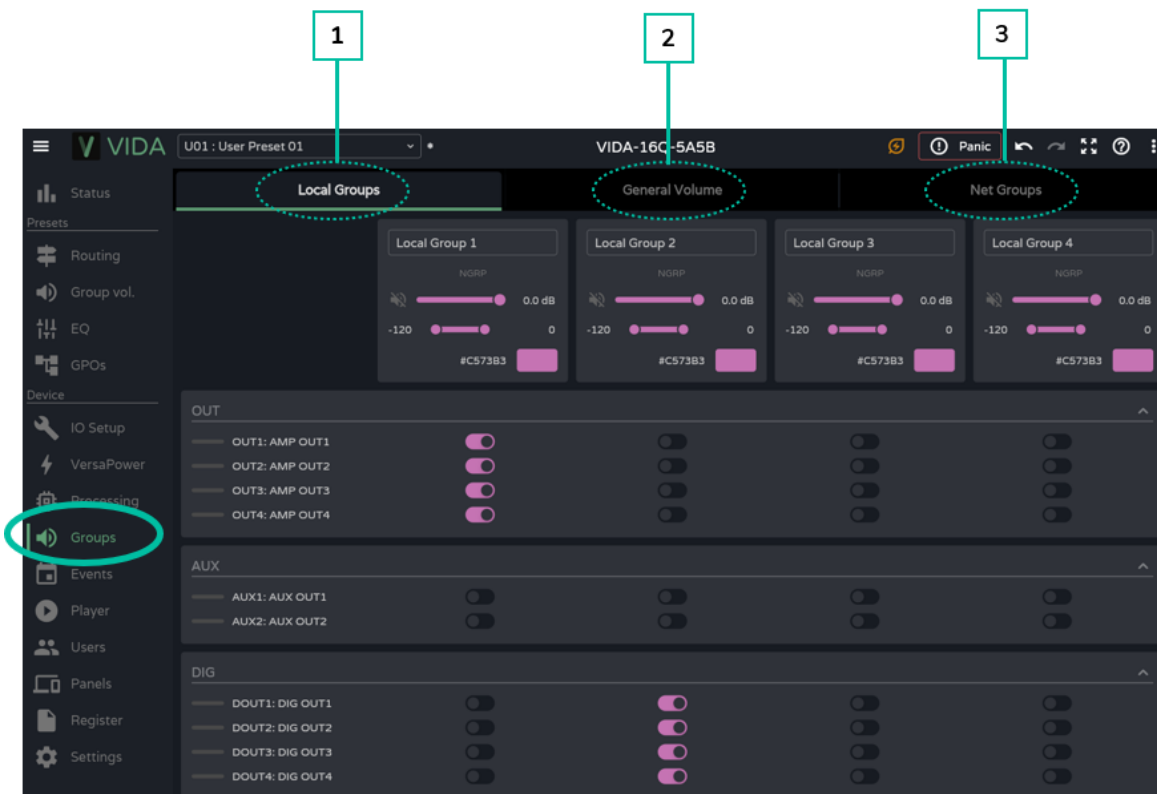


1. Local Groups:

VIDA has **four local** volume control **groups**, source selection and graphic equalisation.




Group volume controls are placed after the output volume controls and before the General Volume control in the processing chain.

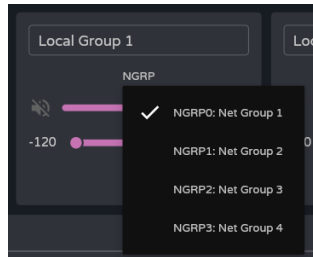

Group configuration:


- **Label:** group label.
- **NGRP:** Network Group Indicator. If lit, it means that the group belongs to at least one network group. Clicking on the indicator brings up the list of groups to which the output belongs; the list can be edited quickly from there.
- **Volume control and group mute.**
- **User Range.** Volume limits set by the user via user panels.
- **Colour:** allows assignment of a colour to the group.

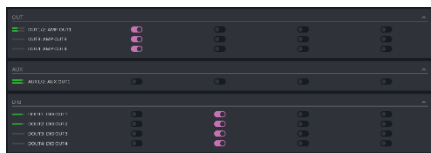

Assigning outputs to a local group.



Each column corresponds to a group: all outputs enabled in the same column belong to the same group.

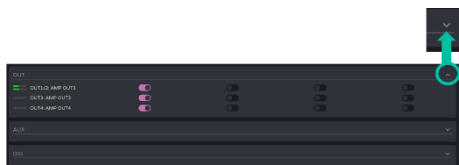

Output groups can be **expanded or collapsed**.


2. General Volume:

Local volume control group for the amplified outputs.



Differences between General Volume and a local group:

- Group volume controls are placed after the output volume controls and before the General Volume control in the processing chain.
- The general volume group is local; it cannot belong to a network group.
- It is exclusive to the amplified outputs.

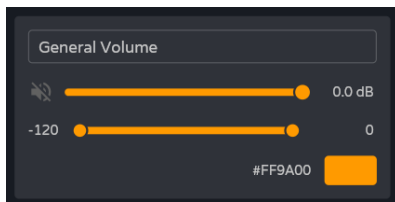

Group configuration:

- **Label:** group label.
- **Volume control and group mute.**
- **User Range.** Volume limits set by the user via user panels.
- **Colour:** allows assignment of a colour to the group.



Assignment of outputs to the general volume group.

3. Net Groups


VIDA has **four volume control network groups**. The network groups **do not have source selection and equalisation**. Network groups **allow control of volume for several outputs belonging to different devices simultaneously**.



- The group volume controls are located at the end of the processing chain.
- An output can belong to several network groups.
- If an output belongs to different groups, its volume will be affected by the different volume controls of the network groups.
- There is a maximum of four network groups per amplifier group (Group ID).
- Groups are shared by all devices that are on the same network and belong to the same amplifier group (Group ID).
- An output can belong to several network groups.
- An amplifier can only belong to one amplifier group (Group ID).
- The network groups and Group ID are independent of the VIDA amplifier model. The network groups allow control of the volume of different outputs belonging to different VIDA amplifier models: VIDA-48Q, VIDA-24Q and VIDA-16Q.



If the two network interfaces, NET1 and NET2, are connected the network groups will communicate via the NET1 interface only. If only one network interface is connected, the network groups will communicate over that interface.

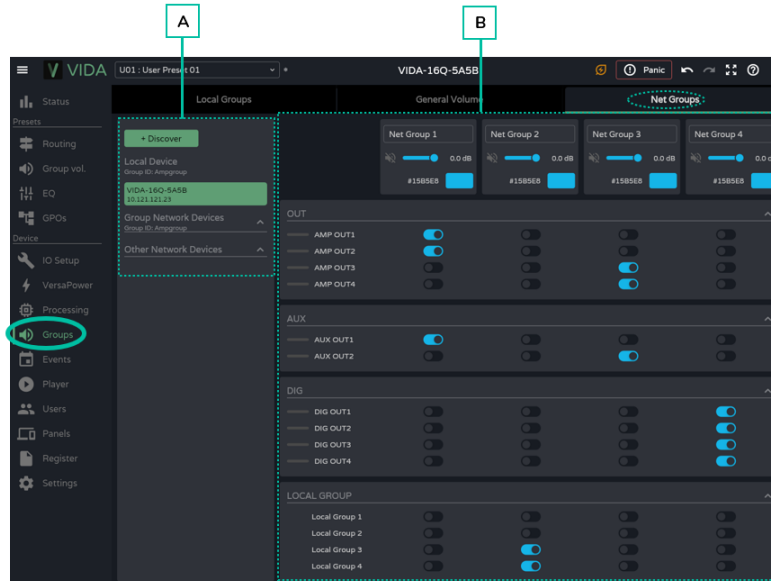


A. Management of devices






- **Discover:** discovers VIDA devices on the same local network.
- **Local Device:** local device. Equipment to which you are connected. Displays the Group ID, the name of the equipment and its IP address.
- **Group Network Devices:** group of network devices with the same Group ID as the local machine. Displays the Group ID, the name of the equipment and its IP address.

Clicking on a network device displays its group assignment matrix and options:

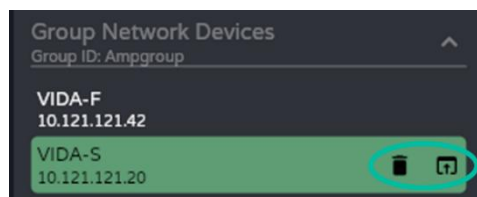

- : delete or forget the device. The Discover button returns to this list.
- : opens the device configuration app in a new window.
- **Other Network Devices:** group of network devices with a different Group ID than the local machine. Displays the Group ID, the name of the equipment and its IP address.

B. Network group configuration

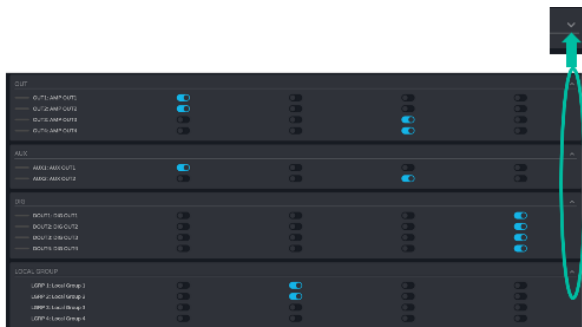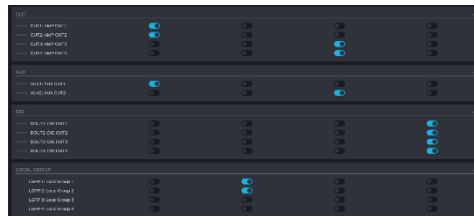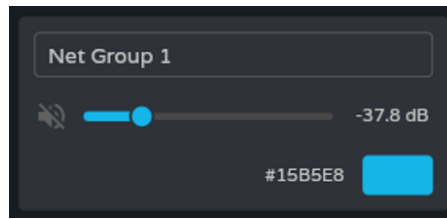

Group configuration:

- **Label:** group label.
- **Volume control and group mute.**
- **Colour:** allows assignment of a colour to the group.


Assignment of outputs to a network group.

- Each column corresponds to a group.
- All outputs enabled in the same column belong to the same group.


Output groups can be **expanded** or **collapsed**.

9.14 Events

Events that allow the device to automate actions and interact with external devices, such as volume control GPIs and internal functions such as the audio player.

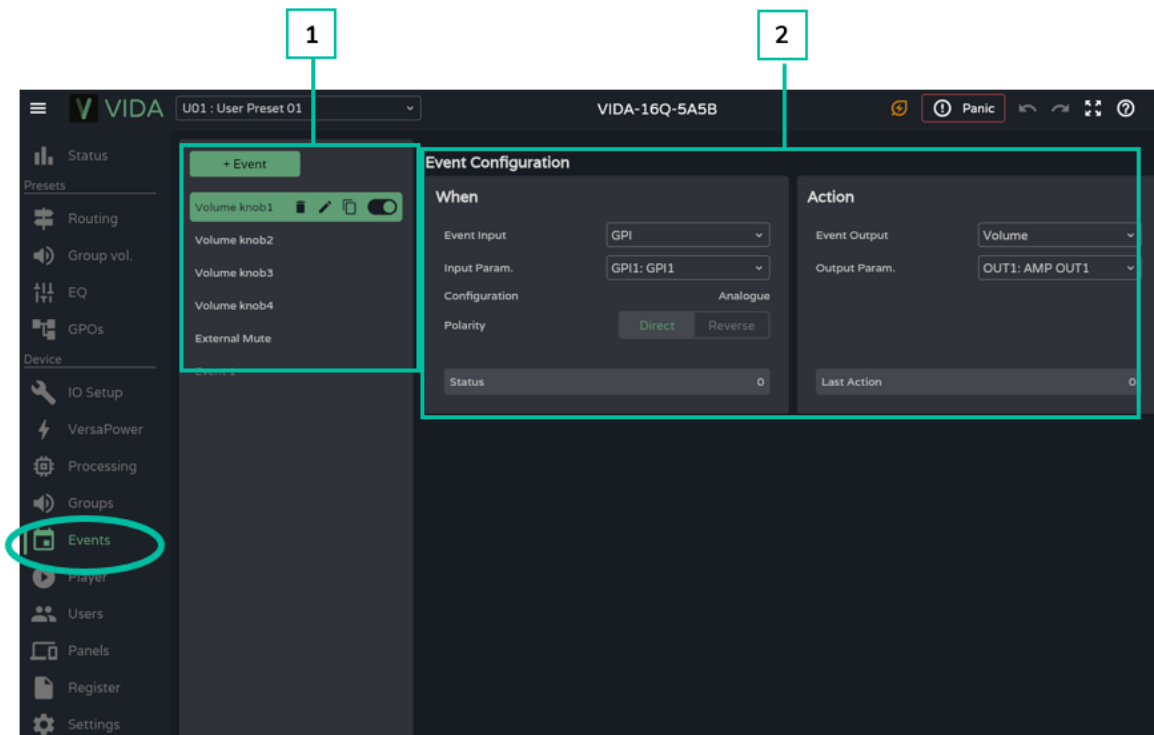


1. Event Management

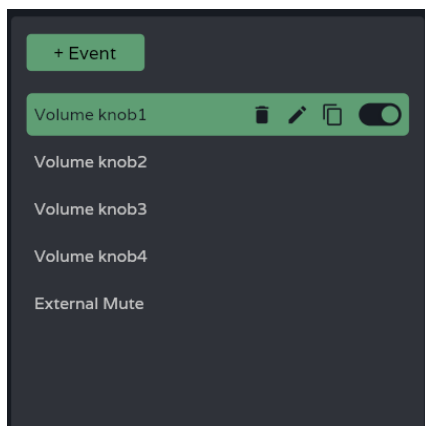


Management of the list of events available on the device. Allows the selection of an item from the list for display and configuration and to perform actions without having to open the configuration page.

By default there are five predetermined events which can be modified, disabled or deleted. They are recovered when the device is reset to factory settings.

- **Volume knob1-4:** volume control of the amplified outputs OUT1-4 via the front panel rotary knobs.
- **External Mute:** external mute affecting the four amplified outputs OUT1-4.



- **Add a new event.**
- A **unique name** must be given to add an event to the list

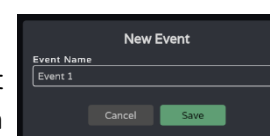



Event **enabled** and **selected**.



Event **enabled** and **focused**.



Event **disabled** and **selected**.



Event **disabled** and **not in focus**.



Quick actions (from left to right):



deletes the event from the device.




allows renaming of event.



creates a copy of the event.



enables/disables the event. A disabled event will have no effect, although it will remain in the list of available events and its configuration will not be lost.

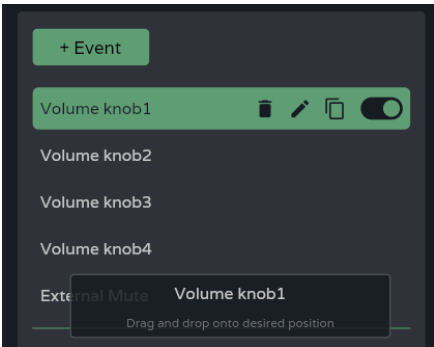

Move events from position:

- Allows **reordering** of the list of events.



Press and hold and drag to the desired position to relocate the event.



The position of an event is not linked to its priority over other events.

2. Event configuration

Programming of an event:

- **When:** when the event occurs or the input that triggers it.

Event Configuration

When

Event Input

Knob

Input Param.

Knob1: Knob1

Status

100

- **Action:** action of the event or output of the input stimulus.

Action

Event Output

Volume

Output Param.

OUT1: AMP OUT1

Status

100

Event Input: type of event input. Depending on the selection, the available options for each type of event will be loaded.

- **Knob:** rotary controls on the front panel.
- **GPI:** 0-10V GPI control inputs on the rear panel.
- **Load preset:** Load a preset.
- **Calendar:** calendar schedule.
- **External mute:** external mute input from the rear panel.

Event Input

Knob

Input Param.

✓ Knob

GPI

Load Preset

Calendar


External Mute

Status

9.14.1 Event Knob

The event input is one of the rotary controls on the front panel (Knobs).

When

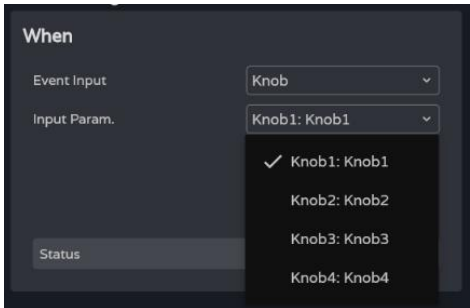


Four control knobs available.



Status. indicates the **current status of a rotary control**, where 0 is the minimum (left) and 100 is the maximum (right).

Action

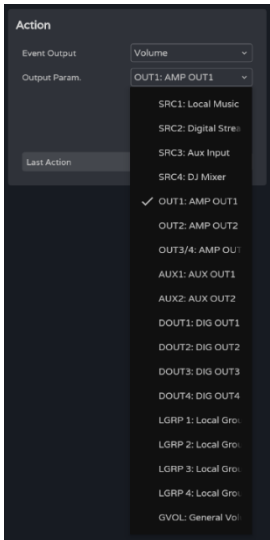

Enables **control of the volume of an audio signal**.




Last action: indicates the **last action for an event**.


9.14.2 Event GPI

The event input is one of the 0-10 VDC GPIs on the rear panel.

When

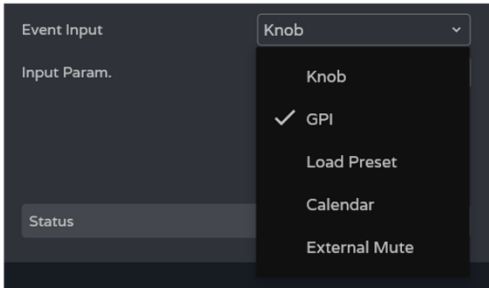

Four GPIs available.

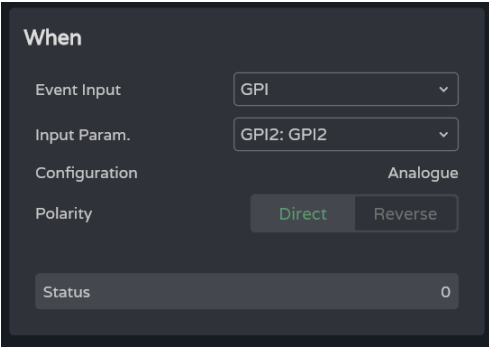


- **Input param.:** selection of GPI that triggers the event.
- **Configuration: GPI configuration.** Can be **analogue** (values 0-100), or **digital** (values 0 or 100). Depending on the GPI's operating mode, the Action section will display different options. Configurable in the SETTINGS / Knobs/GPIOs menu.
- **Polarity: determines how the signal received at the GPI is interpreted:** Direct/Reverse: 0 VDC is maximum and 10 VDC is minimum or vice versa.



Status: indicates the current status of the GPI, where 0 is the minimum and 100 is the maximum.

Home	
HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
	Navigation
PACKAGE CONTENTS	EQ
	Inputs / Outputs Setup
DESCRIPTION & FEATURES	Processing
	Events
PANEL FUNCTIONS	Users
	Register
INSTALL & CONNECT	TP-NET Protocol
	TECHNICAL DATA

Action (analogue mode)

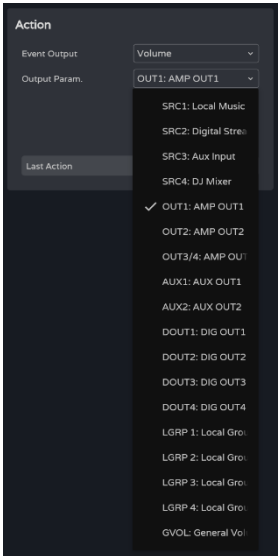


Enables control of the volume of an audio signal.



Last action: indicates the last action for an event.

 **Last Action** does not indicate the current state of the control, but **indicates the last state triggered by the event.**

Action (digital mode)

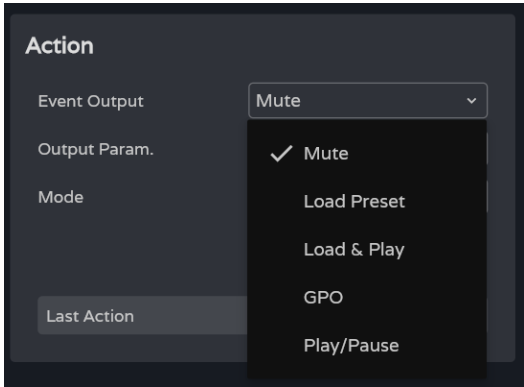


A **GPI-digital event** allows the following actions to be performed:

- **Mute:** Mutes the selected audio signal.
- **Load preset:** loads the selected preset.
- **Load & Play:** Load and play the selected playlist.
- **GPO:** modifies the status of the selected GPO.
- **Play/Pause:** resumes or stops the current playback by an audio player.


	Web GUI	Home & Updates		Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP	
	WebGUI	Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol		
Web	PRECAUTIONS	WARRANTY & ENVIRONMENT		PACKAGE CONTENTS		DESCRIPTION & FEATURES		PANEL FUNCTIONS		INSTALL & CONNECT		START-UP & OPERATION	TECHNICAL DATA

Load & Play

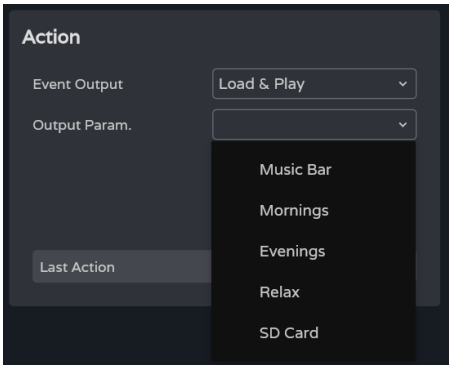

Load and play the selected playlist.

GPO

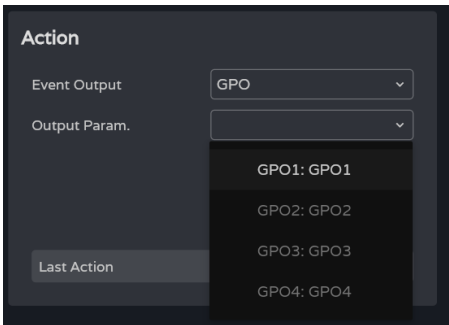


Modifies the status of the selected GPO .

Only GPOs configured as event GPOs are available.

Configurable in the COMMANDS/GPIOS settings.

Play/Pause

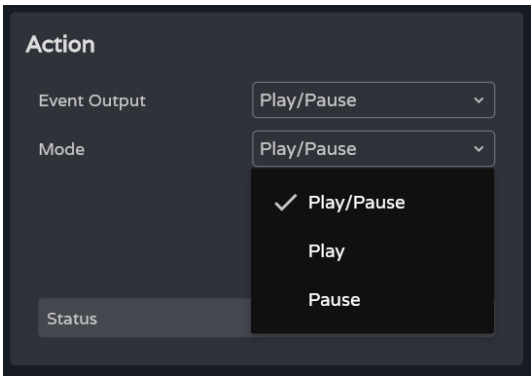

Resumes or pauses the current playback by an audio player.

- **Play/Pause:** toggles between resume and pause playback.
- **Play:** Switches the playback status to **Play**, regardless of the player's current state.
- **Pause:** Switches the playback status to **Pause**, regardless of the player's current status.

Home & Updates	
HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
PACKAGE CONTENTS	Navigation
DESCRIPTION & FEATURES	EQ
PANEL FUNCTIONS	Inputs / Outputs Setup
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP

9.14.3 Event Load Preset

The input to the event is the loading of a preset.

When

When

Event Input

Load Preset

Input Param.

U01: User Preset 01

U01: User Preset 01

U02: User Preset 02

U03: User Preset 03

U04: User Preset 04

U05: User Preset 05

U06: User Preset 06

U07: User Preset 07

U08: User Preset 08

U09: User Preset 09

U10: User Preset 10

Input param.: selection of the preset that triggers the event.

Action

Action

Event Output

Load & Play

Output Param.

Music Bar

Mornings

Evenings

Relax

SD Card


Last Action

Enables loading and playback of the specified playlist.


	Web GUI	Web GUI	Home & Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
HW	Web GUI	Web GUI	Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol
	PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA				

9.14.4 Event Calendar

Allows the **configuration of calendar-triggered events**. A calendar event performs a certain action, such as loading a message with priority according to configurable parameters: date, time, repetitions, etc.

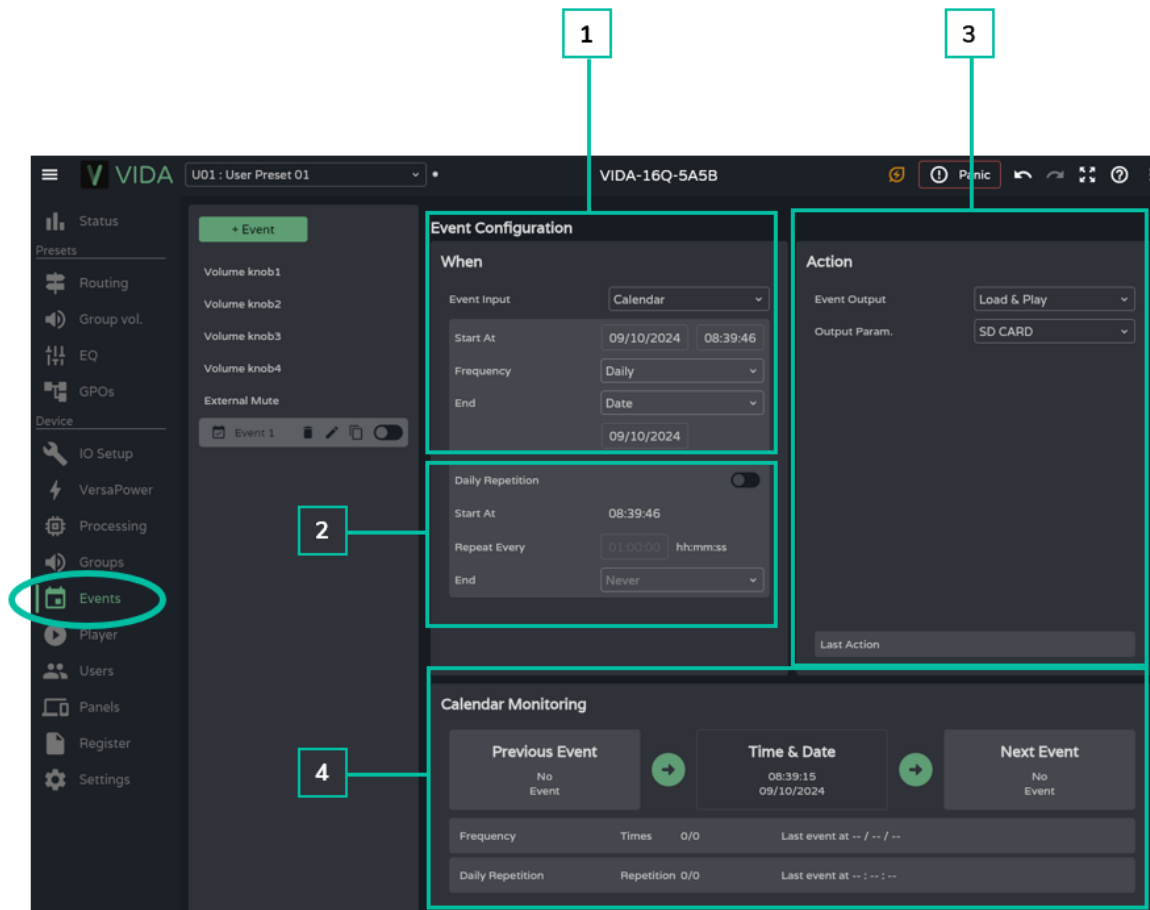

1. When

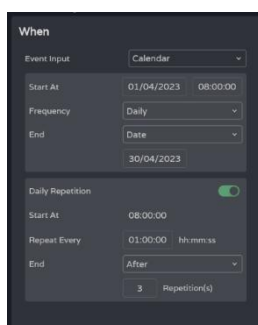


Setting the time/date that trigger an event and repeat triggers for the event.



Date and start time of the event.

! Priorities cannot be set between two events that are triggered on the same day at the same time. However, times can be set using seconds so that events can be sequenced at intervals of no less than one second.

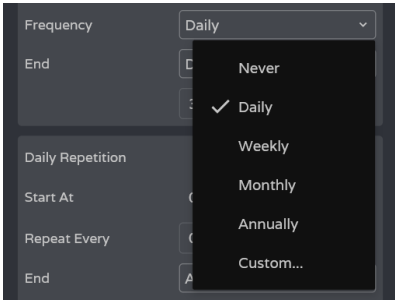


Frequency: Frequency of recurrence of the event. Days on which the event is triggered at the selected start time.

- **Never: one-shot event.** Not repeated.
- **Daily: repeated daily.** Repeated every day.
- **Weekly: repeated weekly.** Repeated every seven days, starting from the selected start date.
- **Monthly: repeated monthly.** Repeated on a particular date (N) in each month. N is the date in each month on which the event is triggered.

! If the selected date does not exist in the month, the event is not triggered. For example, if the trigger date is 31, the event is triggered only on 31 in each month. If a month does not have 31 days, the event is not triggered.

- **Annually: repeated yearly.** Repeated on the same day of the same month every year. The date in the month is the same in each successive year.
- **Custom: Custom repeat.** See section [Customise Frequency](#) below.

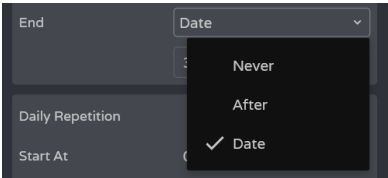


End of the event.

- **Never:** the event repeats indefinitely (2099).
- **After:** the event ends after N shots.
- **Date:** end date of the event. Last date triggered.


Customise Frequency

Custom Frequency allows custom frequencies to be set.

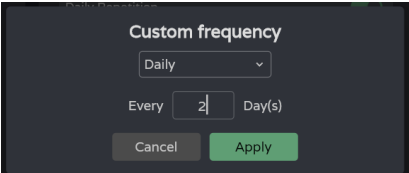

Daily: Daily.

Every: The event is triggered **every** N days.

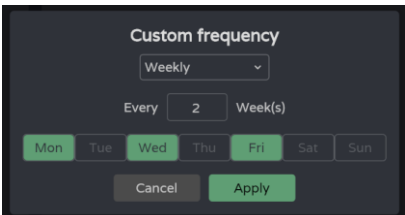

Weekly: Weekly: the event is triggered on the selected days of the week, every N weeks (shown under Every).

HW	Web GUI
WebGUI Connection	WebGUI Home & Updates
PRECAUTIONS	Settings
WARRANTY & ENVIRONMENT	Status
PACKAGE CONTENTS	Routing
DESCRIPTION & FEATURES	GPOs
PANEL FUNCTIONS	VersaPower
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP

Custom frequency

Monthly

Every 1 Month(s)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31				

Cancel Apply

Monthly: Monthly: the event is triggered on the selected days in each month, every N months.

! If the selected date does not exist in the month, the event is not triggered. For example, if the trigger date is 31, the event is triggered only on 31 in each month. If a month does not have 31 days, the event is not triggered.

Custom frequency

Annually

Every 1 Year(s)

Jan	Feb	Mar	Apr
May	Jun	Jul	Aug
Sep	Oct	Nov	Dec

Cancel Apply

Yearly: Yearly The event is triggered in the selected months of **each year**, **on the same day** as the start date, every N years.

Frequency

Custom...

Every 1 Year(s), on Jan, May, Sep

After applying the changes, a brief summary of the event trigger frequency setting is displayed.

HW	Web GUI
PRECAUTIONS	WebGUI Home & Updates
WARRANTY & ENVIRONMENT	WebGUI Connection
PACKAGE CONTENTS	Login
DESCRIPTION & FEATURES	Navigation
PANEL FUNCTIONS	EQ
INSTALL & CONNECT	Inputs / Outputs Setup
START-UP & OPERATION	Processing
TECHNICAL DATA	Events
	Users
	Register
	TP-NET Protocol
	APP

2. In-day Repeats

Daily Repetition ☒

Start At 08:00:00

Repeat Every 01:00:00 hh:mm:ss

End After

3 Repetition(s)

Repeat firings of an event within the same day.

Daily Repetition ☒

Enables or disables in-day repeats.

- **Disabled:** there are no in-day repeats. The event will be triggered once on each day, in function of the trigger frequency setting.
- **Enabled:** the event is repeated within the same day, according to the daily repeats configuration. The repeats occur every trigger day for the event, which is determined by the trigger frequency.

Start At 08:00:00

Start At: Time of first trigger, as configured by the event trigger frequency. Subsequent triggers during a day are viewed as repeats of the first trigger. **On a given day the event is triggered 1 (first trigger, frequency) plus N repetitions.**

Repeat Every 01:00:00 hh:mm:ss

Repeat Every: Repetition interval or frequency of in-day repetition.

End After

4 Repetition(s)


End of the event.

- **Never:** the event repeats indefinitely up to 23:59.
- **After:** the event ends after N repetitions.
- **Time:** end time for the event. After this time, no more repeats are triggered.

If a repeat takes place at the end time for repeats, it will be the last replay of the day.

HW	Web GUI
WebGUI Connection	WebGUI Home & Updates
PRECAUTIONS	Settings
WARRANTY & ENVIRONMENT	Status
PACKAGE CONTENTS	Routing
DESCRIPTION & FEATURES	GPOs
PANEL FUNCTIONS	VersaPower
INSTALL & CONNECT	Groups
START-UP & OPERATION	Player
TECHNICAL DATA	Panels
	APP


3. Action

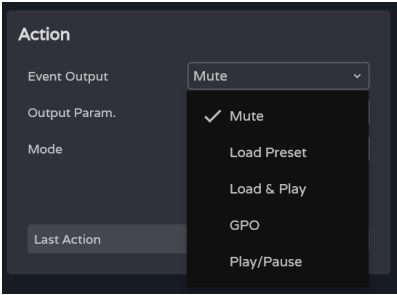

A calendar event allows the following actions:

- A. **Mute:** Mutes the selected audio signal.
- B. **Load Preset:** loads the selected preset.
- C. **Load & Play:** Load and play the selected playlist.
- D. **GPO:** modifies the status of the selected GPO .
- E. **Play/Pause:** Continues or stops the current playback by an audio player.


A. Action Mute:

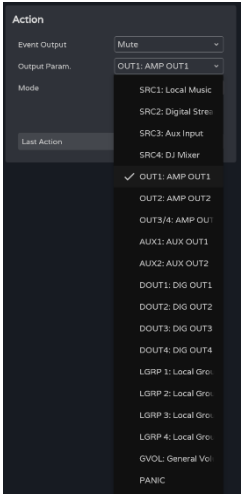

Mutes the selected audio signal.



PANIC mutes all outputs.

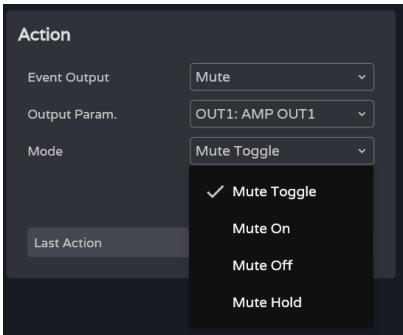


Mode: mode of operation:

- **Mute Toggle:** Toggles between Mute On and Mute Off.
- **Mute On:** changes the status to Mute On, regardless of Mute status.
- **Mute Off:** changes the status to Mute On, regardless of Mute status.
- **Mute Hold:** changes the status to Mute On for the duration of the input stimulus.


	Home & Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
Web GUI	Web GUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol
PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA			

B. Action Load Preset:

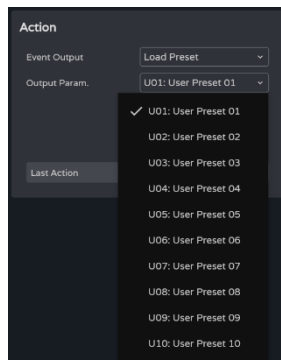


Load the selected preset.

C. Action Load & Play:

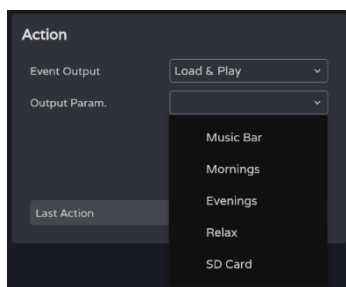

Load and play the selected playlist.

D. Action GPO:

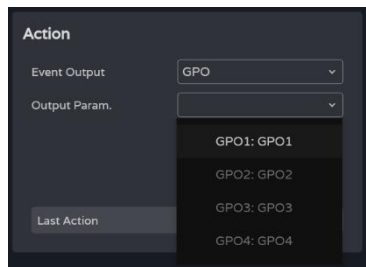

Modifies the status of the selected GPO.




Only GPOs configured as event GPOs are available.



Configurable in the Knobs/GPIOs settings.





E. Action Play/Pause:

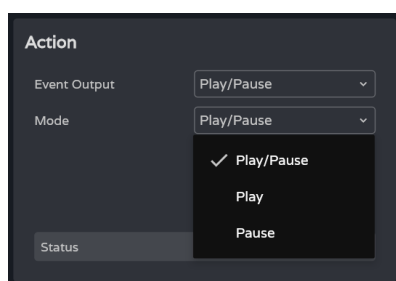

Resumes or pauses the current playback by an audio player.

- **Play/Pause:** Toggles between resume and pause playback.
- **Play:** changes the playback status to Play, regardless of the player's current state.
- **Pause:** switches the playback status to Pause, regardless of the player's current state.

4. Calendar Monitoring

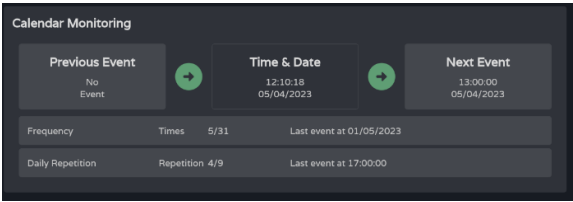

Monitoring the frequency of events and their daily repetition.

- Previous event
- Time and date
- Upcoming event

Indicates the number of times the event has been triggered, not counting its in-day repetitions.


- **Times:** first, number of times triggered / second, times remaining before the end of the event.
- **Last event at:** date of the last day on which the event is to be triggered.

Indicates the number of times the event has been repeated on the same day (in-day repetitions).

- **Repetition:** in first position, number of repeats / in second position repeats remaining before the end of the day.
- **Last event at:** time at which the event will be repeated for the last time.

9.14.5 Event External Mute

Mutes the selected **audio outputs** while the external contact close (External Mute) is closed.

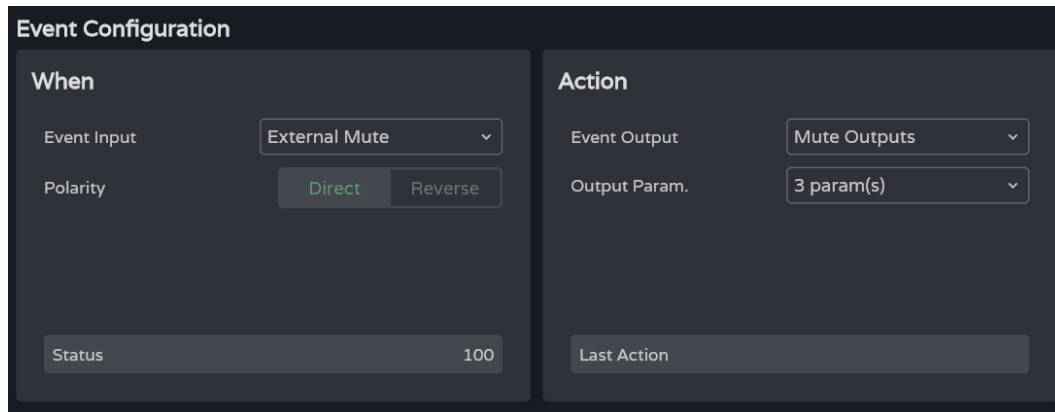

The screenshot shows the 'Event Configuration' window. It is divided into two main sections: 'When' and 'Action'.
When Section:
 - Event Input: A dropdown menu set to 'External Mute'.
 - Polarity: Two buttons, 'Direct' (highlighted in green) and 'Reverse'.
 - Status: A text field showing the value '100'.
Action Section:
 - Event Output: A dropdown menu set to 'Mute Outputs'.
 - Output Param.: A dropdown menu set to '3 param(s)'.
 - Last Action: A text field.

When



This detail shows the 'Polarity' section with two buttons: 'Direct' (highlighted in green) and 'Reverse'.

Polarity: determines how the signal received at Ext port is interpreted. Mute.


- **Direct:** Closed = 100; Open = 0.
- **Reverse:** Closed = 0; Open = 100.



This detail shows the 'Status' field with the value '100'.

Status: indicates the **current status** of the Ext. Mute.

Action

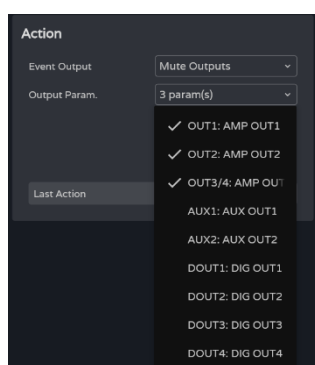

This detail shows the 'Action' section. It includes:
 - Event Output: A dropdown menu set to 'Mute Outputs'.
 - Output Param.: A dropdown menu set to '3 param(s)'.
 - A list of checkboxes for selecting outputs: OUT1: AMP OUT1, OUT2: AMP OUT2, OUT3/4: AMP OU1 (all checked), AUX1: AUX OUT1, AUX2: AUX OUT2, DOUT1: DIG OUT1, DOUT2: DIG OUT2, DOUT3: DIG OUT3, and DOUT4: DIG OUT4.

- **Mutes** the selected **audio outputs**. Multiple outputs can be selected.
- **Last action:** indicates the last action of the event.

 **Last Action** does not indicate the current status of Ext. Mute, but **indicates the last state triggered by the event**.

9.14.6 Event fault

When a fault is found, a GPO is triggered.

When

Event Input

Fault

Polarity

Direct

Reverse

Status

100

Action

Event Output

GPO

Output Param.

Last Action

When

Polarity

Direct

Reverse

Status

100

- **Polarity:** determines how the received signal is interpreted.
 - **Direct:** Closed = 100; Open = 0.
 - **Reverse:** Closed = 0; Open = 100.

Status: indicates the current status of the fault.

Action

Action

Event Output

GPO

Output Param.

Last Action

GPO1: GPO1

GPO2: GPO2

GPO3: GPO3

GPO4: GPO4


- Mutes the selected audio outputs. Multiple outputs can be selected.
- **Last action:** indicates the last action for an event.

Last Action does not indicate the current state, but rather the last previous state


9.15 Player

Embedded audio player, playlist management and file manager.

Enables **playback of mp3, ogg, WAV, FLAC, AIFF audio content from a microSD card** (not included) inserted into the microSD slot on the rear panel of the device (see microSD slot location in Panel Functions section).

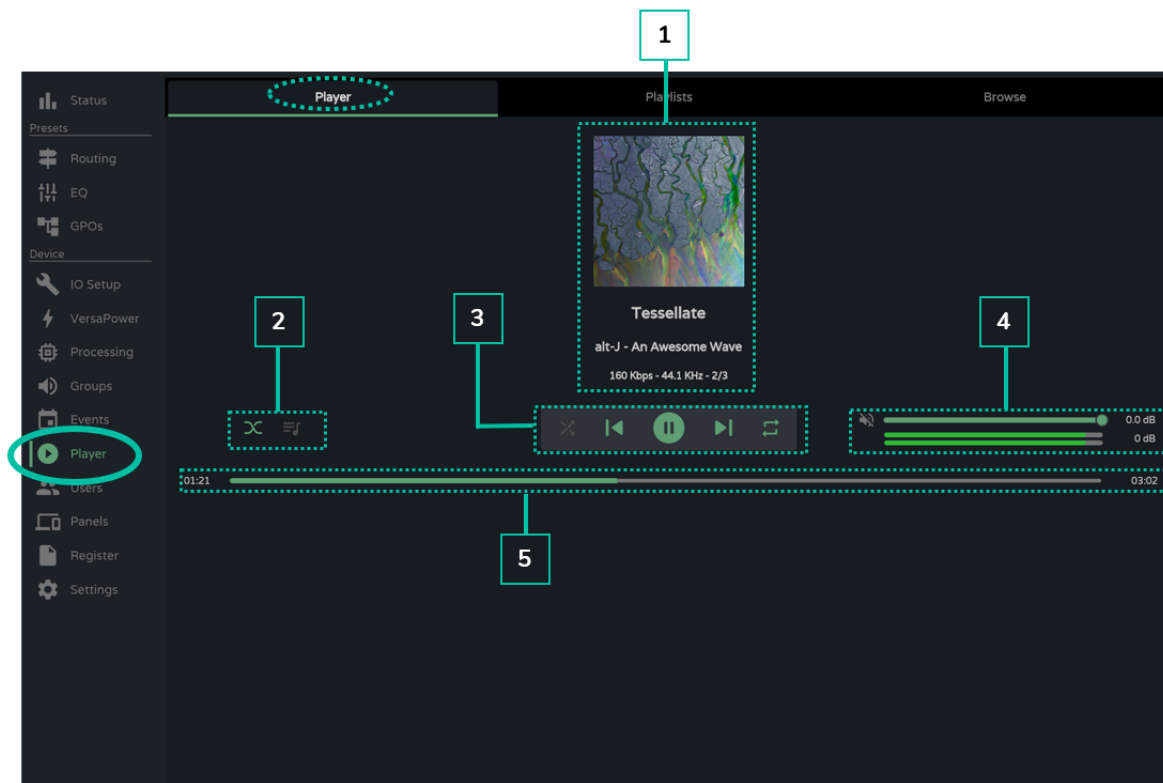


1

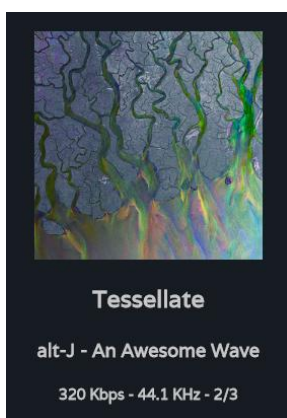

Playing track information:

- **Album art:** requires an Internet connection for album art retrieval to work.
- **Labels (3 screens):** Track title - Artist - Album
- **Track information:** bit-rate per second - sample rate - position in the playlist.

2



• **Fade mode:** transition between tracks.



• **Playback queue:**

- **Name of the playlist.**
- The **number of items** in the playlist.
- The **track in playback.**

💡 Allows **any item in the list** be played by clicking **Play** when it is highlighted.



3



Player control, from left to right:

- **Playback mode:** sequential / random.
- **Previous track.**
- Resume playback (**Play / Pause**).
- **Next track.**
- **Repeat mode:**

4



Volume, mute and VUs for the audio player

5



Transport bar:

- Playback time.
- Time remaining.

💡 Allows **fast forward/reverse** of the track.

HW	Web GUI
WebGUI Connection	WebGUI Home & Updates
PRECAUTIONS	Settings
WARRANTY & ENVIRONMENT	Status
PACKAGE CONTENTS	Routing
DESCRIPTION & FEATURES	GPOs
PANEL FUNCTIONS	VersaPower
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP

9.15.1 Playlists

Music playlists and their management. A playlist is a group of items that has an alias and an address on the microSD card. A playlist can contain several addresses that can point to:


- **Files:** an audio file.
- **Folders:** containing audio files.




Valid audio files: mp3, ogg, WAV, FLAC, AIFF



If a file is invalid or the folder contains invalid files, such as images, **the player will ignore those files** and only play valid audio files.

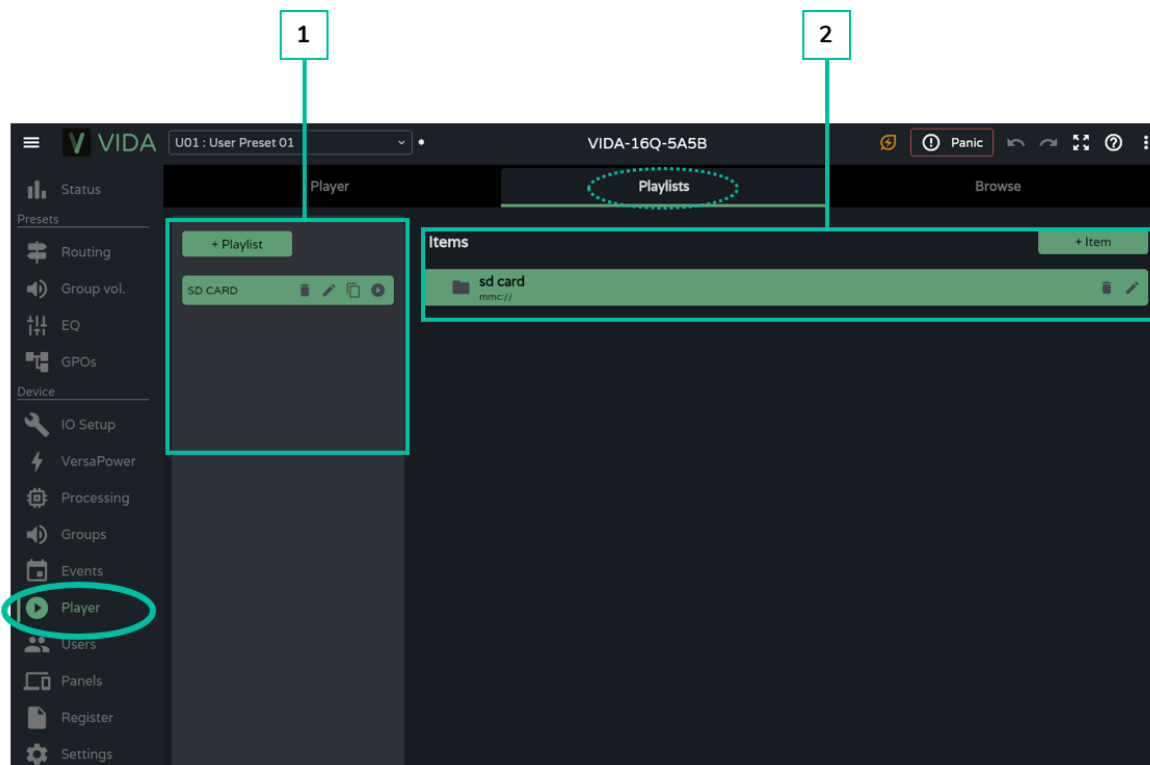


1. Playlist management

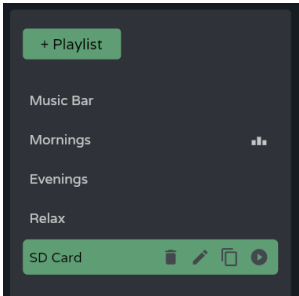

Management of the playlists available on the device.


Allows the selection of an item from the list for display and configuration and to perform actions without having to open the configuration page.



Add a new play list.



A unique name must be given to add the playlist to the list.

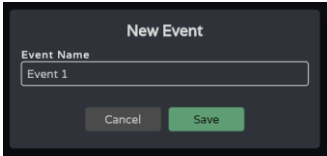

Selected playlist.



Focused playlist.



Playlist not in focus.



Quick actions (from left to right):



delete a list from the device.



rename a list.




creates a copy of a list.



shows the current playlist and enables a playlist to be played from the beginning.



If the play button for a playlist is clicked, it will start playing from the beginning.

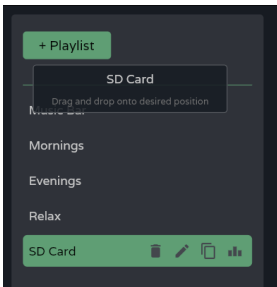


Move position playlists: allows reordering of playlists.

Press and hold and drag to the desired position to reposition the list.



The order of the playlists is linked to the order in which they are displayed in the user panels.

2. Playlist settings




New Item

Alias
All music

Path/URL
mmc://

Cancel Save

- Adds a new item to the playlist.
- An **alias must be given** to add an item to the list. It can be left blank, in which case the filename will automatically be set as its alias.
- **The filename (path/url) must be a valid address.**
- The **file/folder must already exist on the microSD card.**

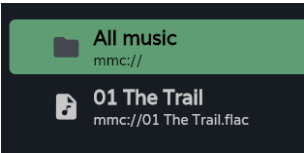

Element **information**:

- Audio file/folder **icon**.
- **Alias**
- **Address**



Quick actions (from left to right):



removes the **item** from the playlist.




rename an item.


Home														
Web GUI	WebGUI Home & Updates			Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP		
	WebGUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol				
HW	PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES			PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA				

9.15.2 Browser

MicroSD card browser. Allows addition and deletion of files and folders on the microSD card and viewing of their content to create playlists or edit existing lists. With no need to remove the microSD card from the device.

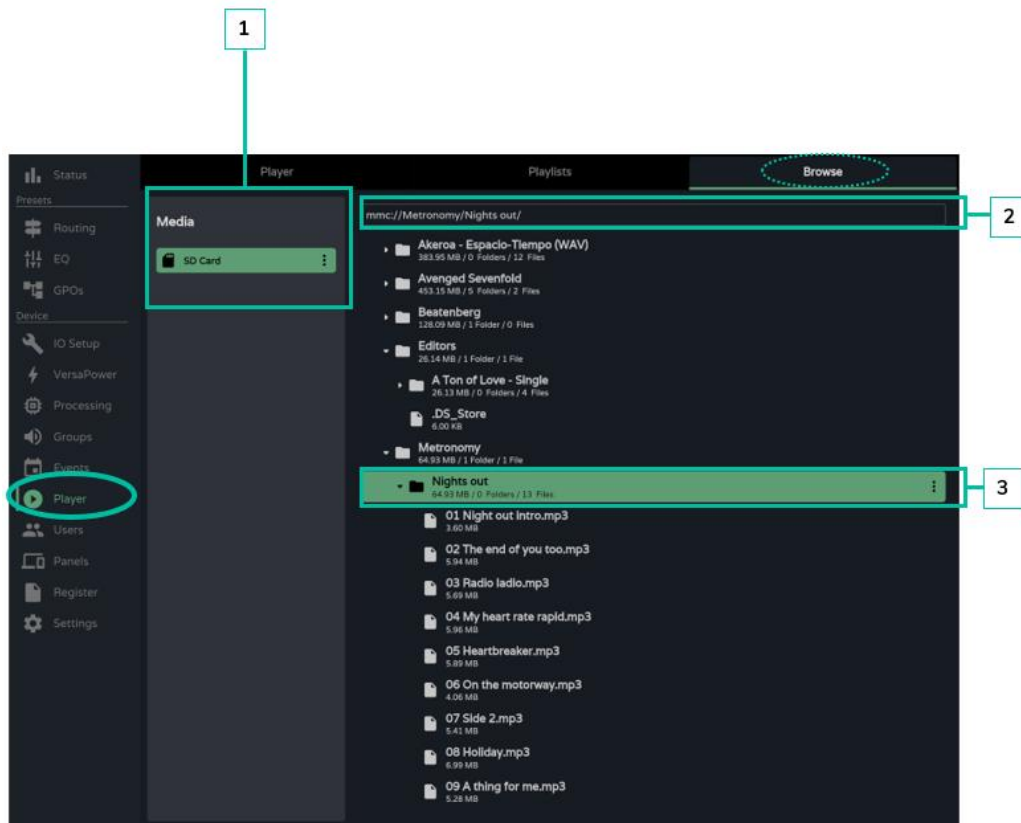

1. Medium

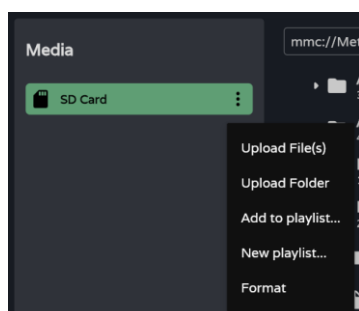

Media selection and media options:

- **Upload files:** adds files from your computer to the microSD card.
- **Upload folder:** adds a folder from your computer to the microSD card.
- **Add to playlist:** add the root address of the microSD card to an existing playlist ("mmc://").
- **New playlist:** creates a playlist with the root address of the microSD card ("mmc://").
- **Format:** format the microSD card to a valid format for the device.

! Formatting the microSD card will delete all content.


2. Route

mmic://Metronomy/Nights out/

Address or path of the selected item.


- **Autocomplete** when an item is selected.
- An **address** can be entered manually.
- Allows **copying and pasting**.

3. Folders and Files

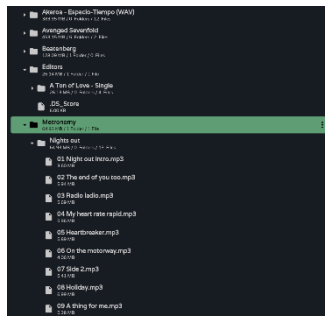


Folders and files on the microSD card:

- Selecting a folder displays its contents.
- To **collapse** the contents of a folder, click on it again.
- Allows **browsing of the content of media** (microSD card).

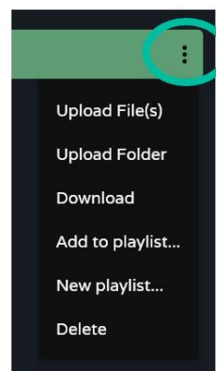

Folder options:

- **Upload files:** adds files from your computer to the selected folder.
- **Upload folder:** adds a folder from your computer to the selected folder.
- **Add to playlist...:** adds the address of the selected folder to an existing playlist.
- **New playlist...:** creates a playlist with the address of the selected folder.
- **Delete:** deletes the folder and its contents.

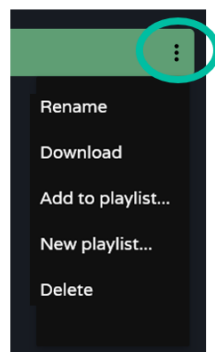

Archive options:


- **Rename:** rename the file
- **Add to playlist...:** adds the address of the selected file to an existing playlist.
- **New playlist...:** creates a playlist with the address of the selected file.
- **Delete:** deletes the archive and its contents.

9.16 Users


Management of device users and display of user panels assigned to users.

There are **three user profiles**:

- **Administrator:** system administrator. Has access to the device configuration web page.
- **Public:** public user. Has access to the user panels assigned to the profile. **No login credentials are required.**
- **Users:** users. Each user has access to the user panels assigned to them by the administrator. **Requires login credentials.**

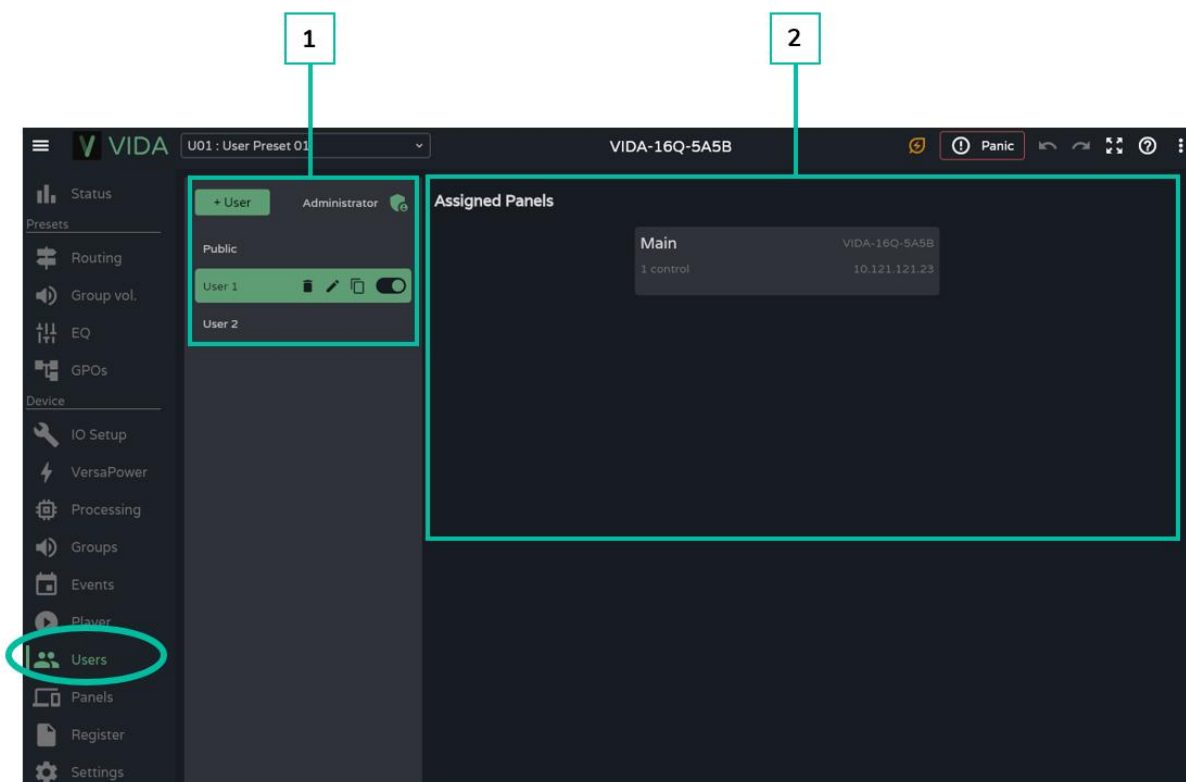


1. User management

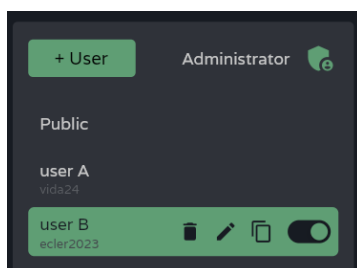

Management of users available on the device.

Allows the selection of an item from the list, for display of the panels assigned to the user and quick actions.



Add a new user.

 A **unique name** must be **given** to add the user to the list of users of the device.

New User

Username

User 1


Password

Cancel

Save



Same user on multiple devices: If the same user (identical name and password) is created on different devices belonging to the same local network, **it is possible to assign panels to this user on different devices, allowing a single user to control several VIDA devices.**



Modifies the access credentials for the administrator profile.

 Default: admin / admin

Edit Admin

Username

admin

Password

admin

Cancel

Save



User enabled and selected.



User enabled and focused.



User disabled and selected.



User disabled and focused.

HW	Web GUI	WebGUI Home & Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
PRECAUTIONS	WebGUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol	TECHNICAL DATA
WARRANTY & ENVIRONMENT											



Quick actions (from left to right):



removes a user from the device.



allows a user to be **renamed** and assigned a new password.



creates a **copy** of the user.





Enables/disables the user. A disabled user will not be able to access their panels, although they will stay in the list of available users and their settings will not be lost.



When deleting a user with assigned panels, you will be asked what should be done with those panels. Panels can:



- **Be kept (Keep panels)**, for the other users assigned to the same panel or for assignment to other users.
- **Deleted (Delete panels)**, when they will be unavailable to other users.

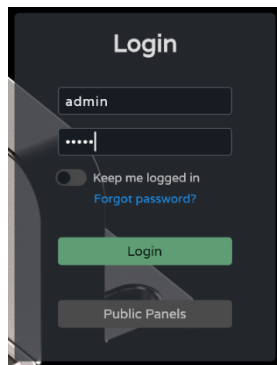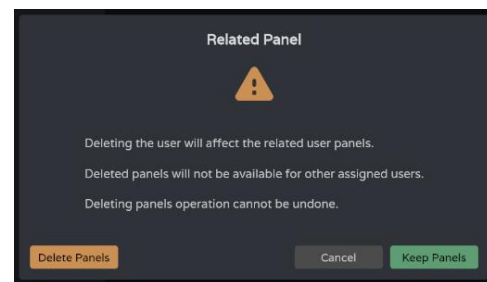

The public profile can only be **enabled or disabled** and cannot undergo any other operations.



The public profile is **enabled by default**. If disabled, the option to access the public panels on the login page will not be available.

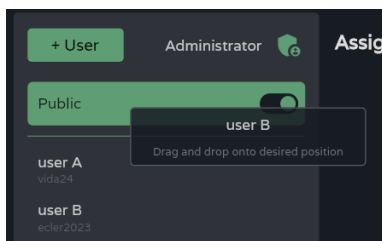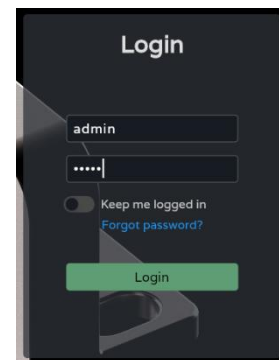

Move position of users:

- **reorder the list** of users.
- **Press and hold and drag to the desired position** to relocate the user.



Position 1 is always taken by the public profile.

2. Assigned Panels

Displays the panels assigned to the selected user. This list shows the panels on the local device and the panels on other devices for the same user.



The list of user panels can be sorted and can offer a different order for each user. Press, hold and drag to the desired position to relocate the Panel.


Main	VIDA-24Q-1156	
4 controls	192.168.1.248	

The selected user has access to the dashboard, where the following information can be viewed:


- **Name** of the panel.
- **Number of controls** within the panel.
- **Name of the device** that contains the panel.
- **IP address of the device** that contains the panel.
- **Edit:** quick access to panel settings.
- **Delete:** removes the panel.
- **Open in new tab:** When a panel is located on another networked VIDA device, there is a shortcut to the settings page for that device. Open a new browser tab with the IP address of the device.

9.17 Panels


Remote control panels for users. A user control panel is a **set of controls, which allow users to remotely control** - from the Ecler VIDA application or from a browser - the volume, the audio player, sources and presets, and equalise one or several zones at a time.

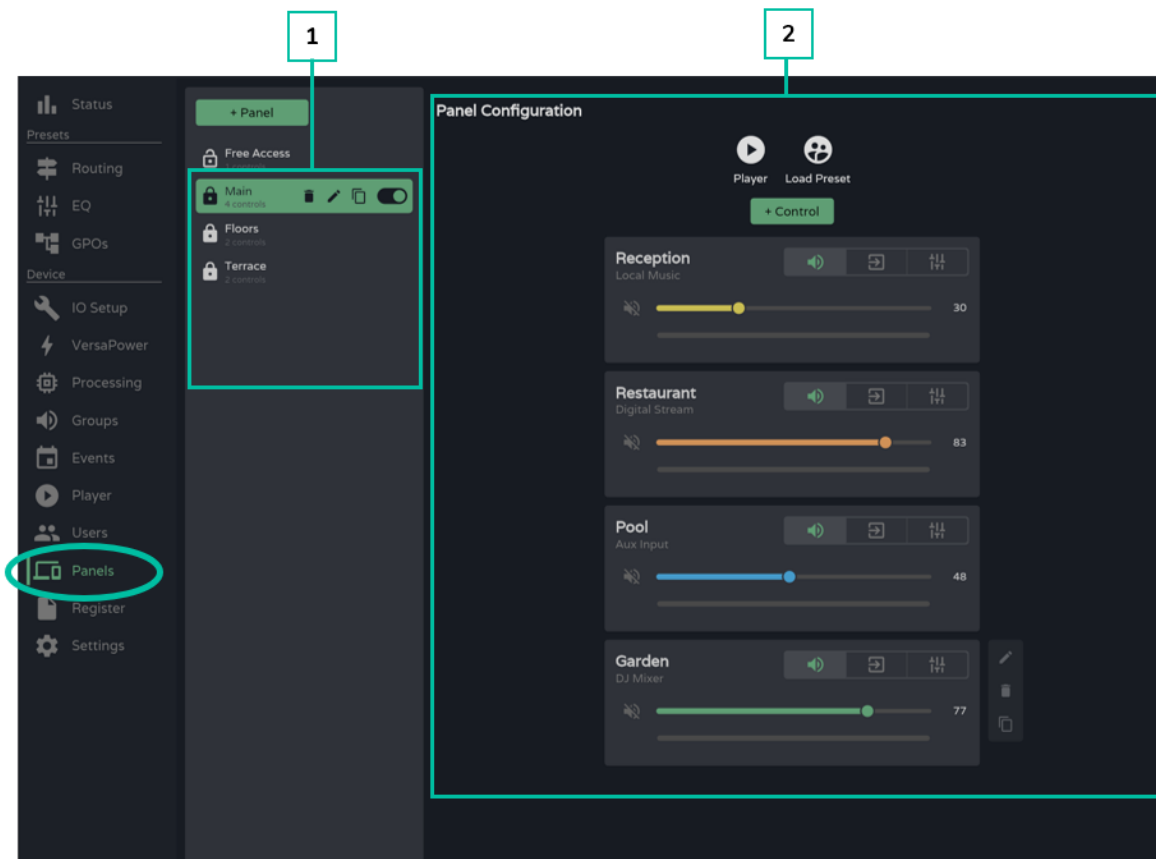

1. Panel Management

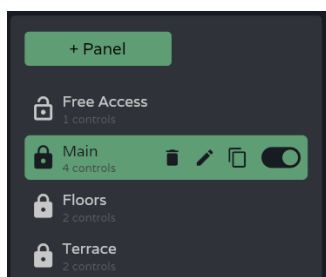


Management of the list of panels available on the device. Allows the **selection of an item from the list for display and configuration** and to perform actions without having to open the configuration page.

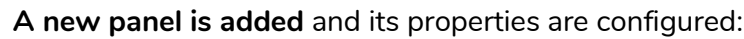





- **Access to player control and playlist selection.**

-  **You will only have access to the presets available to users** (Presets for panels - configurable in the presets management drop-down menu).

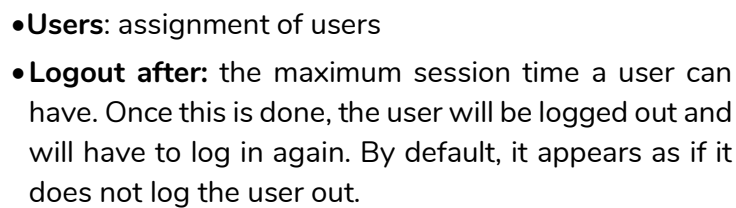


-  **A panel can be assigned to the public profile and users.** If assigned to both, the public panel indicator is displayed.

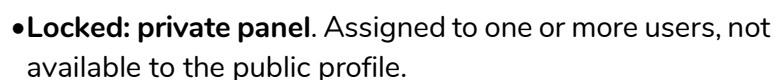

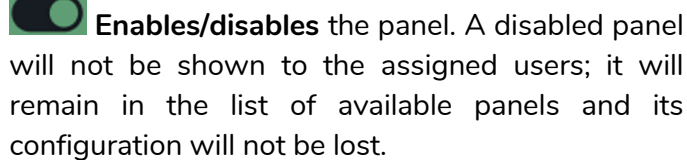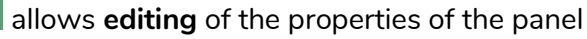


- Allows the **list of panels** to be **reordered**.
- **Press and hold and drag to the desired position** to relocate the event.

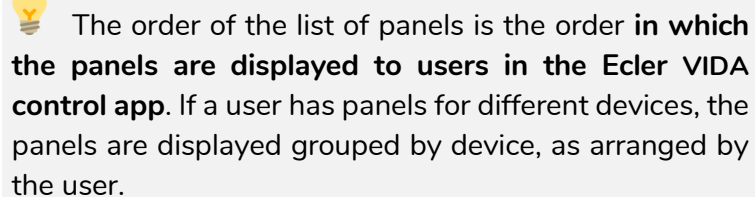


Allows **configuration** of panel controls.



- Configurable in the panel properties.
- Audio player control and playlist selection.
- Selection of presets allowed per user.

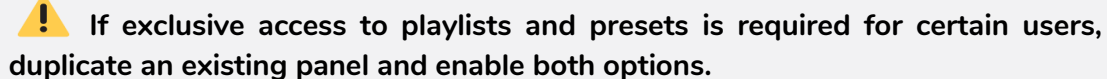

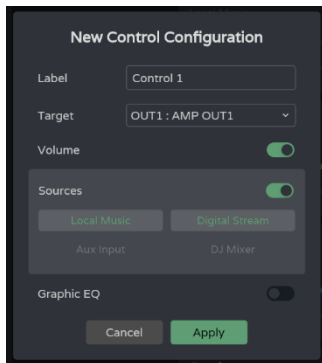

- **Label:** a unique name must be given to add the control to the list

-



-




-
- The screenshot shows the 'Reception' interface for 'Local Music'. At the top, there are controls for volume, a play button, and a visualization icon. Below this is a 'Voice Boost' toggle switch, which is currently turned off. The main part of the interface consists of eight vertical frequency sliders. Each slider has a frequency label at the bottom: 63, 125, 250, 500, 1k, 2k, 4k, and 8k. The sliders are arranged in a row, and each has a white circular knob. The knobs are positioned at various levels, indicating the gain for each frequency. The background is dark gray.

💡 If no control is enabled: volume, source selection or equaliser, the control displays the level of the selected signal. Useful if the area only needs to be monitored.



Control

Once configured controls created in a panel are available to users assigned to that panel. The controls shown in the panel configuration can be manipulated by both the administrator and the user.

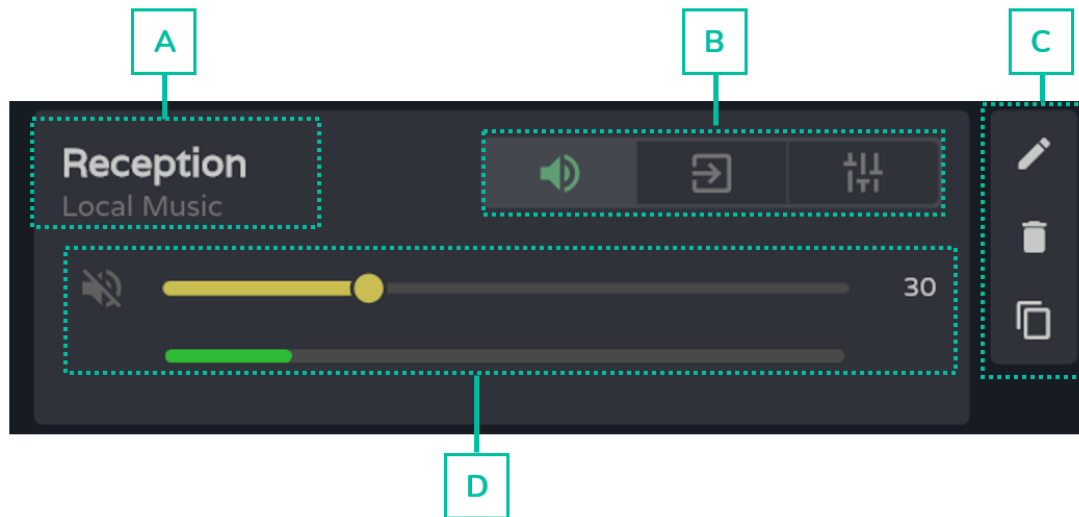

- A. Control label and selected source.
- B. One volume, source and EQ control selector.
- C. Control options: edit properties, delete and duplicate.
- D. Graphic volume, source and equaliser control. Displayed depending on the option chosen in the selector.

9.18 Register

System activity log. Allows detailed visualisation of device activity, for troubleshooting or programming tracking.

The screenshot shows the ecler VIDA interface for device VIDA-24Q-1156. The 'Register' section is active, displaying system information and a log of events. The interface includes a sidebar with navigation options like Status, Presets, Routing, EQ, GPOs, IO Setup, VersaPower, Processing, Groups, Events, Player, Users, Panels, and Register. The main area displays system information and a detailed log of events. Numbered callouts 1 through 4 highlight specific features: 1 points to the 'Information' tab, 2 points to the 'Export Register' button, 3 points to the search bar, and 4 points to the log table.


1. Information

Information	
Device Time & Date	16:11:31 - 06/04/2023
Running time	1 hour 1 min 50 sec

Basic system information.

- Local time and date for the device
- Time the equipment has been in operation since the last restart.

2. Export register

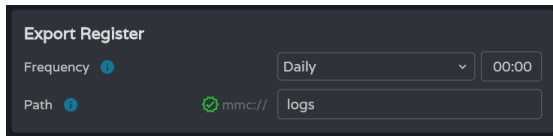

Export a copy of the log lines to the microSD card.

- **Frequency: export frequency**
 - **Daily:** saves a **daily copy** of the log at the selected time
 - **Weekly:** saves a **weekly copy** of the log every Monday at the selected time
 - **Monthly:** keeps a **monthly** copy of the log on the first day of each month at the selected time
- **Path:** address of the microSD folder where copies of the log are stored:



If **export is enabled**, but the **address is empty**, logs are saved to the root of the microSD card.



If the **address entered does not exist**, the **folder will be created**.



The **following conditions must be met for the export to be successful**:

- The device is switched on the day and at the time scheduled for log export.
- The microSD card is inserted.
- The address has not been changed.

3. Search

Search in the system registry. Filter and generate reports with the required information.

Search

There is available register information of the last 27 days.

By date

Today (console) ▾

Text

Type

Any ▾

Category

Any ▾

Lines per page

25 ▾

Cancel

Apply

There is available register information of the last 27 days.

Indicates the **age of the record**.

Text

OUT1

Filter by specific words.

By date

Today (console) ▾

Text

Type

Category

Lines per page

Cancel

Apply

Today (console) ✓


This week

This month

Custom...

Filter by date:

- **Today (console):** displays the log for the day, from 00:00 to the time of search.
- **This week:** shows the log since Monday.
- **This month:** shows the log from the 1st of the month.
- **Custom:** allows custom date range.

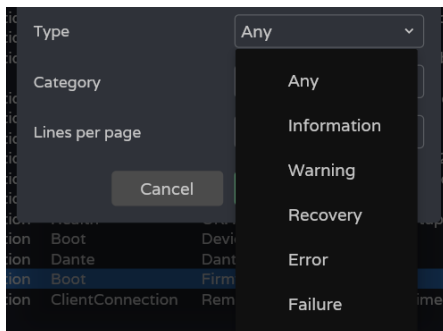

Filter by log line type. More than one can be selected:

- **Any:** all types.
- **Information:** normal activity.
- **Warning:** some functions may not be working properly. Shown in yellow.

2023-04-06 09:50:13.113 **Warning** Dante Stopped or muted state

- **Recovery:** recovery from a warning or error. Shown in green.

2023-04-06 12:04:03.110 **Recovery** Network Internet connection OK

- **Error:** error, something is not working properly. The proper functioning of the system may be compromised. Shown in red.


2023-04-06 09:50:21.630 **Error** Network Internet connection failed

- **Failure:** system failure, critical error. The system requires immediate attention. Shown in red.




System starts are shown in blue, for easy identification.

2023-04-06 12:06:22.917 **Information** Boot Firmware version v1.01r27

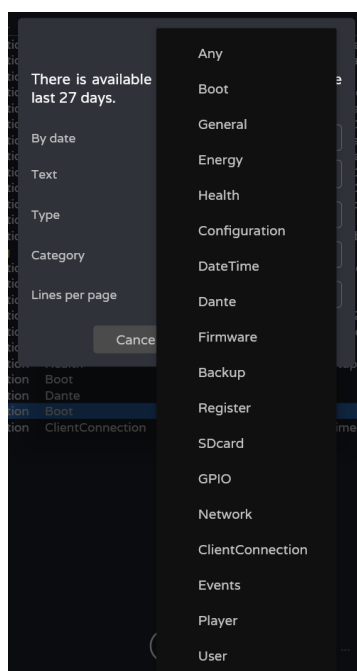


Filter by line category of the log. More than one can be selected. Allows a more refined search.

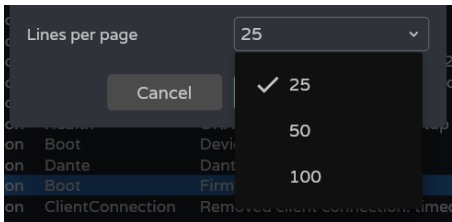

Number of lines displayed per page.




When the search is confirmed, the **filters applied** are displayed in the console. They can be quickly deleted and new ones added. The last search performed is saved.



4. Today (console)

Log console. Displays real-time activity on the system. Each day the previous day's log is stored and replaced by the succeeding log.

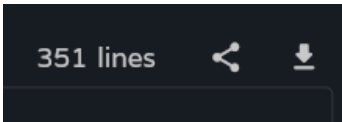


- Indicates the **log lines, after filtering.**
-  **Share log**, copy to the clipboard the selected lines, for sharing **in apps** like an email manager, e.g.
-  **Download log**, save a **copy on your computer** (browser download folder) of the selected lines in CSV format. It can be opened using a spreadsheet program.

Device	Date & Time	Type	Category	Description
--------	-------------	------	----------	-------------

Header of the log lines (columns):

- **Device Date&Time:** local date and time of the device at which the activity event occurs. It can be sorted in ascending or descending order.
- **Type:** type of activity event. Sortable alphabetically, grouping activity events by type.
- **Category:** activity event category. Sortable alphabetically, grouping activity events by category.
- **Description:** brief description of the activity event



Log pagination.

10. ECLER VIDA APP



Ecler VIDA is an application for the control of one or more VIDA series amplifiers on the same local network through customised user control panels designed by the system administrator.

The app allows users to manage volume, select sources, equalise, select playlists and control the internal audio player, select presets and more.

The panels are designed exclusively for each user, simply and quickly. There is also a tool for commissioning the equipment. Compatible with Ecler

VIDA series amplifiers. An Ecler VIDA series amplifier is required to create user panels and publish them on the local network.

Available for iOS and Android. Download the app free from:



HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
PACKAGE CONTENTS	Navigation
DESCRIPTION & FEATURES	EQ
PANEL FUNCTIONS	Inputs / Outputs Setup
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP

10.1 Login

There are **two** access profiles for the app:



- **Administrator:** An administrator **has access to all functions of the VIDA device** and can configure any amplifier parameter, event, peripherals, etc. An administrator creates users and control panels for the Ecler VIDA user app.
- **User:** users (non-administrator users or end-users of the system) have **limited access**. The only functions available to normal users are controls (e.g. controlling the volume of an output) but no configuration functions.




The administrator profile is disabled in the iOS and Android apps.



Username and passwords are case-sensitive.

- **Keep me logged in**
When this function is active, a new login will not be required each time the VIDA web app is opened. The LOGIN page will not be displayed and the last page visited will be displayed. To deactivate, log out of the web app.
- **Forgot password**
Allows users to **change their password** Password.
- **Public Panels**
Access to **control panels, public profile** (no login credentials required). These control panels must be created by an administrator.
- **Navigation**
On accessing the app, **the last panel selected is displayed**. The app has a navigation menu at the bottom of the screen:

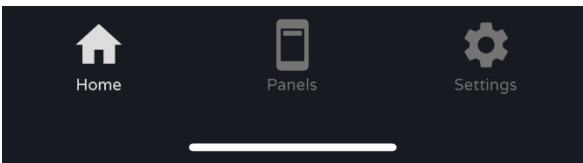

- **Home:** panel selected.
- **Panels:** list of panels assigned to the user.
- **Settings:** application settings.


10.2 Setup Device

Quick start-up and/or discovery of VIDA devices on the same local network.



If you are setting up an installation with several VIDA devices, log in to the web app of any of the devices or open the mobile app, click on "Setup device" on the welcome page to discover VIDA devices and get network information for the devices and easy access to them.

The Setup Device button takes you to the tutorial:

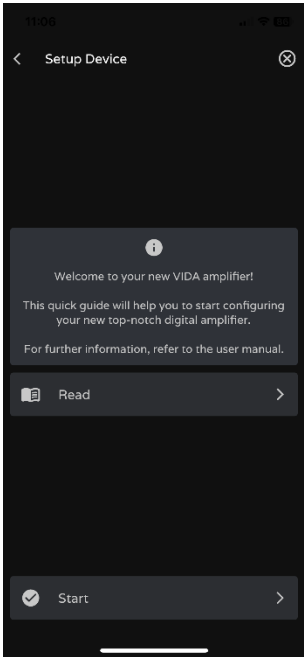


- Welcome page.
- Link to device documentation.




Connect the VIDA device to the mains and switch on the device.

Home	
HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
PACKAGE CONTENTS	Navigation
DESCRIPTION & FEATURES	EQ
PANEL FUNCTIONS	Inputs / Outputs Setup
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP

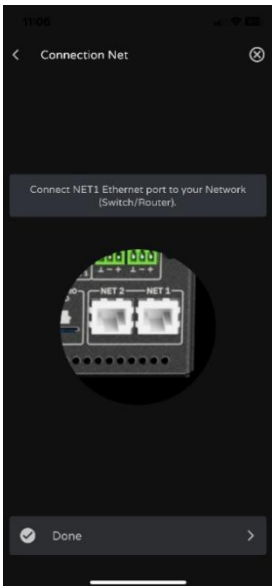


- **Connect the VIDA device to the router/switch** using a CAT5 cable or higher (NET1 Ethernet port on the VIDA device).
- **Connect the Smartphone to the same local network as the VIDA device over WiFi.**

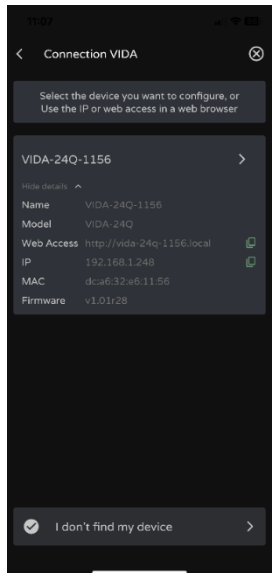

If there are devices on the local network that have been discovered, a **list of accessible devices on the local network is displayed.**

- Clicking on the name of a device opens a tab in the default browser for the IP address of the device.
- Important information about the device is displayed, with options for access to its web app (for configuration by the system administrator). Copy one or more links and paste them into your browser, on the same or another device.

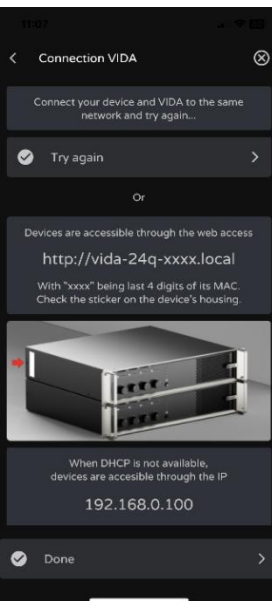


If there are no computers on the local network or none have been discovered, other connection options and troubleshooting options are displayed:

- **Try again: try to re-establish a connection.** When a connection has not been made correctly or the network configuration of a device has been changed recently.
- **Check that your local network has a DHCP server.** If no DHCP server is found the VIDA device can be accessed via IP address: 192.168.0.100. Locate your smartphone in the same IP range to access the device.

															
Web GUI	WebGUI Home & Updates		Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP				
	WebGUI Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol					
HW	PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA							

10.3 Home

Home page shows the selected panel (from the list of available panels). This page shows all the controls for a panel.

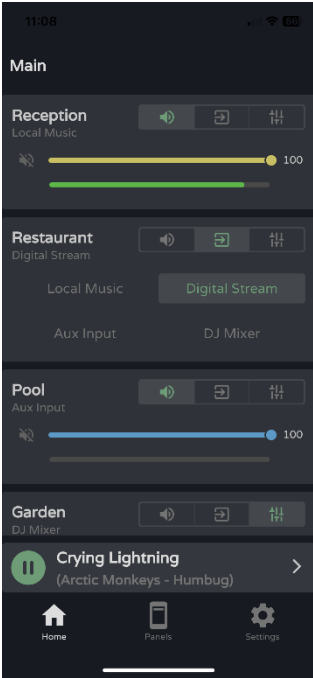

Audio player


If the audio player is enabled in the panel, playback control and playing track information are displayed at the bottom of the screen. Clicking on the control opens the audio player page.



HW	Web GUI
WebGUI Connection	WebGUI Home & Updates
PRECAUTIONS	Settings
WARRANTY & ENVIRONMENT	Status
PACKAGE CONTENTS	Routing
DESCRIPTION & FEATURES	GPOs
PANEL FUNCTIONS	VersaPower
INSTALL & CONNECT	Groups
START-UP & OPERATION	Player
TECHNICAL DATA	Panels
	APP




Playlist selection. All playlists available on the device are displayed.

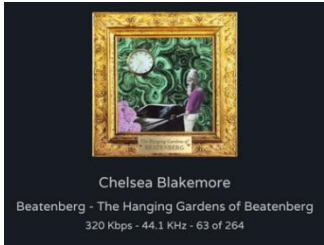


Playing track information:

- **Album art:** requires an Internet connection for album art retrieval to work.
- **Tags ID3:** Track title - Artist - Album.
- **Track information:** bit-rate per second - sample rate - position in the playlist.

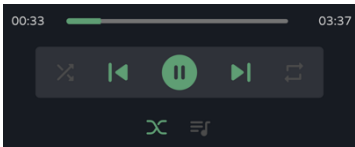

Audio player control:

- Playback time.
- Time remaining.
- Allows fast forward/reverse of the track.
- Sequential/random playback mode.
- Previous track.
- Resume playback (Play / Pause).
- Next track.
- Repeat mode:
- Fade mode: transition between tracks.
- See playback queue.

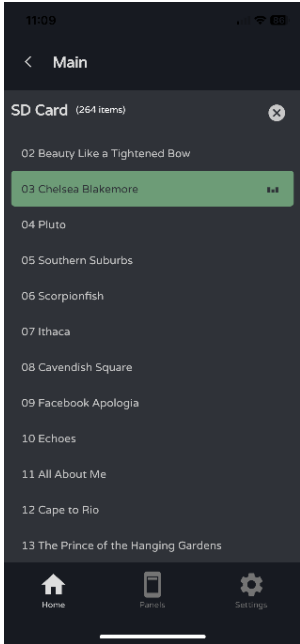


Playback queue:

- Name of the playlist.
- The number of items in the playlist.
- The track in playback.
- Allows you to play any item in the list by clicking play over the item.

HW	Web GUI
PRECAUTIONS	WebGUI Home & Updates
WARRANTY & ENVIRONMENT	WebGUI Connection
PACKAGE CONTENTS	Login
DESCRIPTION & FEATURES	Navigation
PANEL FUNCTIONS	Settings
INSTALL & CONNECT	Status
START-UP & OPERATION	Routing
TECHNICAL DATA	GPOs
	VersaPower
	Groups
	Player
	Panels
	APP

Preset selection

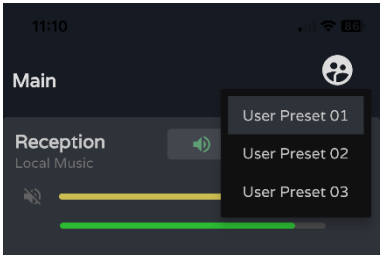


Presets available on the panel.

The playlists and the list of available presets is not exclusive to the user. The same lists are available to any user with access to the panel.


If exclusive access to playlists and presets is required for certain users, duplicate an existing panel and enable both options.

10.4 My Panels

List of panels available to the user.

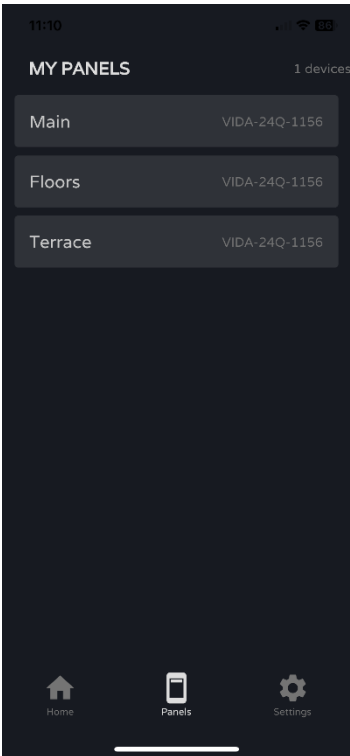


- Click to select a panel.
- Name of the user panel.
- Device containing the panel. If the user has panels on several VIDA devices, they are all listed here, regardless of the device.

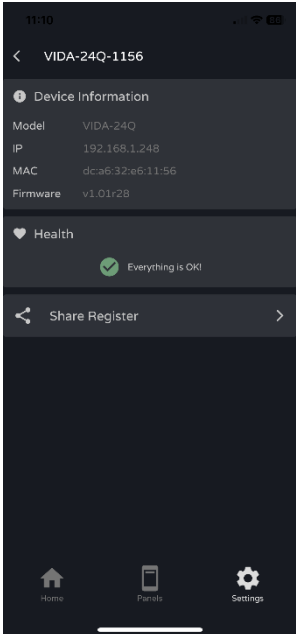

Device information:

- **Important device information.**
- **Health:** shows the **health status** of the device.
- **Share Log:** share the daily log for the device. Copies lines from the daily log to the clipboard for sharing in applications such as an email manager.


UI Scale

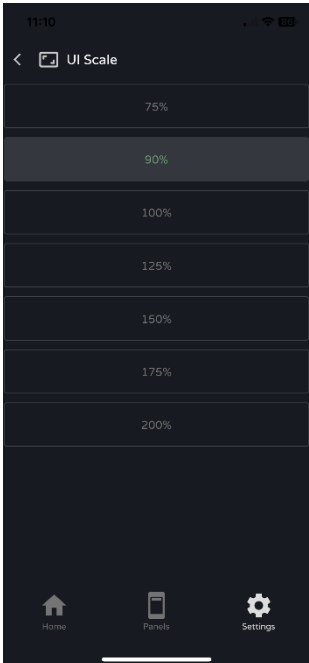

Set the display size for the GUI.

Home		Web GUI	
Web GUI	Home & Updates	Settings	Status
Routing	GPOs	VersaPower	Groups
Player	Panels	APP	
TP-NET Protocol			
TECHNICAL DATA	START-UP & OPERATION	Register	Users
INSTALL & CONNECT	PANEL FUNCTIONS	Events	Processing
DESCRIPTION & FEATURES	PACKAGE CONTENTS	EQ	Inputs / Outputs Setup
WARRANTY & ENVIRONMENT	Navigation	Login	Routing
PRECAUTIONS	Web GUI Connection	Web GUI	Web GUI


Support

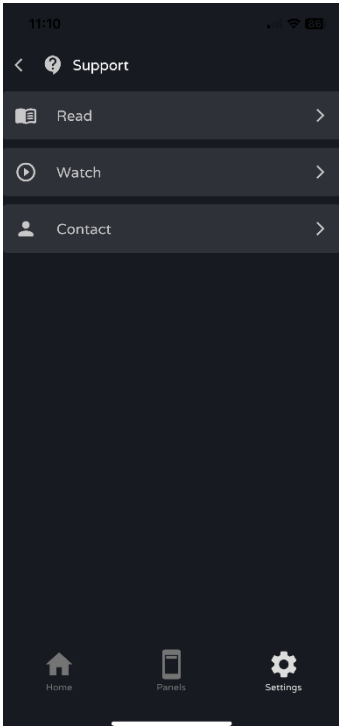

Useful links:

- **Read:** VIDA amplifier documentation.
- **Watch:** link to VIDA's YouTube page. Contains training and promotional videos.
- **Contact:** Ecler Technical Support contact form.

About

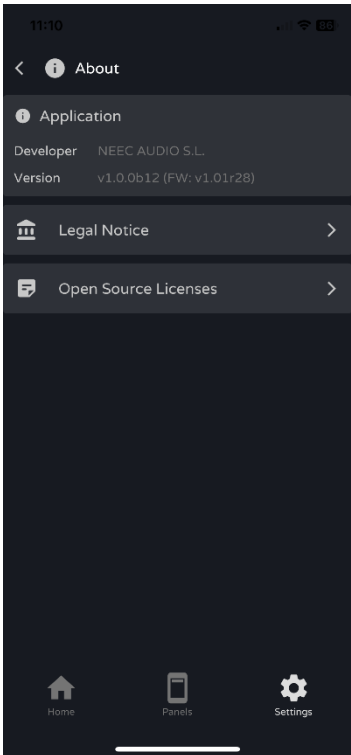

Displays **information** related to the **app**:

- **Version**
- **Privacy Policy**
- **Open source licences.**

Home	
HW	Web GUI
PRECAUTIONS	WebGUI Connection
WARRANTY & ENVIRONMENT	Login
PACKAGE CONTENTS	Navigation
DESCRIPTION & FEATURES	EQ
PANEL FUNCTIONS	Inputs / Outputs Setup
INSTALL & CONNECT	Processing
START-UP & OPERATION	Events
TECHNICAL DATA	Users
	Register
	TP-NET Protocol
	APP

11. TP-NET PROTOCOL

11.1 Introduction TP-NET Protocol

The **TP-NET protocol** allows a client machine (or control device) to query and modify various internal parameters.

Communication with such devices can be done over Ethernet and using the UDP/IP transport protocol, using UDP registered port **5800**.

The protocol is simple and textual, making it easy to read, write code and modify, and is message-based, with no need for start and end delimiters: each message is implicitly delimited by the size of the UDP packet. The maximum message size is **80 characters**. All texts must be written in capital letters.

To facilitate the processing of messages in control systems such as CRESTRON®, AMX®, RTI®, VITY®, MEDIALON®, etc., the device adds the character **LF (0x0A)** at the end of each message. If the client program does not have time to process the received messages one by one, it can concatenate consecutive messages into a single memory string (buffer) and separate them again later using the **LF** delimiter. The device also allows several messages to be sent in a single data packet and read using the delimiter.

Messages are made up of one or more fields, separated by blanks (= blank space):

<TYPE> [PARAM1] [PARAM2] [PARAM3] [PARAM4][LF]

The first field (**TYPE**) defines the **type of message**, and therefore the number of parameters required below (each type of message requires a certain number of parameters). The **TYPE** field can have the following values:

- **SYSTEM**
- **GET**
- **SET**
- **INC**
- **DEC**
- **Subscribe to**
- **UNSUBSCRIBE**
- **DATA**
- **ERROR**



The **table in the chapter VIDA Parameters** describes the different types of messages and their associated parameters.

SYSTEM, GET, SET, INC, DEC, SUBSCRIBE and **UNSUBSCRIBE** messages can be sent from the client to the device; **DATA** and **ERROR** messages are sent from the device to the client.

SYSTEM PING is the only **SYSTEM** message sent by the device if the optional **PINGPONG** parameter is specified in the client **SYSTEM CONNECT** message.

Communication is initiated when a client sends a **SYSTEM CONNECT** message to the device. As UDP communication is connectionless (unlike TCP communication), the device stores the IP address of the client sending the **SYSTEM CONNECT** message to be used as a destination for the messages generated by the device itself (**DATA** and **ERROR**). After receiving a connection message, the device performs a data dump by sending all implemented **DATA** values one by one.

 **If the configuration data dump process (usually a huge list of parameters & values) wants to be avoided after a SYSTEM CONNECT message, a SYSTEM CONNECT ONCE message can be used instead.**

Communication can be terminated in two ways:

- **Manually:** when the client sends the **SYSTEM DISCONNECT** message , which cancels all subscriptions and stops the sending of **DATA** and **ERROR**
- **Automatically:** if in the initial **SYSTEM CONNECT** message the optional parameter **PINGPONG** was specified and the client has not received **SYSTEM PONG** messages for a period over 10 seconds (assumed loss of communication).

SET messages sent by the client have no feedback, i.e. The device does not send a **DATA** message after processing the **SET** message. The client updates the value internally with the data sent to the device and, if necessary, uses a **GET** message to verify that the parameter has been correctly processed in the device.

- Numerical values are always unsigned whole numbers (positive numbers without decimals).
- **[PINGPONG]** is an optional parameter used to configure communication with the client so that it is possible to determine whether either party has terminated communication. When configured in this way, the device sends a **SYSTEM PING** message periodically (once every second) to the client, which must reply with a **SYSTEM PONG** message. If either party does not receive the relevant message within 10 seconds, communication is deemed to have been terminated.
- **[ONCE]** is an optional parameter used to start the device-client communication without a full data dump process (usually a huge list of parameters & values).
- **<Input Channel>** and **<Output Channel>** are numeric values that identify an input or output channel on the device.
- **<Preset Number>** is a numeric value that identifies one of the Presets available in the device's memory.

- **<Level>**, **<Pre VUmeter Level>** and **<Post VUmeter Level>** are numerical values in the range [0-100] which define values on a scale equivalent to [-inf-0] in dB
- **<GPI>** and **<GPO>** are numeric values in the range [1-8].
- **<GPI Value>** is a numeric value in the range [0-100] that indicates the value of an analogue input. If the input is digital, the two possible values are 0 and 100.
- **<GPO Value>** is a numeric value in the range [0-1], i.e. it can only take the value 0 or 1 (relay contact open or closed).
- **<Rate>** is a numeric value in the range [1-10] that specifies the frequency of sending VU meters to the client, in number per second (default = 3).
- **"<Device Name>"** indicates the device name in double quotes to allow for names with spaces.
- **<Error ID>** is a numeric value encoding a type of error.
- **"<Error Description>"** is a text string enclosed in double quotes containing a description of the error.

11.2 VIDA Parameters

Communication between client and device **is established with an initial [SYSTEM CONNECT](#) or [SYSTEM CONNECT ONCE](#) message**. If not, commands from the client to the device will be ignored by the device. See the chapter TP-NET Protocol Introduction for more information.

! The **INC** and **DEC** commands generate a **DATA** command response from the device, containing the resulting LEVEL value, incremented or decremented. Nothing is sent to the connection making the **INC** or **DEC** and **SET** type messages sent by the client have no feedback.

TYPE	PARAM1	PARAM2	PARAM3	PARAM4	DESCRIPTION
DEVICE					
SYSTEM					
	CONNECT	[MASTER]	[PINGPONG]	[ONCE]	• MASTER: this parameter, applied in SYSTEM CONNECT, is used to disconnect all clients currently connected to the device, releasing all open and not correctly closed connections, opening a new connection. In this way we guarantee that the client that has set the MASTER option is the only one connected by TP-NET to the device. • PINGPONG: this parameter can be used with the MASTER parameter, the difference is that this parameter performs a periodic check to see if the communication is still open (PING PONG) or if after 10 seconds with no response, the communication has ended (PING). • ONCE: this parameter is used to prevent the device status dump.

	DISCONNECT				Cancel subscriptions and terminates communication
	SUBSCRIPTION_RATE	<Rate>			Times per second for subscriptions refresh (1-10)
	PING				Alive message from device
	PONG				Alive ACK message from client
	PING_INTERVAL	<1-1000>			Ping Interval, in seconds
GET					
	ALL				Dumps current device status (with DATA messages)
	POWER				Gets the Device RUNNING/SLEEP status
	PRESET				Gets the current PRESET
	SLEVEL	<Source>			Gets the current LEVEL of an audio Source
	OLEVEL / CHAN_VOL	<Output Channel>			Gets the current LEVEL of an Output Channel (Main:1~4, Aux: 5~6, Digital: 7~10)
	XLEVEL	<Source>	<Output Channel>		Gets the current LEVEL of a Matrix point
	GLEVEL	<Loc/Net/Gen>	<Group>		Gets the current LEVEL of a Group
	SMUTE	<Source>			Gets the current MUTE Status of an audio Source
	OMUTE	<Output Channel>			Gets the current MUTE status of an Output Channel
	XMUTE	<Source>	<Output Channel>		Gets the current MUTE status of a Matrix Point
	GMUTE	<Loc/Net/Gen>	<Group>		Gets the current MUTE of a Group
	ZONERIN	<Output>			Gets zoner replica for given Output (1~4=Main, 5,6=Aux, 7~10=Digital). For main outputs, can be S1~4, for Aux outputs, can be S1~4 and also O1~4 (Main output 1~4), for Digital outputs can be S1~4, O1~4 and also A1~2 (Aux out 1~2)
	GROUPIN	<Group>			Gets zoner replica for given Group (1~4=Local Group)
	SVU	<Source>			Gets the VU-meter value of an audio Source
	OVU	<Output Channel>			Gets the VU-meter value of an Output Channel
	ALARM_PROTECT	<Output Channel>			Gets the Protect alarm status of an Output Channel
	ALARM_FAULT	<Output Channel>			Gets the self-diagnosis system alarm status of an Output Channel
	GPI	<Input>			Gets the current value of a General Purpose Input
	GPO	<Output>			Gets the current value of a General Purpose Output
	EXTMUTE				Gets the current value of the External Mute Input
	INFO_NAME				Gets the Device Name
	INFO_MODEL				Gets the Device Model
	INFO_VERSION				Gets the Firmware Version
	INFO_MAC	<NET1/NET2>			Gets the Device MAC address for NET1 or NET2 Ethernet interface
	IP_CONFIG	<NET1/NET2>			Gets NET1/2 ethernet interface addresses info
	INFO_IPLIST				Gets list of registered TP-Net clients
	Z_MONITOR	<Output Channel>			Gets Impedance monitor status of an Output Channel

SET					
	POWER	ON/OFF			Sets the Device Power status (Running / Sleeping)
	PRESET	<Preset Number>			Sets the current PRESET (0-10) 0=factory, 1-10=User
	SLEVEL	<Source>	<Level>		Sets the current LEVEL of an audio Source
	OLEVEL	<Output Channel>	<Level>		Sets the current LEVEL of an Output Channel (Main:1~4, Aux: 5,6, Digital: 7~10)
	XLEVEL	<Source>	<Output Channel>	<Level>	Sets the current LEVEL of a Matrix point
	GLEVEL	<Loc/Net/Gen>	<Group>	<Level>	Sets the current LEVEL of a Group
	SMUTE	<Source>	YES/NO/TOGGLE		Sets the current MUTE Status of an audio Source
	OMUTE	<Output>	YES/NO/TOGGLE		Sets the current MUTE status of an Output Channel
	XMUTE	<Input Channel> <Source>	<Output Channel>	YES/NO/TOGGLE	Sets the current MUTE status of a Matrix Point
	GMUTE	<Loc/Net/Gen>	<Group>	YES/NO/TOGGLE	Gets the current MUTE of a Group
	ZONERIN	<Output>	<Source> or <Output> or <Aux>		Sets zoner replica for given Output (1~4=Main, 5,6=Aux, 7~10=Digital). For main outputs, can be S1~4, for Aux outputs, can be S1~4 and also O1~4 (Main output 1~4), for Digital outputs can be S1~4, O1~4 and also A1~2 (Aux out 1~2)
	GROUPIN	<Group>	<Source>		Sets zoner replica for given Group (1~4=Local Group)
	GPO	<Output>	YES/NO		Sets the current value for a General Purpose Output
INC					
	SLEVEL	<Source>	<Value>		Increases the current LEVEL of an audio Source by Value (Value can range from ± 1 to ± 100)
	OLEVEL	<Output Channel>	<Value>		Increases the current LEVEL of an Output Channel by Value (Value can range from ± 1 to ± 100) (Channel is Main:1~4, Aux: 4,5, Digital: 6~10)
	XLEVEL	<Input Channel> <Source>	<Output Channel>	<Value>	Increases the current LEVEL of a Matrix point by Value (Value can range from ± 1 to ± 100)
	GLEVEL	<Loc/Net/Gen>	<Group>		Increases the current LEVEL of a Group by Value (Value can range from ± 1 to ± 100)
DEC					
	SLEVEL	<Source>	<Value>		Decreases the current LEVEL of an audio Source by Value (Value can range from ± 1 to ± 100)
	OLEVEL	<Output Channel>	<Value>		Decreases the current LEVEL of an Output Channel by Value (Value can range from ± 1 to ± 100) (Channel is Main:1~4, Aux: 4,5, Digital: 6~10)
	XLEVEL	<Source>	<Output Channel>	<Value>	Decreases the current LEVEL of a Matrix point by Value (Value can range from ± 1 to ± 100)
	GLEVEL	<Loc/Net/Gen>	<Group>		Decreases the current LEVEL of a Group by Value (Value can range from ± 1 to ± 100)
SUBSCRIBE					

	ALL				Subscribes to all VU-meters
	SVU	<Source>			Subscribes to an audio Source VU-meter
	OVU	<Output Channel>			Subscribes to an Output Channel VU-meter
UNSUBSCRIBE					
	ALL				Unsubscribe to all VU-meters
	SVU	<Source>			Unsubscribes to an audio Source VU-meter
	OVU	<Output Channel>			Unsubscribe to an Output Channel VU-meter
DATA					
	POWER	RUNNING / SLEEPING			Shows the Device Power status
	PRESET	<Preset Number>			Shows the current PRESET
	SLEVEL	<Source>	<Level>		Shows the current LEVEL of an audio Source
	OLEVEL	<Output Channel>	<Level>		Shows the current LEVEL of an Output Channel (Main:1~4, Aux: 4,5, Digital: 6~10)
	XLEVEL	<Source>	<Output Channel>	<Level>	Shows the current LEVEL of a Matrix point
	GLEVEL	<Loc/Net/Gen>	<Group>		Shows the current LEVEL of a Group
	SMUTE	<Source>	YES/NO		Shows the current MUTE status of an audio Source
	OMUTE	<Output Channel>	YES/NO		Shows the current MUTE status of an Output Channel
	XMUTE	<Input Channel> <Source>	<Output Channel>	YES/NO	Shows the current MUTE status of a Matrix point
	GMUTE	<Loc/Net/Gen>	<Group>		Shows the current MUTE of a Group
	ZONERIN	<Output>	<Source> or <Output> or <Aux>		Shows current zoner replica for given Output (1~4=Main, 5,6=Aux, 7~10=Digital). For main outputs, can be S1~4, for Aux outputs, can be S1~4 and also O1~4 (Main output 1~4), for Digital outputs can be S1~4, O1~4 and also A1~2 (Aux out 1~2)
	GROUPIN	<Group>	<Source>		Shows current zoner replica for given Group (1~4=Local Group)
	SVU	<Source>	<Post Vumeter Level_Left>	<Post Vumeter Level_Right>	Shows the VU-meter value of an audio Source
	OVU	<Output Channel>	<Post Vumeter Level>		Shows the VU-meter value of an Output Channel
	GPI	<Input>	<GPI Value>		Shows the current value of a General Purpose Input
	GPO	<Output>	<GPO Value>		Shows the current value of a General Purpose Output.
	EXTMUTE				Shows the current value for External Mute
	ALARM_PROTECT	<Output Channel>	ON/OFF		Shows the Protect alarm status of an Output Channel
	ALARM_FAULT	<Output Channel>	ON/OFF		Shows the self-diagnosis system alarm status of an Output Channel
	INFO_NAME	"<Device Name>"			Shows the Device Name
	INFO_MODEL	<Device Model>			Shows the Device Model
	INFO_VERSION	<Firmware Version>			Shows the Firmware Version
	INFO_MAC	<NET1/NET2>			Shows the Device MAC address for NET1 or NET2 Ethernet interface
	Z_MONITOR	<Output Channel>	<Error Code>		
Z_MONITOR ERROR CODES					

	0	Z IN RANGE			
	1	Z ABOVE Z-MAX THRESHOLD			
	2	Z BELOW Z-MIN THRESHOLD			
	3	SHORT-CIRCUIT (PROTECTION ON)			
	4	OPEN- CIRCUIT			
ERROR					
	0	TPNET_ERROR_NONE			
	1	TPNET_ERROR_INVALID_FIELD_TYPE			
	2	TPNET_ERROR_INVALID_FIELD_PARAM1			
	3	TPNET_ERROR_INVALID_FIELD_PARAM2			
	4	TPNET_ERROR_INVALID_FIELD_PARAM3			
	7	TPNET_ERROR_TIMEOUT_PONG			
	9	TPNET_ERROR_DISCONNECT_WHILE_UNCONNECTED			
	10	TPNET_ERROR_INVALID_CLIENT_IP			
	11	TPNET_ERROR_MESSAGE_TOO_LONG			
	12	TPNET_ERROR_UNSUPPORTED_MESSAGE			
	13	TPNET_ERROR_INVALID_RATE_VALUE			
	14	TPNET_ERROR_MAX_CLIENTS_REACHED			
	15	TPNET_ERROR_MASTER_MODE			
PLAYER					
GET					
	PLAYER_MUTE				Gets the MUTE status of PLAYER
	PLAYER_VOLUME				Gets the VOLUME level of PLAYER
	PLAYER_VUMETERS				Gets the VUMETERS level of PLAYER
	PLAYER_TIME				Gets PLAYER elapsed, remaining and total time of the current media playback
	PLAYER_CONTROL				Gets PLAYER A or B current playback status: PLAY/PAUSE
	PLAYER_PLAYLIST_NAME				Gets PLAYER loaded playlist name (alias)
	PLAYER_QUEUE_INFO				Gets PLAYER current playback queue position (index) and total number of items in it (count)
	PLAYER_PLAY_MODE				Gets PLAYER current playback order mode
	PLAYER_REPEAT_MODE				Gets PLAYER current playback repeat mode
	PLAYER_FADE_MODE				Gets PLAYER current tracks playback transition mode
	PLAYER_ITEM_TAGS				Gets PLAYER current item tags: TITLE, ARTIST, ALBUM
SET					

	PLAYER_MUTE		<YES/NO/TOGGLE>		Sets the MUTE status of PLAYER
	PLAYER_VOLUME		<0..100>		Sets the VOLUME level of PLAYER
	PLAYER_CONTROL		<PLAY/PAUSE/TOGGLE/NEXT/PREV>		Sets PLAYER controls
	PLAYER_PLAYLIST_NAME		<ALIAS>		Sets (loads) PLAYER playlist name (alias)
	PLAYER_PLAY_MODE		<SEQUENTIAL/RANDOM>		Sets PLAYER playback order mode
	PLAYER_REPEAT_MODE		<PLAY_ALL/REPEAT_ALL/REPEAT_ONE>		Sets PLAYER current playback repeat mode
	PLAYER_FADE_MODE		<NONE/XFADE>		Sets PLAYER current tracks playback transition mode
INC					
	PLAYER_VOLUME		<0..100>		INCreases the current VOLUME of a PLAYER, a value from ± 1 to ± 100
DEC					
	PLAYER_VOLUME		<0..100>		DECreases the current VOLUME of a PLAYER, a value from ± 1 to ± 100
SUBSCRIBE					
	PLAYER_ALL				Subscribes to all VU-meters and player times
	PLAYER_VUMETERS				Subscribes to the VUMETERS level of PLAYER
	PLAYER_TIME				Subscribes to the TIME values (elapsed, remaining, total) of PLAYER
UNSUBSCRIBE					
	PLAYER_ALL				Unsubscribes to all VU-meters and player times
	PLAYER_VUMETERS				Unsubscribes to the VUMETERS level of PLAYER
	PLAYER_TIME				Unsubscribes to the TIME values (elapsed, remaining, total) of PLAYER

											
HW	Web GUI										
	Web GUI	Home & Updates	Settings	Status	Routing	GPOs	VersaPower	Groups	Player	Panels	APP
	Web GUI	Connection	Login	Navigation	EQ	Inputs / Outputs Setup	Processing	Events	Users	Register	TP-NET Protocol
	PRECAUTIONS	WARRANTY & ENVIRONMENT	PACKAGE CONTENTS	DESCRIPTION & FEATURES	PANEL FUNCTIONS	INSTALL & CONNECT	START-UP & OPERATION	TECHNICAL DATA			